

Remove both of the **“TRAVEL PINS”**. Failure to remove pins will result in Failure of Bunk Lift System!!!

Remove Bunk Lift Control Unit from Wall

Press & Hold the “Set / Stop” button located on the Rear of the Control Unit. Hold the button until the Green Light Flashes intermittently and the Red Light becomes solid.

Then release the “Set / Stop” Button

Press & Hold down **“Motor 1”** & **“Motor 2”** buttons simultaneously and Run Bunk all the way to Ceiling using the “UP” Button located on the Front Side of the Control Unit

**Note:** There may be very little travel as the bunk may have been in the “UP” position to start

Release **“Motor 1”** & **“Motor 2”** Buttons

Press **“Set / Stop”** Button one time

You should now see a **Solid Green Light** and a **Flashing Red Light** on the Front side of the control panel.

Press & Hold down Motor 1 & 2 buttons simultaneously

Run Bunk All the way to Bottom

Release Motor 1 & 2 Buttons

Press “Set / Stop” Button”

You should now see “5” very quick simultaneous flashes from the RED & GREEN lights.

This series of Flashing Lights indicates that the new programming was accepted!

Re-Install Control Unit & Run Bunk Up & Down