user manual

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Important Warranty Information Regarding Television

Wide screen format LED Displays with aspect ratios of 16:9 (the ratio of the screen width to screen height) are primarily designed to display wide screen format full-motion video. The images displayed on them should primarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature and the images are constantly moving. Displaying stationary graphics and images on screen, such as the dark sidebars on non-expanded standard format television video and programming, should be limited to no more than 5% of the total television viewing per week. Additionally, viewing other stationary images and text such as stock market crawls, vide-game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions. Displaying stationary images that exceed the above guidelines can cause uneven aging of LED Displays that leave subtle, but permanent burned-in ghost images in the LED picture. To avoid this, vary the programming and images, and primarily display full screen movir mages, not stationary patterns or dark bars. On LED models that offer picture sizing features, use these controls to view different formats as a full screen picture. Be careful in the selection and duration of television formats you use for viewing. Uneven LED aging

as a result of format selection and use, as well as burned-in images

are not covered by your Samsung limited warranty.

Avoid displaying still images (such as jpeg picture files) or still image elements (such as TV channel logos, panorama or 4:3 image format, stock or news bars at screen bottom etc.) on the screen. Constant displaying of still


- Avoid displaying the same TV channel for long periods
- Reduce brightness and contrast values to minimum required to achieve desired

Keep the required distances between the product and other objects (e.g. walls) to ensure proper ventilation.

When using a stand or wall-mount, use parts provided by Samsung Electronics only.
 If you use parts provided by another manufacturer, it may result in a problem with the product of an injury due to the product fallow.
 The appearance may differ depending on the product.

Be careful when you contact the TV because some parts can be somewhat hot

Installation with a stand. Installation with a wall-mount.

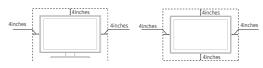

,-----Contact SAMSUNG WORLD WIDE

please contact the SAMSUNG customer care center

Country	CANADA	U.S.A	
Address	Samsung Electronics Canada Inc. 2050 Derry Road West Mississauga, Ontario LSN 0B9 Canada Samsung Electronic 485 Challenger Road Ridgefield Park, NJ 07660		
Customer Care Center 🕿	1-800-SAMSUNG (726-7864)		
Web Site	www.samsung.com/ca/support (English) www.samsung.com/ca_fr/ support (French)	www.samsung.com/us/ support	

© 2016 Samsung Electronics Co., Ltd. All rights reserved

es can cause ghosting of LED screen, which will affect image quality. To reduce risk of this effect, please follow below recommendation

- screen burnout, refer to proper user manual section for details.


Failing to do so may result in fire or a problem with the product due to an increase in

the internal temperature of the product.

If you have any questions or comments relating to Samsung products,

Remote Control


🤏 This remote control has Braille points on the Power, Channel, and Volume buttons and can be used by visually impaired persons

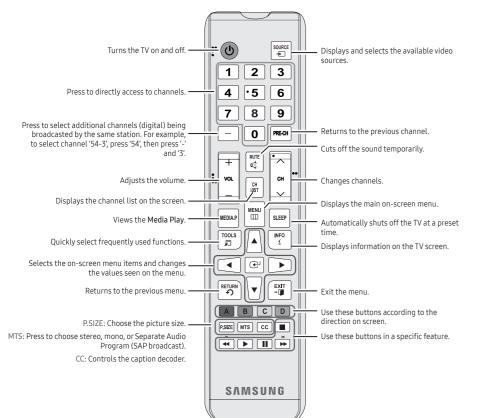

Display Modes (HDMI/DVI Input) Optimal resolution: 1920 x 1080@60Hz

Mode	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H / V)
IBM	720 x 400	31.469	70.087	28.322	-/+
	640 x 480	35.000	66.667	30.240	-/-
MAC	832 x 624	49.726	74.551	57.284	-/-
	1152 x 870	68.681	75.062	100.000	-/-
	640 x 480	31.469	59.940	25.175	-/-
	640 x 480	37.861	72.809	31.500	-/-
	640 x 480	37.500	75.000	31.500	-/-
	800 x 600	37.879	60.317	40.000	+/+
	800 x 600	48.077	72.188	50.000	+/+
	800 x 600	46.875	75.000	49.500	+/+
	1024 x 768	48.363	60.004	65.000	-/-
	1024 x 768	56.476	70.069	75.000	-/-
	1024 x 768	60.023	75.029	78.750	+/+
VESA DMT	1152 x 864	67.500	75.000	108.000	+/+
	1280 x 720	45.000	60.000	74.250	+/+
	1280 x 800	49.702	49.702	83.500	-/+
	1280 x 1024	63.981	60.020	108.000	+/+
	1280 x 1024	79.976	75.025	135.000	+/+
	1366 x 768	47.712	59.790	85.500	+/+
	1440 x 900	55.935	59.887	106.500	-/+
	1600 x 900RB	60.000	60.000	108.000	+/+

Installing batteries (Battery size: AAA)

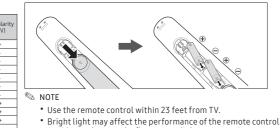

Avoid use when nearby fluorescent lights or neon signs.

• The Color and shape may vary depending on the model.

5003

- Always try to display any image on full screen, use TV set picture format menu for best possible match.
- reduce originess and contrast values to imminimilinequine to achieve despicture quality, exceeded values may speed up the burnout process.
 Frequently use all TV features designed to reduce image retention and

Securing the Installation Space



Country	CANADA	U.S.A	
Address	Samsung Electronics Canada Inc. 2050 Derry Road West Mississauga, Ontario L5N 0B9 Canada	t America, inc.	
Customer Care Center 🕿	1-800-SAMSUNG (726-7864)		
Web Site	www.samsung.com/ca/support (English) www.samsung.com/ca_fr/ support (French)	www.samsung.com/us/ support	

The On Screen Menus

The Main menu gives you access to most or all of the menu options available on your TV. The Tools menus display a selected number of frequently used menu options that change depending on the screen you are viewing. A Tools menu symbol (T) in the lower right side of the screen indicates that a Tools

 Picture Input

Setup

you have selected. For example, if you have selected the HDMI ource, the Channel category will not appear. To see the Channel category, you must first select TV in the Source List.

The Menu options are presented below, arranged by Main menu categories. A Tools button symbol (fools) next to an option name indicates the option is also available in one of the Tools menus.

Mode Tools 和

select your preferred picture mode

- Only available when the TV is connected to a PC.

- Backlight: Adjusts the brightness of the screen by adjusting the brightness of the individual pixels.
- Contrast: Increases or decreases the contrast between dark and light areas of the
- Brightness: Adjusts the brightness of the screen. Not as effective as Backlight.
- Sharpness: Sharpens or dulls the edges of objects.
- the color. Low settings remove color and the picture becomes black, white, and gray.

 Movie: Provides the best sound for movies. ■ Tint (G/R): Adjusts the amount of green and red in the picture. As you increase the Clear Voice: Emphasizes voices over other sounds
- When the TV is connected to a PC, you can only make changes to **Backlight**, Contrast, Brightness, and Sharpness.

Picture Options

Size, and HDMI Black Level.

- Color Tone (Cool / Standard / Warm): Cool makes the nicture bluer (cooler) Warm
- Size. Set the size and aspect ratio of the picture on the screen Your cable box or satellite receiver may have its own set of screen sizes as well.

16:9: Sets the picture to the 16:9 wide screen format.

Wide Fit: Enlarges the aspect ratio of the picture so the picture fits the entire screen. 4:3: Sets the picture to the old, 4:3 format and puts black or gray borders on the right and left of the picture.

on the left, right, and center of the screen in 4:3 format may cause image etention (screen burn) which is not covered by the warranty. If there is no video signal, both the TV's speakers and the external

Warning! Important Safety Instructions

(Please read the Safety Instructions before using your TV.)

Class II product: This symbol indicates that a safety connection to electrical earth (ground) is no

AC voltage: Rated voltage marked with this symbol is AC voltage

DC voltage: Rated voltage marked with this symbol is



Caution. Consult instructions for use: This symbo instructs the user to consult the user manual fo further safety related information.

• The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of this apparatus and to protect it from overheating, these slots and openings must never be blocked or covered. Do not place this apparatus in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided. Do not place this apparatus near or over a radiator or heat register, or where it is exposed to direct sunlight.

- a. Do not place vessels (vases etc.) containing water on this apparatus, as this can result in a fire or electric shock
- Do not expose this apparatus to rain or place it near water (near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.). If this apparatus accidentally gets wet, unplug it and contact an authorized dealer immediately
- This apparatus uses batteries. In your community, there might be environmental regulations that require you to dispose of these batteries properly. Please contact your local authorities for disposal or recycling information. • Do not overload wall outlets, extension cords, or adaptors beyond their capacity, since this can result in fire or electric shock.
- Power-supply cords should be placed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particula attention to cords at the plug end, at wall outlets, and at the point where they exit from the appliance.
- To protect this apparatus from a lightning storm, or when left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power line surges.
- · Before connecting the AC power cord to the DC adaptor outlet, make sure that the voltage designation of the DC adaptor corresponds to the local
- Never insert anything metallic into the open parts of this apparatus. This may cause a danger of electric shock.

• To avoid electric shock, never touch the inside of this apparatus. Only a qualified technician should open this apparatus.

- Be sure to plug in the power cord until it is firmly seated. When unplugging the power cord from a wall outlet, always pull on the power cord's plug. Never unplug it by pulling on the power cord. Do not touch the power cord with wet hands. • If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and
- contact an authorized dealer or service center • Be sure to pull the power plug out of the outlet if the TV is to remain unused or if you are to leave the house for an extended period of time
- (especially when children, elderly, or disabled people will be left alone in the house).

 Accumulated dust can cause an electric shock, an electric leakage, or a fire by causing the power cord to generate sparks and heat or by causing the insulation to deteriorate. · Be sure to contact an authorized Samsung service center for information if you intend to install your TV in a location with heavy dust, high or low temperatures, high humidity, chemical substances, or where it will operate 24 hours a day such as in an airport, a train station, etc. Failure to do
- so may lead to serious damage to your TV. Use only a properly grounded plug and wall outlet.
 An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- To turn off this apparatus completely, disconnect it from the wall outlet. To ensure you can unplug this apparatus quickly if necessary, make sure
- that the wall outlet and power plug are readily accessible. • Store the accessories (batteries, etc.) in a location safely out of the reach of children.
- Do not drop or strike the product. If the product is damaged, disconnect the power cord and contact a Samsung service center. • To clean this apparatus, unplug the power cord from the wall outlet and wipe the product with a soft, dry cloth. Do not use any chemicals such a
- wax, benzene, alcohol, thinners, insecticide, air fresheners, lubricants, or detergents. These chemicals can damage the appearance of the TV or erase the printing on the product.

Important Safety Instructions

maintenance.

RISK OF ELECTRIC SHOCK. DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE

This symbol indicates that high voltage is preser

inside. It is dangerous to make any kind of contac

PARTS INSIDE, REFER ALL SERVICING TO QUALIFIED PERSONNEL

with any internal part of this product

SAMSUNG

- · Do not expose this apparatus to dripping or splashing. Do not dispose of batteries in a fire.
- Do not short-circuit disassemble or overheat the batteries.
- There is danger of an explosion if you replace the batteries used in the remote with the wrong type of battery. Replace only with the same or
- WARNING TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES AND OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES



• Use care when touching the TV after it has been on for some time. Some parts can be warm to the touch.

Your TV has two kinds of menus, the Main menu and the various Tools menus.

- The Main menu has seven primary categories:
- Channel Support
- To view the Main menu, press the MENU button on your remote. To view a Tools menu, press the TOOLS button on your remote.
- Digital Clean View (Off / Low / Medium / High / Auto) : If the broadcast signal The menu options that appear in the Main menu depend on the Source

Picture Menu

- When your TV is connected to a PC, you can only select Entertain and Standard.
- Dynamic: Brightens the screen. Suitable for a bright room.
- Standard: Suitable for normal room brightness ■ Movie: Darkens the screen, making it less glary. Suitable for watching movies in a
- Entertain: Sharpens the picture. Suitable for games.
- Backlight / Contrast / Brightness / Sharpness / Color / Tint (G/R)
- amount of green, the amount of red decreases and vice versa.

nnected to a PC, you can only make changes to the Color Tone,

- Warm is deactivated when the picture mode is set to Dynamic.
- However, we highly recommend you use the TVs 16:9 mode most of the time. Zoom1: Provides moderate magnification of the picture. Sides, top, and bottom are
- Do not watch your TV in the 4:3 format for a long time. The borders displayed

Screen Fit: Displays the full image without any cut-off when your TV is inputting HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) HD

- MD (High Definition) has a 16:9 aspect ratio and 1080i/1080p (1920x1080) or 720p (1280x720) resolution
- 🛇 You can adjust and store settings for each external device you have connected to an input on the TV. Picture Sizes available by Input
- Custom: Magnifies or shrinks 16:9 pictures vertically and/or horizontally. A magnified or shrunk picture can be moved left, right, up, and down.
- 16:9, Zoom1, Zoom2, 4:3 ATV, AV, Component (480i, 480p) DTV (1080i, 1080p), Component (1080i. 16:9, Wide Fit. 4:3, Screen 1080p), HDMI (720p, 1080i, 1080p)
- received by your TV is weak, you can activate the Digital Clean View feature to reduce any static and ghosting that may appear on the screen. When the signal is weak, try all the Digital Clean View options until the TV displays the best picture.
- HDMI Black Level (Normal / Low): For HDMI signals, select the black level to adjust the screen depth. Low make blacks look darker Available only in HDMI mode (RGB signals). ■ Film Mode (Off / Auto1 / Auto2): Sets the TV to automatically sense and process film signals from all sources and adjusts the picture for optimum quality
- Available in ATV, DTV (interlace), AV, COMPONENT (480i / 1080i) and HDMI (480i / 1080i) ■ Motion Lighting (Off / On): When on, the TV automatically dims the screen's I motion Lighting (OT / OH): When this, the I valudinated with steelers is backlights when full brightness is not needed - for example when the TV is displaying dark scenes - to reduce power consumption. The backlights are

returned to full brightness when the TV displays bright scenes Picture Off

The screen is turned off but the sound remains on. Press any button except

■ Picture Reset (Reset Picture Mode/Cancel): Resets the picture settings to

- Mode Tools₁
- Standard: Selects the normal sound mode. ■ Color: Adjusts the color saturation. The higher the Color setting, the more intense ■ Music: Emphasizes music over voices.

■ Balance L/R: Adjusts the balance between the right and left speaker. ■ 100Hz / 300Hz / 1kHz / 3kHz / 10kHz (Bandwidth Adjustment): Adjusts the

Available in Standard sound mode only.

Equalizer

loudness of specific bandwidth frequencies. ■ Reset: Resets the equalizer to its default settings Auto Volume

Automatically adjusts the volume level when you change video sources or content so the level remains the same.

speakers will be mute.

Speaker Select If you are listening to the sound track of a broadcast or movie through an external receiver, you may hear a sound echo caused by the difference in decoding speed between the TV's speakers and the speakers attached to your udio receiver. If this occurs, set the TV to External Speaker.

Zoom2: Provides larger magnification of the picture. Sides, top, and bottom are cut off. When you set Speaker Select to External Speaker, the TV's speakers are turned off. You will hear sound through the external speakers only When you set Speaker Select to TV Speaker both the TV's speakers and the external speakers are on. You will hear sound through both. When Speaker Select is set to External Speaker, the VOLUME and MUTE buttons will not operate and the sound settings will be limited.

Accessories


- Remote Control & Batteries (AAA x 2)
- Warranty Card / Regulatory Guide Cable Holder

Input Cables (Sold Separately)

	Audio Composite (AV)	ComponentCoaxial (RF)	HDMI HDMI-DVI	
--	--------------------------	--	-------------------	--


Power Cord

🖏 Make sure you have the correct cable before plugging it in. Illustrations of common plugs and jacks are shown below.

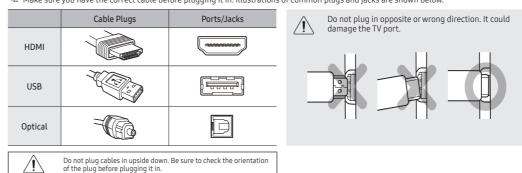

TV Controller (Panel Key)

The TV's Controller, a small joy stick like button on the bottom right side of the TV, lets you control the TV without the remote control

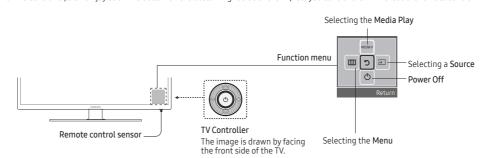

Exits the menu when pressing the controller more than 1 second. When selecting the function by moving the controller to the up/down/left/right directions, be sure not to press the controller. If you press it first, you cannot operate it to move the up/down/left/right directions.

Plug & Play (Initial Setup)

When you turn the TV on for the first time, a sequence of screens and on-screen prompts will assist you in configuring the TV's basic settings Press the POWER button. Plug & Play is available only when the Input source is set to TV. Set the initial setup following instructions that the TV

Connecting the power cord and antenna. (refer to 'Connections')

Preferred Language

Digital channels only.

Digital-TV broadcasts can transmit many audio tracks simultaneously (for xample, simultaneous translations of a program into foreign languages You can only select a language from among the ones being broadcast.

- Multi-Track Sound (MTS) Analog channels only.
- Mono: Select for channels that are broadcasting in mono or if you are
- having difficulty receiving a stereo signal. ■ Stereo: Select for channels that are broadcasting in stereo. ■ SAP: Select to listen to the Separate Audio Program, which is usually a

Depending on the program being broadcast, you can listen to Mono,

- Stereo or SAP. SPDIF Output The SPDIF (Sony Philips Digital InterFace) outputs an uncompressed digital
- audio signal when you connect the digital audio jack on the back of the TV to a digital audio in jack on a receiver or home theater. ■ Audio Format: You can select the Digital Audio output (SPDIF) format. The available Digital Audio output (SPDIF) format may differ depending on the

■ Audio Delay: Lets you correct timing mismatches between the audio trace

output from the TV through an external device such as an AV receive

and the video when you are watching the TV and listening to digital audio

When you select Audio Delay, a slider appears. Use the left and right arrow buttons to adjust the slider. Press ENTER when done (0ms ~ 250ms).

input source.

oreign-language translatio

Visually Impaired (digital channels only

Adds a verbal description to the main audio to help the visually impaired. Dolby Digital Comp

HDMI Audio Format

You can select the HDMI differ depending on the input source. Sound Reset

■ Reset All: Resets all sound settings to the factory defaults.

Channel Menu Memorizing Channels

When you first set up your TV using Plug & Play, the TV memorized the channels that were available over the air or through your cable system and added them to the Channel List. The Antenna and Auto Program functions scribed below let you re-run the channel memorization function without aving to re-run the Plug & Play procedure. Antenna (Air / Cable)

Before your television can memorize the available channels, you must

go on to the Auto Program function. Selecting the signal source using the Antenna function also lines the signal source the TV is tuned to. For example, if you receive your TV signal over the air, and you select Cable, you will see only snow. You must select Air to see a picture.

Auto Program The Auto Program function memorizes all channels that are available over the air or through your cable system and adds them to the Channel List. If you are using a cable or satellite box, you do not need to run the Auto Program function

- To start Auto Program, follow these steps
- Push MENU \longrightarrow Channel \rightarrow Auto Program \rightarrow ENTER \bigcirc on your remote. The Antenna Source screen appears. 2. On the Antenna Source screen, select the source of your TV signal.

If your TV is connected to an antenna choose Air, and then press ENTER . The TV will automatically start memorizing channels.

If your TV is connected to a cable outlet, choose Cable, and then press ENTER **⊡**. Go to Step 3.

If you choose Auto, and then press ENTERE, the TV will automatically

- select the correct Antenna source. Go to Step 3. On the Cable Type screen, use the **◄/▶/▲/▼** buttons to select the type of digital and analog cable systems you have: STD, HRC, or IRC. Most systems ar STD (Standard). When done, select Start, and then press ENTER . The TV will
- Channel memorization can take up to 45 minutes, depending on your cable system.

Memorized channels are added to the Added Channels list. These are the

channels you will see when you use the Channel buttons on your remote

This function filters out scrambled channels after Auto Program is eted. This process may take up to 20~30 minute

pressing the ENTER button.

Clear Scrambled Channel

This function is only available in Cable mode. Managing Channels

Channel List See your list of Added channels. Favorite channels, or channels you've scheduled for viewing. Add or delete Favorite channels, add or delete channels from the Added Channels list, schedule channels or programs for viewing. Watch a channel by selecting the channel in the All Channels, Added Channels, or Favorite Channels screen, pressing the \blacktriangle / \blacktriangledown buttons, and then

Press the ENTER button to stop the Clear Scrambled Channe

- Channel List Screens icons are listed on the left side. Select an icon using the ■ 🍇 All Channels: Shows all currently available channels including those
- Added Channels: Shows all Added Channels. These are the channels that appear when you press the CH butto

u deleted from the Added Channels list.

■ ♥ Favorite Channels: Shows all favorite channels.

- using Timer Viewing.
- Remote control buttons active on the Channel List screen Green (Zoom): Enlarges or shrinks a channel number.
 Yellow (Select): Move the cursor to a channel. Press the Yellow button to select the channel. A ✓ mark appears. Repeat to select additional channels. Then, open the Tools menu and apply a function to the channels you selected. select your TV's signal source, Air (using an antenna) or Cable. Select Menu > Channels > Air or Cable. After you have selected the signal source,

• 📆 (Tools): Displays the Channel List Tools menu. (The Tools menus may differ depending on the situation.) If you use a cable box or satellite box, you cannot use the Channel List

ICONS	Meaning
✓	A selected channel.
₩	A Favorite channel.
©	A reserved program.
Ğ	A program currently being broadcast.

Display Icons Used in the Channel List Screens


• PC/DVI AUDIO IN input is not supported.

date, request an upgrade

- (DVI) port. • If you connect an external device to the TV that uses an older version • Connecting through the HDMI cable may not be supported

 - depending on the PC.
- manufacturer of the device about the HDMI version and, if it is out of If an HDMI to DVI cable is connected to the HDMI IN 2 (DVI) port,
 - the audio does not work.
- Be sure to purchase a certified HDMI cable. Otherwise, the picture may not display or a connection error may occur.

 For Set-top box connection using HDMI cable, we highly recommend you to connect the HDMI IN1 (STB) port.
 - - The side panel may differ depending on the model.

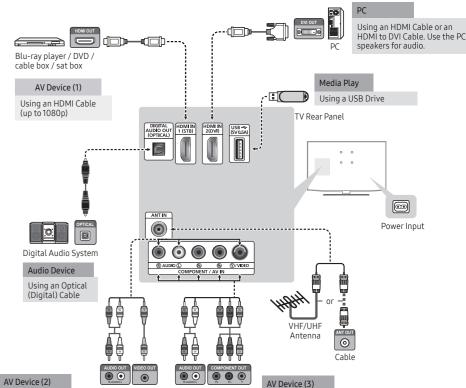

Blu-ray player

Input Menu

1. Press the SOURCE button.

Source List

Using Audio/Video

Use to select TV or other external input sources such as DVD / Blu-ray players / cable box / STB satellite receiver connected to the TV.

Source List, connected inputs are highlighted

☐ The Channel List Tools Menu TOOLS ☐

To add channels to the Added Channels list, follow these steps

The Add menu option only appears for deleted channel

Select Timer Viewing in the Tools menu, and then press the EN

also enter numbers directly using the number keypad on your remote.

For Everyday, the TV will turn on every day, at the time you

If you select **Everyday** or **Every Week**, the date you select in the

you select Once, the TV will turn on once, on the date and time

When you select a digital channel press the ▶ button to view the

■ Channel Name Edit: Analog channels only. Lets you assign a name of up to

Nou can only select Deselect All when one or more channels are

Timer Viewing screen appears.

you selected.

5. Press the ENTER ☑ button on your remote when done.

■ Select All: Select all the channels in the displayed channel list.

■ Auto Program: See Auto Program under Memorizing Channels.

Programmed List (on the Channel List Screen)

■ Deselect All: Deselect all the selected displayed channels.

Only Added Channels can be scheduled.

makes it easier to find and select a channel.

that program directly.

selected.

To add channels to the Favorite Channels list, follow these step

the Added Channels list.

If you have connected a PC to the HDMI IN 2 (DVI) port with an HDMI 2. Select a desired external input source ■ TV / AV / Component / HDMI1 / HDMI2/DVI fou can only choose external devices that are connected to the TV. In the

VCR

next to the name of the input jack it is connected to. For example, if your Blu-ray player is connected to HDMI 2, select Blu-ray player from the drop down next to HDMI 2.

AV Device (3)

Using a Component

cable, you should select PC mode in Edit Name. 🖎 If you have connected a PC to the HDMI IN 2 (DVI) port with an HDMI to DVI cable, you should select DVI PC mode in Edit Name.

Edit Name lets you associate a device name to an input source, making it asier to select a source. To access Edit Name, enter the Input menu, and nen select Edit Name. Select the name of the device from the drop down

If you have connected an AV device to the HDMI IN 2 (DVI) port with

HDMI to DVI cable, you should select DVI mode in Edit Nan

Programmed List Screen Tools Menu TOOLS 和 TOOLS A TOO

- The Channel List Tools menu contains most of the functions you can use on the Change Info: Change the scheduling information for a show or channel you All Channels, Added Channels, and Favorite Channels List screens. To view, select a list screen, select a channel, and then press the TOOLS button. To change the information, follow these steps: ■ Add / Delete: Delete a channel from or add a channel to the Added Channels list.
- Select the Programmed List icon on the left side of the Channel List screen, and then press the ENTER ☐ button.
 On the Programmed List screen, select the show or channel entry you want to change, and then press the TOOLS button. The Tools Menu appears. 1. Select one or more channels in the Added Channels list, follow these steps:
 1. Select one or more channels in the Added Channels list using the ▲/▼
 buttons and the Yellow Select button on your remote.
 2. Press the TOOLS button on your remote.
 3. Select Delete in the Tools menu, and then press the ENTER □ button.
- Viewing screen appears.

 4. Use the 4/▶ buttons to move from entry field to entry field and the ▲/▼ buttons to change the entries. Where numbers are displayed, you can also enter numbers directly using the number keypad on your remote.

 5. Press the ENTERCE button when done. Select one or more channels in the All Channels list using the ▲/▼ buttons and the Yellow Select button on your remote. Press the TOOLS button on your remote. The Tools menu appears. Select Add in the Tools menu, and then press the ENTER button. Cancel Schedules: Cancel a show or channel you have scheduled
- All deleted channels will be shown on the All Channels list. You add channels back to the Added Channels list on the All Channels list. To cancel a scheduled show or channel, follow these steps:
- Select the Programmed List icon on the left side of the Channel List screen, and then press the ENTER button.
 On the Programmed List screen, select the show or channel entry you want to cancel, and then press the TOOLS button. The Tools Menu appears.
 Select Cancel Schedules, and then press the ENTER button. The Cancel Schedules screen appears.
 Select OK, and then press the ENTER button.

 Information: Display the information for a show or channel you have scheduled.
 You can also channel the schedule Information. Add to Favorite/Delete from Favorite: Lets you add channels to and delete channels from your Favorite Channels list. You can also change the schedule Information.
- Select one or more channels in the All Channels list using the ▲/▼
 buttons and the Yellow Select button on your remote.
 Press the TOOLS button on your remote. The Tools menu appears.
 Select Add to Favorite in the Tools menu, and then press the ENTER Select the Programmed List icon on the left side of the Channel List screen, and then press the ENTER button. On the Programmed List screen, select the show or channel entry you want information for, and then press the ENTER button. The Tools Menu appears. Select Information, and then press the ENTER button. The Timer Viewing Inforcemen appears.

Info screen appears. Select Change Info, and then press the ENTER button to change information, or select Close, and then press the ENTER button to close the ■ Select All / Deselect All: You can select or deselect all channels in the channel list.

To schedule a channel, follow these steps: 1. Select a channel in the Added Channels list using the ▲/▼ buttons and Lets you select the channel list displayed when you press the **\CHV** (Channel) button on your remote. For example, if you select Favorite Channels, e Yellow Select button on your remote. ress the TOOLS button on your remote. The Tools menu appears. ress the TOOLS button on your remote and then press the ENTER ...

 Use the ◀/▶ buttons to move from entry field to entry field and the ▲/▼ buttons to change the entries. Where numbers are displayed, you can Analog channels only If the reception is clear, you do not have to fine tune the channel, as this is

Date field becomes the start date for your scheduled viewing. elected, starting from that date. For **Every Week**, the TV will *" on the right-hand side of the channel number in the channel banne turn on every week, on the same day of the week as the start To reset fine-tuning, select the channel, select Fine Tune, and then date you selected, at the time you selected, from that day on. If

your Quick Start Guide

select Reset on the Fine Tune screen.

five characters to an analog channel. For example, Hist, Food, Golf, etc. This ■ Setting the Time

If you disconnect the power cord, you have to set the clock again. To set the clock, follow these steps:

- The DST and Time Zone functions are only available when the Clock
 - Mode is set to Auto.

you will only see Favorite channels when you press the **∧CH∨** button.

done automatically during the search and store operation. If the signal is weak or distorted, fine tune the channel manually. Select the channel, and then select Fine Tune. Fine tuned channels that have been saved are marked with an asterisk

Setup Menu Plug & Play

Language Set the menu language

The time you set will appear when you press the INFO button. ■ Clock: Set the clock so you can use the various timer features of the TV.

The Programmed list displays the channels and programs you have schedule If you selected Auto: for viewing using the Timer Viewing function. You can view, modify, or delete a show you have scheduled using the functions on the Programmed List screen

you selected Auto:

FI will automatically download the correct time from a digital channel.

Select Time Zone, and then press the ENTER ⊕ button. Use the ▲▼
buttons to select your Time Zone, and then press ENTER ⊕.

Select DST (Daylight Savings Time), and then press ENTER €. Select On if you want to turn the DST adjustment on and off manually. Select Off to turn off the DST adjustment. Press ENTER ⊕ when done.

The DST add Time Zone functions reasons well below when the Clark.

To delete channels from the Favorite Channels list, follow these steps:

1. Select one or more channels in the Favorite Channels list using the ▲/▼
buttons and the Yellow Select button on your remote.

2. Press the TOOLS button on your remote. The Tools menu appears.

3. Select Delete from Favorite in the Tools menu, and then press the
ENTERE button.

Improving You can eshadule a channel to be displayed automatically at ■ Timer Viewing: You can schedule a channel to be displayed automatically at Other Channel Menu Functions a set time, even when you are watching another channel. You must set the rent time first in the Time > Clock function to use Timer Viewing. Channel Mode (Added Channels/Favorite Channels)

Scheduled programs and channels are displayed in the **Programmed** Lets you re-run the ${\bf Plug~\&~Play}$ initial setup procedure. For instructions, see digital program list. If you highlight a program in the list, and ther press the ENTER (Schedule) button, you set Timer Viewing for

Choose between English, Español, and Français.

• For the best picture and audio quality, connect digital devices using • For an HDMI to DVI cable connection, you must use the HDMI IN 2 an HDMI cable.

- of HDMI, the video and audio may not work. If this occurs, ask the

If you selected Manual: he Clock Set screen appears. Use the ▲/▼ buttons to change the values in each field or use the number buttons to enter the values directly. Use the **◄/▶** buttons to move from field to field. When done

Available only when Clock Mode is set to Manual ■ Sleep Timer TOOLS 2

Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes).

To cancel the **Sleep Timer**, select **Off**.

Timer1 / Timer 2 / Timer 3

with all the fields, press ENTER E

Turns the TV on and off automatically at times and days you select. You can set three different on/off timer settings. You must set the clock first. On Time / Off Time: Set the hour, minute, am/pm, and Activate/Inactivate fields for the On Time and Off Time. Use the ◄/▶ buttons to move from

field to field. Use the ▲/▼ buttons to change the values in each field. To activate the timer with the setting you have chosen, set the Activate/ Inactivate field to Activate. ■ Volume: Set the desired loudness.

 Contents: To select what will be turned on when the timer setting is activated. You can set the TV to turn on a specific channel or play back contents such as photo or audio files. Use the ◀/▶ buttons to move to the Contents field, and then press the ENTER ☑ button. The Contents screen appears. Use the ◀/▶ buttons to move from field to field. Use the ▲/▼ buttons to change the values in

- TV/USB: Select TV or USB. The USB device must be connected to your TV

- Antenna: Displays the current antenna source, Air or Cable.

- Channel: If you have selected TV, select the desired channel. - Music/Photo: If you have selected USB, follow these steps to select a containing MP3 (Music) or JPEG (Photo) files on the USB device The maximum number of files the TV can display, including sub

folders, in one folder of a USB storage device is 1000. The media may not play smoothly if you use a USB device rated

The media may not play silluounly if you use a USB defect state to lower than USB 2.0.

Use the ◀/▶ buttons to move to the field under Music or the field under Photo, and then press the ENTER ☐ button. The TV displays a single folder (the Root folder) and the type or name of the device.

Press the ENTER ☐ button. A list of folders on the device appears. If there are no folders on your device, press the Yellow select

outton to select the Root folder, and then press the RETURN

button. The Timer screen re-appears.

3. Use the A/▼ buttons to highlight a folder that contains music or photos, and then press the Yellow select button to select the folder.

4. Press the RETURN button. The Timer screen re-appears.

■ Repeat: Select Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun or Manual. If you select Manual, you can select the days you want to activate the timer by using the ◀/▶ buttons to highlight the day, and then pressing the ENTER button. To unselect a day, highlight it, and then press the When you finished making all your selections on the Timer screen, press

either the ENTER

or RETURN button Other Features

Voice Guide (On/Off

You can activate voice guides that describe the menu options aloud to aid the

■ Voice Guide: Enable or disable the Voice Guide feature. Voice Guide is

■ Volume: Set the volume of the voice guide ■ Pitch: Set the pitch of the voice guide

Game Mode (On/Off) When you connect a game console such as a PlayStation™ or Xbox™ to your TV,

ou can enjoy a more realistic gaming experience by turning on the Game Mode Precautions and limitations for game mode:

 Before you disconnect the game console and connect another external device, set Game Mode to Off in the setup menu. • If you display the TV menu in Game Mode, the screen shakes slightly. Game Mode is not available when the input source is set to TV

click on Support, or call Samsung customer service at 1-800-SAMSUNG.

After connecting the game console, set Game Mode to On. You may notice slightly reduced picture quality.

Program Rating Lock

The Program Rating Lock feature lets you block programs you've determined ate for your children based on the program's ratings. To access the Program Rating Lock feature and make any changes, you must enter a PIN (personal identification number). To watch a blocked program, you must also enter the same PIN.

Program Rating Lock is not available in HDMI or Component mode.

The default PIN number of a new TV set is "0-0-0-0". You can set your

own PIN using the Change PIN function How It Works

When you access the Program Rating Lock Menu functions for the first time, the PIN input screen appears. Enter 0-0-0-0. The PIN screen closes and the Program

Rating Lock Menu appears. Every time you access the Program Rating Lock functions, the PIN screen will appear and you must enter a PIN.

When the Rating Lock screen appears, select **Program Rating Lock**, and then press ENTER €. Select On, and then press the ENTER € key again. Depending on what type of programs or movies you want to block, select one of the options on the screen, and then press the ENTER button. The options are listed below ■ TV Parental Guidelines: You can block TV programs based on their ratings This function allows you to control what your children are watching.

MPAA Rating: You can block movies based on their MPAA ratings. The

Motion Picture Association of America (MPAA) has implemented a rating system that provides parents or guardians with advanced information or which films are appropriate for children.

Canadian English: You can block TV programs based on their Anglophone Canadian ratings.
Canadian French: You can block TV programs based on their French Canadian ratings.

Downloadable U.S. Rating: You can use parental restriction information while watching

Locking/Blocking Programs or Movies

You lock or block programs and/or movies in essentially the same way for each option. Each option displays a grid or table. All the tables have ratings listed on the left. The TV Parental Guidelines option also has kinds of content listed across the top: All: Lock all TV ratings. / FV: Fantasy violence / V: Violence / S: Sexual tion / L: Adult Language / D: Sexually Suggestive Dialog. To lock/block movies or shows with certain ratings and/or kinds of content, click the square next to the rating and/or under the kind of content. A lock appears. To unlock/unblock, click the square again. When you click a low rating, all the ratings above it will also display locks. You can also Allow All or Lock All. When done, press the RETURN button on your remote.

■ Change PIN: Select Change PIN and the Change PIN screen appears. Choose any 4 digits for your PIN, and then enter them in the Enter New PIN fields. Re-enter the same 4 digits in the Confirm New PIN fields. When the Change PIN screen disappears, press the OK button. The TV has emorized your new PIN.

If you forget the PIN, press the remote-control buttons in the following sequence, which resets the pin to "0-0-0-0": POWER

 $(off) \rightarrow MUTE \rightarrow 8 \rightarrow 2 \rightarrow 4 \rightarrow POWER (on)$ Caption

■ Caption: You can switch the caption function on or off. If captions are not available, they will not be displayed on the screen The Caption feature does not work in Component or HDMI mode.
 Caption Mode: You can select the desired caption mode.

Default / CC1~CC4 / Text1~Text4: (analog channels only) The Analog Caption function operates in either analog TV channel mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the Analog Caption function may or may not work with digital channels.)

Default / Service1~Service6 / CC1~CC4 / Text1~Text4: (Digital channels only) The Digital otions function works with digital channels. Servicel – 6 may not be available in digital caption mode depending on the broadcast. ■ Digital Caption Options: (Digital channels only)

Size: Options include Default, Small, Standard, and Large, The default is Standard. Fort Style: Options include Default and Styles 0 to 7. The default is Style 0.

Foreground Color: Options include Default, White, Black, Red, Green, Blue, Yellow, lagenta, and Cyan. You can change the color of the letters. The default is White. Background Color: Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta, and Cyan. You can change the background color of the cantions. The default is Black Foreground Opacity: This adjusts the opacity of text. Options include Default,

Transparent, Translucent, Solid, and Flashing.

Background Opacity: This adjusts the opacity of the caption background. Options include Default, Transparent, Translucent, Solid, and Flashing.

Return to Default: This option sets Size, Font Style, Foreground Color, ound Color, Foreground Opacity, and Background Opacity to its default. A Digital Caption Options are available only when you can select Default and Service1 ~ Service6 in Caption Mode.

The Foreground and Background cannot be set to the same color

If the TV seems to have a problem, first review this list of possible problems and solution. If none of these troubleshooting tips apply, visit samsung.com, then

Boot Logo Enable or disable the display of the Samsung logo when you turn on the TV.

Problem	Possible Solution
Flickering and Dimming	If your Samsung Television is flickering or dimming sporadically, you may need to disable some of its energy efficiency features such as the Energy Saving feature. Follow the steps below with your remote to turn these features off or on.
	Energy saving : MENU → Setup → Eco Solution → Energy Saving → Select Settings
Component Connections / Screen Color	If you find that the color on your Samsung television's screen is not correct or black and white, first run a Self Diagnosis Test on the TV to make sure there are no device issues.
	Self Diagnosis : User Menu → Support → Self Diagnosis → Picture Test
	If the test is ok, try making sure;
	Your connections are all consistent. For example, if you've used the AV In jack on your TV, make sure you have used the AV Out jack on your video source.
	Try making sure you have connected to the correct jacks. For example, if you use the Component jacks, labeled Pb, Pr, and Y, to connect your TV and video source, make sure you have connected the blue Pb jack on the video source to the blue Pb jack on the TV, the red Pr jack on the source to the red Pr jack on the TV, etc.
Screen Brightness	If you find that the colors on your Samsung TV are correct but just a little too dark or bright, there are some settings you should check before calling for a repair.
	Backlight, Contrast, Brightness, Sharpness, Color, Tint and so on. Go to "Picture" in the Menu, and then try adjusting these options.
Unwanted Powering off	If your Samsung TV appears to turn off by itself, there may be an issue with either your Timer settings or your Eco friendly No Signal Power Off feature.
	First make sure the Sleep Timer is not accidentally set. The Sleep Timer lets you fall asleep with the TV still on knowing that it will turn off after a certain period of time and not waste energy.
	Sleep Timer : User Menu → Setup → Time → Sleep Timer
	If the Sleep Timer is not activated, you may have engaged the No Signal Power Off or Auto Power Off feature.
	No Signal Power Off: User Menu → Setup → Eco Solution → No Signal Power
	Auto Power Off : User Menu → Setup → Eco Solution → Auto Power Off
Trouble Powering On	Before you turn the TV on, find the red light on the right or left bottom of your TV. Press the power on button on the TV or remote and the light should blink about 5 times before the TV turns on.
	If you find that you are having trouble powering on your Samsung television, there are a number of things to check before making a call to the service department.
	 If you happen to be using the TV as a monitor and the stand-by light only blinks for a few seconds when you press the power button, your PC is in sleep mode. To take your PC out of sleep mode, press a key on your keyboard or move the mouse. Then try turning your TV on.
	If you're sure your power cord, remote control, and PC are functioning properly, you may be having a cable issue. If you have a cable or satellite box, your TV may appear to be off because the cable or satellite box is not outputting a signal. To test the signal output of your cable or satellite box, press the guide or info button on the cable or satellite box remote control. If the screen displays the guide or info data, the problem is caused by the box.
Stand Assembly	If you have any trouble assembling the stand, refer to "Install the Stand" in the Start Up or Stand Installation Guide.
Cannot find a channel	Re-run Plug & Play or run Auto Program. (go to MENU - Channel - Auto Program)
Poor Picture	First, perform the Picture Test and to see if your TV is displaying the test image properly. Go to MENU - Support - Self Diagnosis - Picture Test
	If the test image is properly displayed, the poor picture may be caused by the source or signal.
The TV image does not look as good as it did in the store.	If you have an analog cable/satellite box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality.
	Cable/Satellite subscribers: Try HD channels from the channel line up.
	Air/Cable Antenna connection: Try HD channels after running Auto Program. Mach HB, because the based on the control of SP (Chanded P. Civilia) and the Theories and the control of SP.
	Many HD channels broadcast up scaled SD (Standard Definition) content. The picture quality of up scaled SD content is low. Adjust the Child (Set to be bouisded output peopletion to 1090) or 770.
The picture is distorted has macroblock	Adjust the Cable/Set top box video output resolution to 1080i or 720p. Compression of video contents may cause picture distortion, especially on fast moving pictures such as those in
error, small block, dots, pixelization.	 Compression of video contents may cause picture distortion, especially on last moving pictures such as those in sports and action movies. A weak signal can cause picture distortion. This is not a TV problem.
	Mobile phones used close to the TV (within 3.3ft) may cause noise in the picture on analog and digital channels.
The color is wrong or missing.	If you're using a component connection, make sure the component cables are connected to the correct jacks. Incorrect or loose connections may cause color problems or a blank screen.
There is poor color or brightness.	Adjust the Picture options in the TV menu. (go to Picture Mode / Color / Brightness / Sharpness)
mere is poor color of brightness.	Adjust the Picture options in the TV menu (so to Picture Mode / Cotor / Brightness / Sharpness)

• Adjust the Energy Saving option in the TV menu. (go to MENU - Setup - Eco Solution - Energy Saving)

• Try resetting the picture to the default picture settings. (go to MENU - Picture - Picture Rese

- 13 -

Eco Solution ■ Energy Saving (Off / Low / Medium / High): Lets you adjust the brightness of Play, use the "Empty the Recycle Bin" function on the PC to permanently delete the file.

■ No Signal Power Off (Off / 15 min. / 30 min. / 60 min.): Sets how quickly the TV switches to standby mode, if no picture is being received.

Disabled when an attached PC is in power saving mode.

Auto Power Off (Off / On): When Auto Power Off is set to On, the TV will

Enjoy photos, music, and/or movie files saved on a USB Mass

Connecting a USB Device

Application Menu

1. Turn on your TV. 2. Connect a USB device containing photo, music, and/or movie files to the USB

storage Class (MSC) device.

jack on the back of the TV. A pop up window appears. 3. Press the MEDIA.P button on your remote. The Media Play menu appears.

☐ Using the Media Play Menu

 Press the MENU button. Then, press the ▲ or ▼ button to select Applications on the left, and then press the ENTER button. Press the ▲ or ▼ button to select Media Play (USB), and then press the

3. Press the ◀ or ▶ button to select an icon (Videos, Music, Photos, Settings),

and then press the ENTERCE button.

Media Play might not work properly with unlicensed multimedia files.

Read the list below before using Media Play (USB)

The file system supports FAT16, FAT32, and NTFS.

Certain types of USB Digital camera and audio devices may not be compatible with this TV.

Media Play and Expenses (USB Mass Starson Class (MSC) devices.

 Media Play only supports USB Mass Storage Class (MSC) devices.
 MSC is a Mass Storage Class Bulk-Only Transport device.
 Examples of MSC are Thumb drives and Flash Card Readers.
 Devices should be connected directly to the TV's USB port. USB HDD is not supported. Before connecting your device to the TV, please back up your files to prevent file damage or loss of data. SAMSUNG is not

ponsible for any data file damage or data loss. A USB device that requires high power (more than 0.5A) may not be

 Do not disconnect the USB device while it is loading. • The higher the resolution of the image, the longer it takes to display on the screen. The maximum supported JPEG resolution is 15360 x 8640 pixels.

 If a file is corrupted or the TV does not support the file type, the "Not Supported File Format" message appears. The TV cannot play MP3 files with DRM that have been downloaded from a for-pay site. Digital Rights Management (DRM) is a technology that supports the creation, distribution,

connecting or using a USB device, the device may not be recognized

and management of digital content in an integrated and comprehensive way, including protecting the rights and interests of content providers, preventing illegal copying of contents, and managing billing and settlements.

• PTP (Pier to Pier) devices are not supported.

• If an over-power warning message is displayed while you are

Auto Protection Time

Auto Protection Time (Off / 2 hours / 4 hours / 8 hours / 10 hours): If the screen remains idle with a still image for a certain period of time you define, the screen saver is activated to prevent the formation of ghost images on

There is a dotted line on the edge of

When changing channels, the picture

There is no sound or the sound is too low at maximum volume

The picture is good, but there is no

The speakers are making an

No Picture, No Video

The TV will not turn on

The TV turns off automatically.

The TV is not receiving all channels.

No Caption on digital channels.

The picture is distorted: macroblock, error, small block, dots, pixelization

with Component cable connection

The picture will not display in full

The remote control does not work.

A "Mode Not Supported" message

the volume.

The cable/set top box remote control does not turn the TV on or off, or adjust

The picture is black and white

Sound Problems

• If the TV has no input during the time period set in Auto

Protection Time, the Screen saver will run.

The power-saving mode of some external hard disk drives may be released automatically when your connect them to the TV.

If you use a USB extension cable, the TV may not recognize the USB.

device or may not be able to read the files on the device.

• If a USB device connected to the TV is not recognized, the list of files on the device is corrupted, or a file in the list is not played, connect the USB device to a PC, format the device, and check the

If a file you deleted from the PC is still found when you run Media

The Videos option does not support the scene search and thumbnail functions.
 If the number of files and folders saved on a USB storage device is

some folders may not open.

The maximum displayed number of files, including sub folders, in

The media may not play smoothly if you use a USB device rated lower than USB 2.0.

1.In the Media Play menu, press the ◀ or ▶ button to select Videos, and then

Press the $\blacktriangleleft/\blacktriangleright/\blacktriangle/\blacktriangledown$ buttons to select a video in the file list.

If video time information is unknown, playing time and the

In this mode, you can play movie clips contained in a game, but you cannot play the game itself.

During video playback, you can search using the ◀ and ▶ buttons.

ver approximately 4000, the files and folders may not appear and

Photos only supports the sequential jpeg format.

one folder of a USB storage device is 1000.

progress bar are not displayed.

SubStation Alpha

MPEG-4 Timed text

H.264 BP/ MP/HP

H. 264 BP

Divx 3.11 / 4

/5/6

MPEG4 SP/

Window ledia Vide v9(VC1)

Supported Video Formats

AVI MKV

3GP MOV

VOB PS

Videos

press the ENTER € button.

playing time.

Supported Subtitle Formats

 If the picture size is set to Screen Fit, change it to 16:9 · Change the cable/satellite box resolution • If you are using an AV composite input, connect the video cable (yellow) to the Green jack of Component Input • If the TV is connected to a cable box, reset the cable box. (Disconnect and then reconnect the box's AC cord, and then wait until the cable box reboots. It may take up to 20 minutes. Set the output resolution of the cable box to 1080i or 720p. Perform the **Sound Test** to confirm that your TV audio is properly operating. (go to MENU - Support - Self Diagnosis - Sound Test) If the audio is OK, the sound problem may be caused by the source or signal. Check the volume of the device (Cable/Sat Box, DVD, Blu-ray, etc.) connected to your TV. If you are using an external device, check the device's audio output option Ex. you may need to change your cable box's audio option to HDMI if the box is connected to your TV using an HDMI cable. Reboot the connected device by reconnecting the device's power cable • Check the cable connections. Make sure a video cable is not connected to an audio input. • For Antenna or Cable connections, check the signal information. A weak signal may cause sound distortion • Perform the Sound Test as explained above. • Make sure the AC power cord is securely plugged into the wall outlet and the TV. · Make sure the wall outlet is working. • Try pressing the POWER button on the TV to make sure the problem is not the remote. If the TV turns on, refer to 'Remote control does not work' below Ensure the Sleep Timer is set to Off in the Time menu If your PC is connected to the TV, check your PC power settings Make sure the AC power cord is plugged securely into the wall outlet and the TV. When you are watching TV connected to an antenna or cable connection, the TV will turn off after 10 - 15 minutes Check the cable connections. (Remove and reconnect all cables connected to the TV and external devices). Set your external device's (Cable/Sat Box. DVD. Blu-ray etc.) video outputs to match the connections to the TV nput. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV. Make sure your connected devices are powered on. · Reboot the connected device by unplugging and then reconnecting the device's power cable · Make sure the coaxial cable is connected securely Run Auto Program to add available channels to the channel list Go to MENU - Channel - Auto Program then select Auto and make sure the correct Cable TV signal type is set in the menu. There are 3 options. (STD, HRC and IRC) Verify the antenna is positioned correctly. Check the Caption Setup menu. Try changing Caption Mode Service1 to CC1. • Some channels may not have caption data. • Compression of video contents may cause picture distortion, especially on fast moving pictures such as those in sports and action movies A weak signal can cause picture distortion. This is not a TV problem Purple/green rolling horizontal bars and buzzing noise from the TV speakers

• Remove the left and right audio connections from the set-top-box. If the buzzing stops, this indicates that the set-top-box has a grounding issue. Replace the Component video cables with an HDMI connection.

> • HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents. • Black bars on the top and bottom appear when movies that have aspect ratios different from your TV play on

Program the Cable/Set top box remote control to operate the TV. Refer to the Cable/Set top box user manual for

Check the supported resolution of the TV and adjust the external device's output resolution accordingly. Refer to

• Adjust the picture size option on your external device or change the TV to full screen. Replace the remote control's batteries. Make sure you insert them with the polarity (+/-) correct

Clean the transmission window located on the top of the remote control.

• Try pointing the remote directly at the TV from 5~6 feet away.

resolution settings in this manual.

Other Restrictions

Codecs may not function properly if there is a problem with the content.
 Video content will not play or will not play correctly if there is an error in the

content or container Sound or video may not work if they have bit rates/frame rates above the

If the Index Table contains an error, the Seek (Jump) function will not work.

When the TV is playing video over a network connection, the video may not play smoothly because of data transmission speeds.
 Some USB/digital camera devices may not be compatible with the TV.

When the TV is playing a video at a bit rate of 10 Mbps or higher, the menu screens may be displayed slowly.

Video Decoder Supports up to H.264, Level 4.1

H.264 FMO / ASO / RS, VC1 / AP L4 are not supported.

MC 2 or above is not supported.

Audio Decoder WMA 10 Pro supports up to 5.1 channels. Supports up to the M2 profile. WMA lossless

QCELP and AMR NB/WB are not supported rbis is supported for up to 2 channels

Dolby Digital Plus is supported for up to 5.1 channels. The DTS LBR codec is only available for MKV / MP4 /TS container

Music 1. In the Media Play menu, press the ◀ or ▶ button to select Music, and the press the ENTER **□** button.

 Press the ◀/▶/▲/▼ buttons to select the desired Music in the file list. Press the ENTER € button or ▶ (Play) button.

 During music playback, you can search using the ◀ and ▶ button.
 ◄ (REW) and ► (FF) buttons do not function during play.
 Media Play only displays files with an MP3 or PCM file extension. Other file extensions are not displayed, even if they are sayed on the same USB device

If the sound is abnormal when the TV plays MP3 files, adjust the Equalizer in the Sound menu. (An over-modulated MP3 file may cause a sound problem.)

Photos

Digital LPCM

WMA

IPEG(MP3)

aw, μ-Law)

VP8 1920x1080 6~30 20 Vorbis

1. In the Media Play menu, press the \blacktriangleleft or \blacktriangleright button to select Photos, then Press the **◄/▶/▲/▼** buttons to select a photo in the file list.

• While a photo list is displayed, press the ► (Play) / ENTER 🖃 outton on the remote control to start a slide show. All files in the file list section will be displayed in the slide show

 During the slide show, files are displayed in order.
 During the slide show, you can adjust the slide show speed using (◄◄) (REW) or (►►) (FF) butto

 You can move to other files using ◀ or ▶ button.
 Media Play can play Music files automatically during a Slide Show if Background Music is set to On. You cannot change the Mode in Background Music until the Background Music file has finished loading.

Supported Photo Formats

Image Photo JPEG Other Restrictions

• CMYK, YCCK Color space JPEG are not supported. Playing Multiple Files

■ Playing selected video/music/photo files 1. On the File List screen, highlight a file, and then press the Yellow button on your remote. Repeat Step 1 to select multiple files.

A

 mark appears to the left of the selected files

To cancel a selection, press the Yellow button again.
 To deselect all selected files, press the TOOLS button, select

Deselect All, and then the ENTER

☐ button. 3. Press the TOOLS button, select Play Selected Contents, and then press the

ENTER € button. ■ Playing a video/music/photo folder

1. With the folders on your USB device displayed, use the ◀/▶/▲/▼ buttons to highlight a folder.

Media Play - Additional Functions

■ Videos/Music/Photos Play Option menu

Category	Operation	Videos	Music	Photos
Title	You can select another video file to play directly.	√		
peat Mode	You can play movie and music files repeatedly.	✓	√	
icture Size	You can adjust the picture size to your preference.	✓		
cture Mode	You can adjust the picture setting.	✓		✓
ound Mode	You can adjust the sound setting.	✓	✓	✓
title Settings	You can play the video with Subtitles. This function only works if the subtitles have the same file name as the video.	✓		
idio Format	You can select the digital audio output format.	√		
io Language	You can change the audio language if the video has more than one language.	✓		
Slide Show / t Slide Show	You can start or stop a Slide Show.			~
Show Speed	You can select the slide show speed during the slide show.			✓
ckground Music	You can set and select background music when watching a Slide Show.			~
Zoom	You can zoom into images in full screen mode.			✓
Rotate	You can rotate images in full screen mode.			✓
formation	You can see detailed information about the played file.	✓	✓	✓

Using the Setup Menu

for the TV. If you connect to the DivX web site and register with the 10-digit registration code, you can download the VOD activation file. Once you play it using Media Play, the registration is completed. For more information on DivX® VOD, visit "http://vod.divx.com".

■ DivX® Video On Demand: Shows the registration code authorized

■ Information: Select to view information about the connected USB

☐ Using Sports Mode TOOLS ☐

ns for watching soccer and other

• A (Zoom): Pauses playback and divides the picture into 9 parts. Select a

When Sports Mode is On, the picture and sound modes are set to

Support Menu

Self Diagnosis ■ Picture Test: Use to check for picture problems. If the problem appears in the test picture, select Yes and follow the directions on the screen.

■ Sound Test: Use the built-in melody sound to check for sound problems If the problem occurs during the test, select Yes and follow the directions on the screen.

■ Signal Strength: (Digital channels only) An HD channel's reception quality is either perfect or the channels are unavailable. Adjust your antenna to increase signal strength.

 \blacksquare Reset: Reset all settings to the factory defaults. The PIN input screen appears before the setup screen

Enter your 4-digit PIN. Change the PIN using the Change PIN

Software Upgrade Software Upgrade can be performed by downloading the latest firmware from samsung.com to a USB memory device.

Use Mode

You can turn the TV into a display model for retail environments by setting Use Mode to Store Demo.

For all other uses, select Home Use.

With Store Demo, some functions are disabled, and the TV automatically resets itself after a preset amount of time.

2. Press the TOOLS button, select Play Folder, and then press the ENTER button.

Since the necessary clamps, screws, and string are not supplied, please purchase these additionally.

Drive the screws into the clamps and firmly fasten them onto the wall. Make sure the screws are firmly fixed into the wall.

Remove the screws from the back center of the TV, put the screws

into the clamps, and then fasten the screws onto the TV again.

3. Connect the clamps fixed onto the TV and the clamps fixed onto the wall with a strong cable and then tie the string tightly.

It is safe to connect the string so that the clamps fixed on the wall

are equal to or lower than the clamps fixed on the TV. Untie the string before moving the TV.

Verify all connections are properly secured. Periodically check the connections for any sign of fatigue or failure. If you have any doubt about the security of your connections, contact a professional Install the TV close to the wall so that it does not fall.

Kensington Lock

The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. Refer to the manual provided with the Kensington Lock for additional information

Please find a "冠" icon on the rear of the TV. The Kensington slot is beside the "₪" icon.

The position and color may differ depending on the model Assembling the Cable manager







do not hang over or destabilize the TV; doing so may cause the TV to tip over, resulting in serious injuries or death. Follow all safety precautions provided on the included Safety Flyer. For added stability, install the anti-fall device for safety purposes, as follows. To prevent the TV from falling

Caution: Pulling, pushing, or climbing onto the TV may cause the TV to fall. In particular, ensure that your children

HD Connection Guide

Contact Samsung

Refer to this information when connecting external devices to the TV.

View this information when your TV does not work properly or when you

enters and how to download products and software.

Installing the Wall Mount Kit

Wall Mount Kit Specifications (VESA)

esult in severe personal injury.

LED-TV 40

Securing the TV to the Wall

want to upgrade the software. You can find information regarding our call

The wall mount kit (sold separately) allows you to mount the TV on

nstructions provided with the wall mount items. Contact a technician

for assistance when installing the wall mount bracket. Samsung Electronics is not responsible for any damage to the product or injury

to yourself or others if you elect to install the wall mount on your own

Install your wall mount on a solid wall perpendicular to the floor. When

attaching to other building materials, please contact your nearest dealer. If you install the TV on a ceiling or slanted wall, it may fall and

Standard dimensions for wall mount kits are shown in the table

Do not use screws that do not comply with the VESA standard

Do not use screws that are longer than the standard dimension

• For wall mounts that do not comply with the VESA standard

Do not fasten the screws too firmly. This may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.

Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or the

Product Family TV size in inches VESA screw hole specs (A * B) in millimeters Screw Quantity

200 X 200 M8 4

Do not install your Wall Mount Kit

while your TV is turned on. It may result in personal injury due to electric shock.

consumer fails to follow the product installation instruc

• Do not mount the TV at more than a 15 degree tilt.

Always have two people mount the TV on a wall.

screw specifications, the length of the screws may differ depending on the wall mount specifications.

or do not comply with the VESA standard screw specifications. Screws that are too long may cause damage to the inside of the

When purchasing our wall mount kit, a detailed installation manual and all parts necessary for assembly are provided.

For detailed information on installing the wall mount, see the

The wall mount kit is not supplied, but sold separately

Caption on the TV menu is greyed out. • You cannot select Caption in the TV menu when watching content from a device connected via HDMI or **Specifications** Caption must be activated on the external device -nvironmental There is a plastic smell from the TV. This smell is normal and will dissipate in a few days. Considerations TV Signal Strength is unavailable in the • This function is only available for digital channels received through an Antenna / RF/Coax connection Operating Temperature Operating Humidity TV is tilted to the right or left side. · Remove the stand base from the TV and reassemble it. Storage Temperature Storage Humidity The Channel menu is grey out . The Channel menu is only available when you select the TV source. Model Name Your settings are lost after 30 minutes or every time the TV is turned off. If TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. Please change from Store Demo mode to Home Use mode using the Plug & Play procedure. Press the SOURCE button to select TV Display Resolution mode, go to MENU → Setup → Plug & Play → ENTER Screen Size (Diagonal) You have intermittent loss of audio Check the cable connections and reconnect them. Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible
enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree Dimensions (W x H x D) You see small particles when you look This is part of the product's design and is not a defect closely at the edge of the frame of With stand POP (TV's internal banner ad) appears • Select Home Use under Plug & Play mode. For details, refer to Plug & Play (Initial Setup). 🦠 This TFT LED panel uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or Without Stand dark pixels on the screen. These pixels will have no impact on the performance of the product You can watch detailed troubleshooting videos at www.samsung.com/spsn.

Nou can keep your TV in optimum condition by upgrading it with the latest firmware from the Samsung web site (samsung.com → Support → Downloads). To upgrade, download the firmware to your computer, copy the firmware file to a USB memory stick, insert the USB memory stick into the TV's USB slot, and then select Support > Software Upgrade in the TV's menu. Storage and Maintenance

If a sticker was attached to the TV screen, some debris can remain after you remove the sticker. Please clean it before watching the TV. The exterior and screen of the product can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to



Oo not spray water directly onto the product. se a failure, fire, or electric shock

Some functions and pictures shown in this manual are available on specific models only.



dampened with in a small amount of water. Do not use a flammable liquid (e.g. enzene, thinners) or a cleaning agent.

License



ivX Certified® to play DivX® video up to HD 1080p, including premium DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under licens Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 8,656,183; 8,731,369; RE45,052.


For DTS patents, see http://patents.dts.com, Manufactured under license from DTS Licensing Limited, DTS, the Symbol, & DTS and

the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

This DivX Certified @ device has passed rigorous testing to ensure it plays DivX@ video.
To play purchased DivX movies, first register your device at vod.divx.com. Find your registration code in the DivX VOD section of



For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS in combination with the Symbol, and DTS Studio Sound are registered trademarks or trademarks of DTS, Inc. in the United States and/

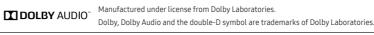

Manufactured under license from Dolby Laboratories The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Open Source License Notice Open Source used in this product can be found on the following webpage. (http://opensource.samsung.com) Open Source License Notice is written only English.

our device setup menu.

50°F to 104°F (10°C to 40°C) 10% to 80%, non-condensing -4°F to 113°F (-20°C to 45°C) 5% to 95%, non-condensing UN40H5003 1920 x 1080 40" Class (16.3:9) (39.5" measured diagonally 10W x 2 36.1 x 20.9 x 3.7 inches (918.0 x 533.2 x 94.0 (mm)) 36.1 x 23.3 x 8.9 inches (918.0 x 592.6 x 227.6 (mm) 16.7 lbs (7.6 Kg) 21.1 lbs (9.6 Kg) With Stand Design and specifications are subject to change without prior notice.

This device is a Class B digital apparatus. For information about your TV's power requirements and more about power consumption, refer to the label attached to the product.

Typical power consumption is measured according to Energy Star Program requirements for televisions Dispose unwanted electronics through an approved recycler. To find the nearest recycling location, go to our website: www.samsung.com/