



TETON HD

KEEP THIS DOCUMENT FOR CUSTOMER

WiFiRANGER™

CONNECT & CONTROL. COMPLETELY.™

▼ QUICK START GUIDE ▼

1. Power up your Teton HD

Find the power switch for your WiFi router then turn it **On**, waiting **5 minutes** for the router to boot up.



Additional Support Resources

Available online at wifiranger.com

Scan QR Code




Quick Start Video

2. Wirelessly connect your device to your Teton HD:

[Pvt.WFR_Teton._____](#)

Note that the **blank spaces** need to be filled in with the **4 unique digits** of your WiFiRanger Teton HD router (shown on the label next to the power switch).

SMARTPHONE VIEW

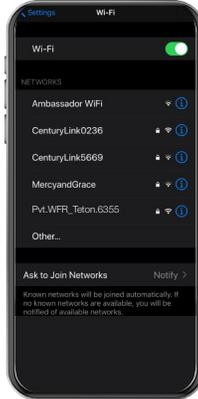


PC VIEW



MAC VIEW



3. Enter Password: [changemenow_____](#)

Enter password in **lower case** with **no spaces**. Note that the **blank spaces** need to be filled in with the **4 unique digits** of your WiFiRanger Teton HD router.

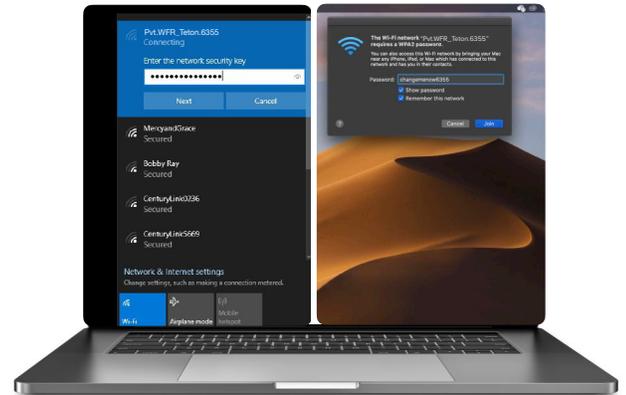

4. Visit and bookmark Control Panel in web browser (i.e. Chrome, Safari, Internet Explorer, Firefox, etc): mywifiranger.com

Alternatively, enter the direct Control Panel address which uses the following format: 10.1____.1:8080

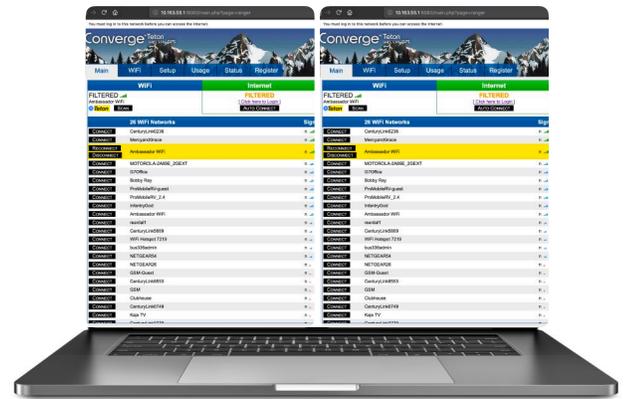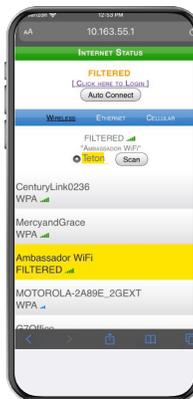

5. Click Connect on WiFi network

For filtered WiFi networks, proceed to the captive portal or login page and enter the necessary credentials or terms of service.

Now enjoy using the internet with boosted WiFi strength and more security!