

WiFiRANGER™

CONNECT & CONTROL. COMPLETELY.™

ADDITIONAL INFORMATION & SUPPORT AT
WiFiRanger.com



Quick Start Guide

1. Power On WiFiRanger Sky™

 
Look for a toggle switch in RV labeled as WiFiRanger Sky. After switching on, the unit will search for an internet signal (2-3 minutes).



Power switches vary in style & location depending on RV manufacturer.


2. Wirelessly connect your smartphone, tablet, or computer to Network: Pvt.WiFiRanger_Sky...

9560 is for example purposes only. Your Network name will have their own unique 4 digits. *Do not look for 9560.*

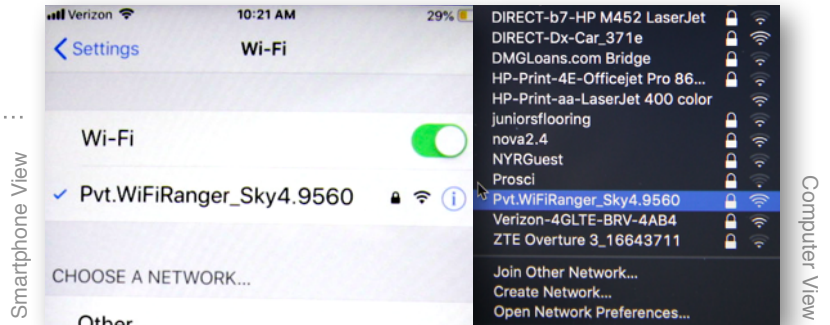


3. Enter Password: changemenowXXYY

 For XXYY values, use the last 4 digits from your unique Network name in Step 2. Remember, your Network name will have their own unique 4 digits. *Do not try to use 9560.*

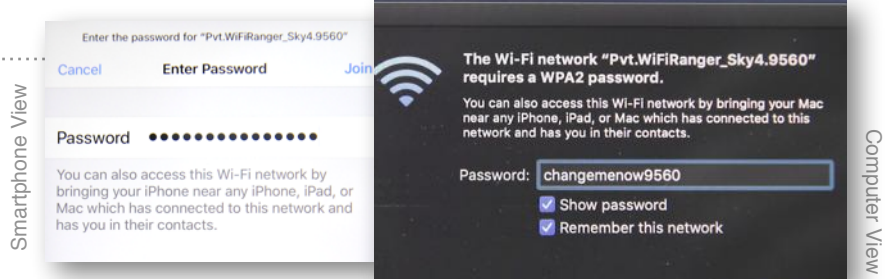

4. Visit 10.1XX.YY.1:8080

 XXYY values are the same as described in Step 3 above. If the above numeric web address does not load in your browser, visit MyWiFiRanger.com.

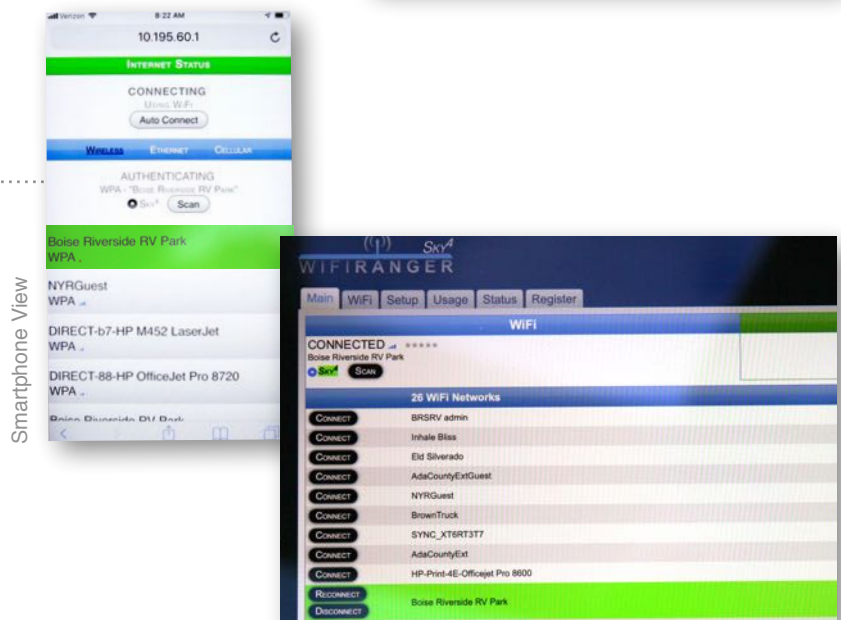

5. Click Scan, then connect to desired network.

The network you select may require a password from network host (e.g. RV Park office, coffee shop employees, etc.)

IMPORTANT!
Keep this Guide for RV Owners