# Riverstone RV - Observation Layout / Installation / Pairing Instructions

# KIT OFFERINGS

## Kit# 1

WVH100PWSIDE: "PREP ONLY"

- 1. WVH100PW x2
- 2. SIDVCMSGP x2 GASKET AND BRACKET ONLY
- 3. CEC CABLES

WOULD NEED TO ADD: WVH100 x2 – WVTX1AP x2 - CAMERA EYE VCMS12CAM – WVOM541AP MONITOR HIDDEN MENU ACCESS AND PAIRING INSTRUCTIONS

### Kit# 2

WVH10012LR: "FULL VIEW"

- 1. WVH100 x2
- 2. VCMS12L/R COMPLETE
- 3. CEC CABLES (S)
- 4. WVOM541AP

WOULD NEED TO ADD TRANSMITTER WVTX1AP x2 FOR SIDE CAMERAS IF THEY WANT THEM TO FUNCTION.

HIDDEN MENU, PAIRING INSTRUCTIONS

### Kit# 3

WVH100PREP: "REAR ONLY" W/ PREP x3

- 1. WVH100
- 2. WVOM541AP
- 3. WVH100PW
- 4. SIDVCMSGP x 2
- 5. CEC CABLES (S)

WOULD NEED WVTX1AP x2 – CAMERA EYE VCMS12CAM x2 – WVH100 x1 FOR END USER MONITOR SECRET MENU, PAIRING INSTRUCTIONS

### **INSTALLATION INSTRUCTIONS**

WIRELESS CAMERA AND WIRELESS CAMERA TRANSMITTER REQUIRE 12VDC POWER AND GROUND

THIS IS TYPICALLY TAKEN FROM THE CLEARANCE LIGHT CIRCUIT. WE RECOMMEND FOLLOWING THE PAIRING INSTURCTIONS BELOW:

\*PLEASE NOTE IF THE CAMERA IS ALREADY INSTALLED AND RECEIVING POWER YOU MUST HAVE A WAY TO INTERUPT POWER TO THE CIRCUIT MOMENTARILY FOR THE CAMERA OR TRANSMITTER TO PAIR WITH THE MONITOR.

### **PAIRING INSTRUCTIONS**

1. ENTER THE MONITORS HIDDEN MENU:

WITH THE POWER OFF, PRESS AND RELEASE THE BRIGHT +, BRIGHT -, & POWER BUTTON QUICKLY



2. SELECT MODE/CH 4 & CONFIRM BY PRESSING THE SELECT/PAIR BUTTON



3. POWER ON MONITOR AND SELECT THE CAMERA INPUT USING THE SELECT/PAIR BUTTON ON THE MONITOR



4. PRESS AND HOLD SELECT/PAIRING BUTTON UNTIL THE MONITOR WILL BEGINS COUNTING DOWN



5. APPLY POWER TO THE CAMERA OR TRANSMITTER AND MONITOR WILL SAVE DATA



AND SHOW THAT IMAGE.



6. MOVE TO CAM2 BY PRESSING THE SELECT/PAIR BUTTON AND FOLLOW THESE STEPS FOR ALL CAMERAS OR TRANSMITTERS BEING PAIRED.

### **TEST FUNCTION**

## **PAIRING SEQUENCE:**

- 1. REAR CAMERA
- 2. OVER DOOR CAMERA
- 3. CURB SIDE TRANSMITTER
- 4. ROADSIDE TRANSMITTER

IF LESS CAMERAS STOP AT YOUR LAST CAMERA.

**PLEASE NOTE**: IF IMAGE DROP OUT OCCURS ON A CONSISTENT BASIS THERE MAY BE A DISTANCE ISSUE, IN THESE CIRCUMSTANCES WE RECOMMEND OUT ANTENNA EXTENSION FOR REAR CAMERA – P/N: WVOSAPANTEXT

**PLEASE NOTE**: IF ANY OF THE CAMERA IMAGES APPEAR REVERSED OR FLIPPED AROUND FOLLOW THESE STEPS: PRESS AND HOLD POWER BUTTON ON MONITOR DOWN FOR 7 SECONDS AND RELEASE, IF THIS IS NOT THE CORRECT IMAGE FOLLOW THE SAME STEPS YOU WILL HAVE 4 TOTAL CONFIGURATIONS.