

# INSTALLATION INSTRUCTIONS

## V4 KEYLESS HANDLE

**RVLOCK**  
INNOVATIVE SECURITY

### Remove Your Existing Handle



1. Latch your RV door in the open position.
2. Remove the 4 screws from the back of your existing handle.
3. Remove the 2 screws from the strike plate on the side of the door.

 
### Install Your Keyless Handle



1. Carefully place all included installation parts on a flat, non-abrasive, easily accessible surface.
2. Gently slide the front of your new handle into the door opening while carefully pulling the wires ahead of the lock. Then, hold the lock in place and attach the new strike plate with the 2 shorter screws.



3. Connect the battery wires. You will hear a confirmation beep when the connection is made. **NOTE:** "ON/OFF" switch does NOT need be in the "ON" position. (This switch only turns on the ability to use a fob/remote)
4. Align and attach the back handle while tucking excess wires into the void. Hold the paddle of the back handle closed while inserting the paddle tooth into the front handle housing.



5. Use a #2 Phillips screwdriver to install the 4 longer screws. Only tighten the screws enough to keep the lock securely against the door.
6. Adjust and straighten the handle in the opening. Once straight, fully tighten the 4 longer screws (be careful not to over tighten).
7. Key in the numeric code and press the "LOCK" button on the keypad (default code: "1234"). Your handle should now be functioning correctly.

**1 2 3 4**  
DEFAULT CODE

—If the handle does not function correctly, press the "CODE RESET" button on the interior handle until you hear a long beep (Approx. 5 seconds). This will reset your keypad code to: "1234".

### **NOTE:**

Do NOT place your mechanical keys inside your trailer. Keep them somewhere outside of the trailer, like a glove box, so they are available if you need them.



If the door is hard to shut or will not shut tight, simply adjust the strike plate on the jamb side of your door.



### Program Your Keypad

1. Write down your “new” code below
2. Hold down the “8” button, simultaneously press the “LOCK” button, then release both. A long confirmation beep signifies that you have entered the programming mode
3. Key in the existing code then press the “LOCK” button (“1234” is the default).
4. Key in your new code, then “LOCK” button.
5. Key in the same new code and again press “LOCK”. A long confirmation beep confirms your new programming.
6. To ensure your new code is working, key in the new code and press the lock or unlock button. The Keypad should confirm the accepted code by actuating the deadbolt.

If programming is unsuccessful, simply press the “CODE RESET” button for 5 seconds on the back handle and repeat step #1.

\* The keypad will time-out at 10 seconds. If you make a mistake, simply start over with step #1.

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
(We recommend 4 to 6 digits)



### Program Your Fob/Remote

1. Turn switch to “ON” at the back of your handle. Then, press and release the “FOB LEARN” button located just above the ON/OFF switch. A short, quick beep will confirm that you have entered programming mode.
2. Press the “LOCK” button on your remote until the handle confirms a sync with a long beep. (May take 2 to 3 clicks).
3. Finally, press the “LOCK/UNLOCK” button to confirm the actuation of the deadbolt on your RVLock handle.

\*If programming did not work, or if you have additional remotes to program, simply repeat steps #1, #2, and #3.

\*Holding down the “LEARN” button for 10 seconds (or until you hear a beep) will remove all previously synced remotes from the handles memory.

#### **NOTE:**

Up to 10 remote fobs can operate the same Keyless Handle. Remote fobs also have the ability to control multiple Keyless Handles.



SEE VIDEO TUTORIALS  
ONLINE AT [RVLOCK.COM](http://RVLOCK.COM)

### Changing Handle Batteries



Remove the 2 screws on the back battery cover next to the “ON/OFF” switch and Install 4 AA alkaline batteries.

\* Fast beeps before the lock actuates means the batteries are low.

\* Changing the batteries on your handle will not change the current code or remote fob programming.

\* To save battery life and avoid handle damage, remove the batteries in the handle when you are not in travel season.