 




ROLLER SHADE ADJUSTMENT INSTRUCTIONS

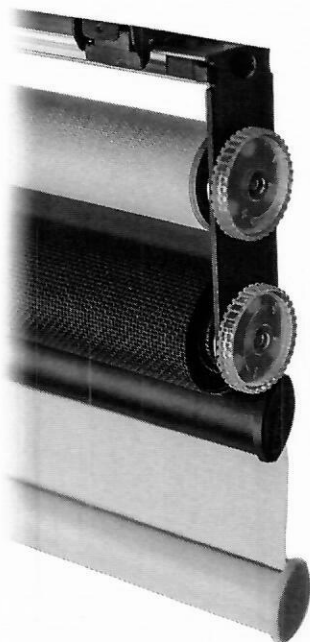 


Upper Stop Adjustment

To lower the upper stopping point, rotate the clear knob clockwise.
To raise the upper stopping point, rotate clear knob counter-clockwise.

Speed Control


To increase the speed of the shade, rotate the black knob clockwise.
To decrease the speed of the shade, rotate the black knob counter-clockwise.

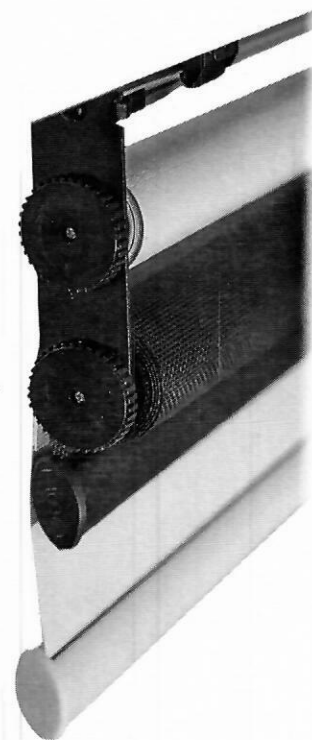


Visit our web page for video instructions and other information on our complete line of quality products at:

www.irvineshadeanddoor.com/support/video-instructions/

 
Fixing an Over-Extended Roller Shade

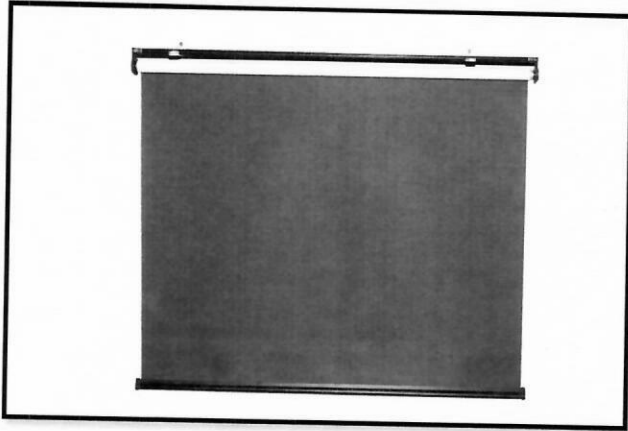

 
Irvine Shade & Door roller shades utilize a smooth-operating tension/speed reduction system. A shade can become over-extended and will not retract. If this occurs, the shade may become stuck in the down position. There is a very simple fix to allow the spring to re-engage and operate normally.

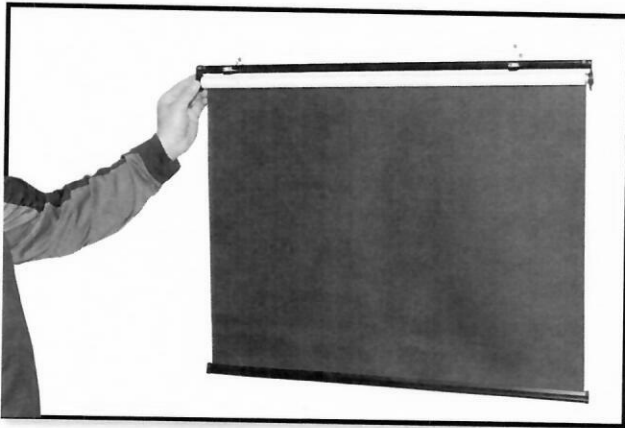

 As you are facing the roller shade in its down position, locate the dial on the left end of the shade tube.

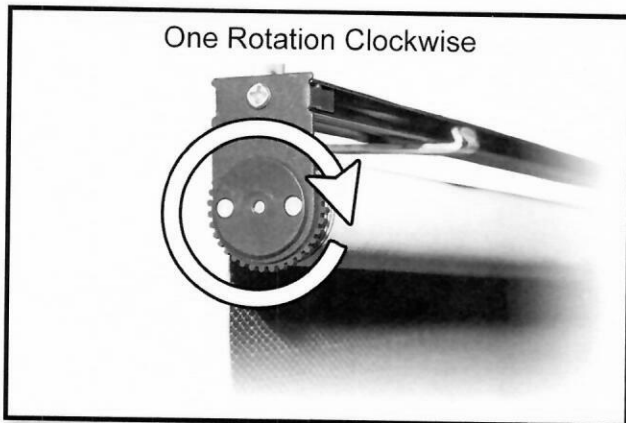

Grasp the dial on the left side and turn the tube 1 complete rotation in the **CLOCKWISE** direction. This will allow 1 layer of material to wrap around the roller tube.

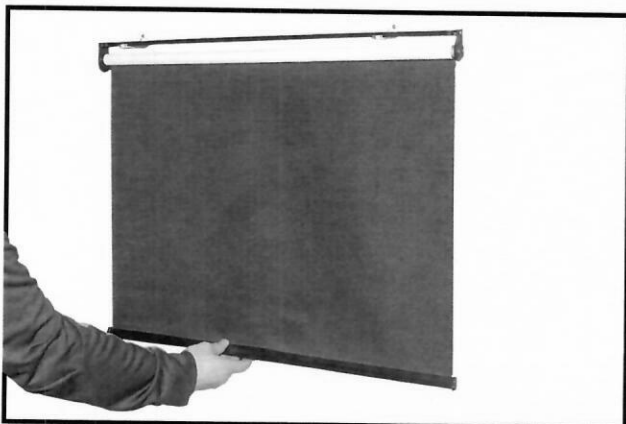

Reactivate the normal spring operation of the roller shade with a firm tug on the bottom rail. The shade will raise into the up position. Your shade will now operate normally.

