



Slow-Rise Day/Nite Roller Shades



Operating Instructions

To Lower Shade:

Slow-Rise Roller Shades can be lowered to any position. To do so, grasp the bottom rail, pull to desired height and let go. The shade will remain in this location.

To Make Shade Rise:

Apply a light, short tug to the bottom rail and let go. The shade will rise smoothly to the upper stop position.

Adjustment Instructions

Upper Stop Position Setting (clear knob):

To lower "stop position," turn clear knob clockwise.
To raise "stop position," turn clear knob counter-clockwise.

Speed Adjustment (black knob):

To make the shade rise faster, turn the black knob clockwise.
To make the shade rise slower, turn the black knob counter-clockwise.



To see video demonstrations of these instructions, go to:
www.youtube.com/user/SlowRiseRollerShades