





Lubrication Instructions

- 1. Fully extend the slide-out room.
- 2. Wipe the TOP of the slide-out arms free of any dirt or debris.
- 3. Apply the lube directly to the top of the slide-out arms. We recommend using a wax based, self-cleaning, lubrication.
- 4. Cycle the room one complete time while spraying the lubrication on/in to the top nylon wear block as needed. (photos on pages 2 & 3)
- 5. Complete step #4 as needed until the slide-out is operating smooth and quietly.









