

***ATTITUDE***

32LS1002

40LS1001

# LED TV USER MANUAL

**IMPORTANT**

Please read this manual carefully before installing and operating the TV

Keep this manual handy for further reference

## TABLE OF CONTENTS

Important Safety Instructions.....	2
Accessories .....	3
Getting Started.....	3
Remote Control.....	4
TV Buttons and Terminal Interface .....	5 - 6
Initial Setup .....	7 - 8
TV Setup.....	9 - 12
Mounting Your TV to the Wall .....	13
Specification.....	13
Troubleshooting Guide .....	14

**SAFETY CLASS: This is an IEC safety class II product.**

## IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions - All the safety and operating instructions should be read before this product is operated.
- Keep these instructions - The safety and operating instructions should be retained for future reference.
- Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions - All operating and use instructions should be followed.
- Do not use this apparatus near water
  - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug the apparatus during lightning storms or when unused for long periods of time.

- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled on it, objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a well-ventilated environment.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus should not be exposed to any dripping or splashing substances.


Objects filled with liquids, such as vases should not be placed on apparatus.


**WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.


**WARNING:** The wall socket plug is used as a disconnect device, the disconnect device should be readily accessible.

**WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



 This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

 This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

## ACCESSORIES

### Please check and identify the supplied accessories.

Remote control .....	x 1
Battery(AAA) .....	x 2
Warranty Card .....	x 1
Instruction Manual .....	x 1

 
## GETTING STARTED

### USING THE REMOTE CONTROL

- Point the remote control at the remote sensor located on the unit.
- When there is a strong ambient light source, the performance of the infrared remote sensor may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 16 feet (5 meters).

### TO INSTALL THE BATTERIES

1. Open the battery door.
2. Insert 2 "A AA" batteries

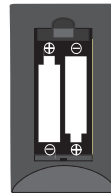

### BATTERY REPLACEMENT

When the batteries become weak, the operating distance of the remote control is greatly reduced and you will need to replace the batteries.

**CAUTION** : Danger of explosion if battery is incorrectly replaced.

### NOTES

- If the remote control is not going to be used for a long time, remove the batteries to avoid damage caused by battery leakage corrosion.
- Do not mix old and new batteries. Do not mix ALKALINE, standard (CARBON-ZINC) or rechargeable (NICKEL-CADMIUM) batteries.
- Always remove batteries as soon as they become weak.
- Weak batteries can leak and severely damage the remote control.

 
**WARNING** :  
Do not dispose batteries in a fire. Batteries may explode or leak.  
Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

### PERSONAL SAFETY NOTICE

- ALWAYS read and follow all instructions for the installation and use of the TV.
- Place the TV in a location that is level and sturdy.
- DO NOT place the TV on furniture with drawers that can be used as steps by small children.
- DO NOT allow children to pull the TV or climb on the furniture where the TV is placed.
- DO NOT allow children to play in front of or around the TV.
- ALWAYS route all the cables connecting to the TV so the cables cannot be easily pulled and grabbed by children.
- When installing the TV on a wall, please purchase a TV mount recommended by a professional TV installer, and follow the installation instructions that come with the TV mount.
- Before installing the TV on a wall, please check to make sure the wall structure can support the weight of the TV and the mount. If in doubt, please ask the advice from a professional TV installer.

## Remote Control


### REMOTE CONTROL

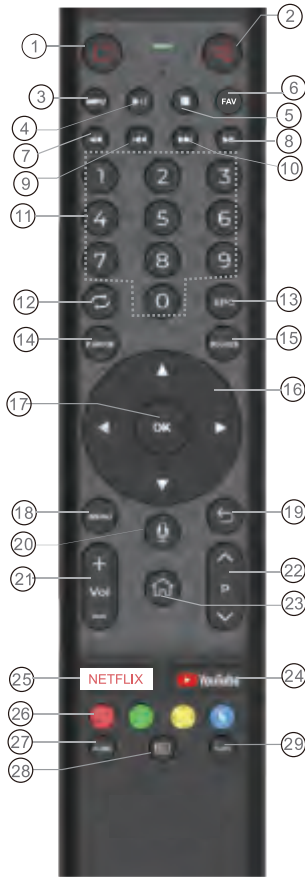

1. **POWER**  
Turns the TV on and off.
2. **MUTE**  
Press this button to mute or restore sound.
3. **INFO**  
Shows the information of the program you are watching.
4. **▶||**  
Press to play or Pause.
5. **■**  
Press to stop and return to the previous folder.
6. **FAV**  
Press the button to show the favorite list.
7. **◀◀**  
Press to rewind or fast forward.
8. **▶▶**  
Press to rewind or fast forward.
9. **◀◀▶▶**  
Press to play the previous or the next selection.
10. **◀◀▶▶**  
Press to play the previous or the next selection.
11. **0-9**  
Allows you to change the channel of the TV.  
Press these buttons to select sound setting for different sound effects.
12. **↺ / ↻**  
Switches back and forth between the current and previous channels. Used for digital channel selection.
13. **EPG**  
Opens the electronic program menu.
14. **P. MODE**  
Selects a picture mode.
15. **SOURCE**  
Selects an input.
16. **UP/DOWN/LEFT/RIGHT**  
Moves the cursor upward/downward/to the left/to the right when making a selection.
17. **OK / Channel List**  
Press to confirm selections on a menu screen.  
In the TV state, when no other operation is performed, press the OK key to display the channel list.
18. **MENU**  
Displays the OSD Menu of the TV.
19. **↶ Back/EXIT**  
Exits the on screen display.
20. **Voice**  
Press this button to perform voice operation.
21. **VOL+/VOL-**  
Increases/Decreases the volume control.
22. **CH+/CH-**  
Skips to the next/previous channel on TV mode.
23. **Home**  
Returns to the Android home page.
24. **YOUTUBE**  
Opens the YouTube application.
25. **NETFLIX**  
Opens the Netflix application.
26. **Color buttons (respectively red, green, yellow and blue)** used in a few sub-menus.
27. **AUDIO**  
Opens the language selection menu.
28. **CC**  
Goes into the CC application menu.
29. **Subtitle**  
Opens subtitles.


## TV BUTTONS AND TERMINAL INTERFACE
 
### FRONT VIEW

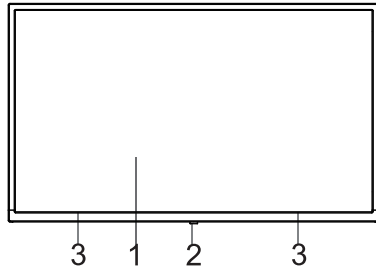


- 1.Color Screen
- 2.Remote Sensor  
(Do not block this sensor or the remote control will not work.)
3. Speakers

### BACK VIEW

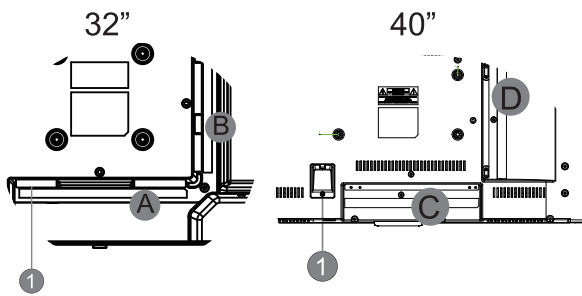 


 1. POWER CORD
2. COAXIAL OUT JACK
3. YPbPr IN / AV IN
4. HEADPHONE JACK
5. ATSC/ATV INPUT
6. NETWORK INPUT
7. PORT1 INPUT
8. PORT2 INPUT
9. VIDEO INPUT AUDIO INPUT
10. USB JACK(V.2.0/5V/500MA/MAX.1TB)
11. USB JACK(V.2.0/5V/500MA/MAX.1TB)


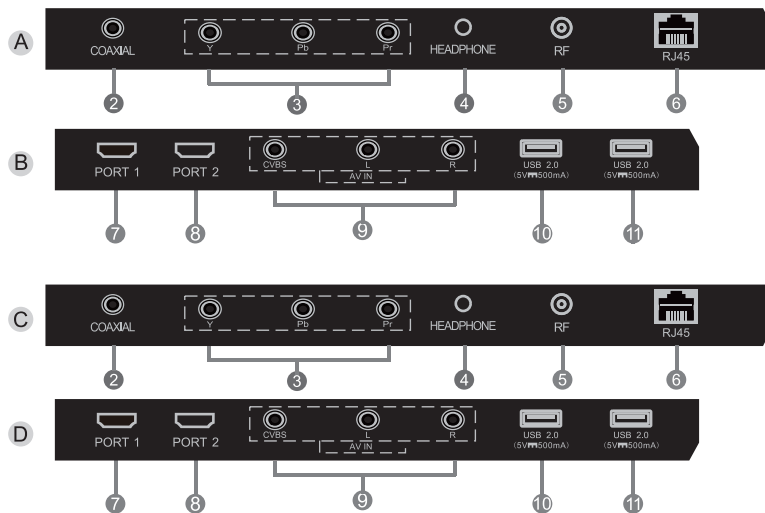


## TV BUTTONS AND TERMINAL INTERFACE

 32"

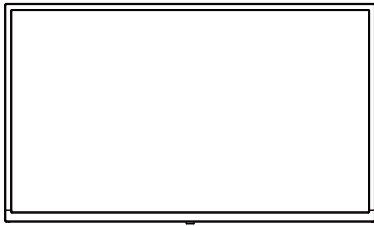

40"

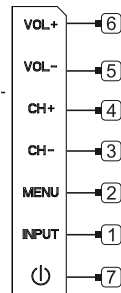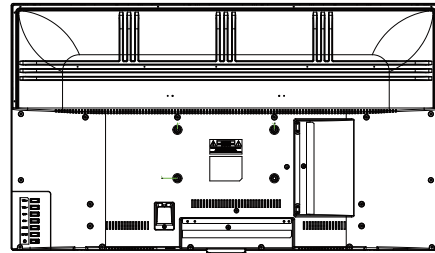  

1. INPUT Button  
Press to select the input source of the TV.
2. MENU Button  
Press to display the on-screen TV menu.
3. CH- Button  
Press to change the TV channels down  
highlight selections on the menu screen.
4. CH+ Button  
Press to change the TV channels up  
highlight selections on the menu screen.
5. VOL- Button  
Press to adjust the volume down.
6. VOL+ Button  
Press to adjust the volume up.
7. POWER Button  
Press to turn the unit on and off.

## INITIAL SETUP

### TURN TV ON / OFF

- Make sure that the power cord is plugged in .
- Switch on the device using the **[POWER]** button on the TV or the remote control.

### GENERAL OPERATION

The TV menu is operated with the following buttons.

- Navigate in the menu (up / down / left / right): ▲▼◀▶
- Confirm menu item: **[ OK ]**
- Back / Exit: ↶ **[Return]**
- Open up device menu: **[MENU]**
- Open input source menu: **[ Input ]**
- Smart TV: **[ Home ]**
- Additional functions: **[red/green/yellow/blue]**

### FIRST INSTALLATION

#### Turn on TV

Switch on the TV using the controls on the TV or the remote control to start the initial installation of the TV and to set the TV.

1. Press the **[POWER]** button on the TV or on the remote control to switch the TV on.
2. Use the **[ OK ]** button to go to the next menu item "Language".





## INITIAL SETUP

### Language

Select the desired menu language.

1. Use the [▲ ▼] buttons to navigate in the menu and select the desired language.
2. Confirm the entry with the [▶] button and move to the next menu item "**Country or Region**".

### Country or Region

Select the country

1. Use the [▲ ▼] to buttons select a country.
2. Confirm the entry with the [▶] button and move to the next menu item "**Time Zone**".

### Time zone

Select the time zone.

1. Use the [▲ ▼] buttons to navigate in the menu and select the desired time zone.
2. Use the [▶] buttons to go to the next menu item "**Network**".
3. Use the [◀] key to go to the previous menu item "**Country or Region**".

### Network

In order to be able to access the SMART TV content after the initial installation, it is necessary to connect the device to the Internet via WLAN or LAN. Select your network and connect the TV to your network. If your W-LAN is secured with a password / network key, this is required to connect to the network.

#### Note:

- If you want to skip the setting or carry it out at a later time, select "**Skip**".
- Not connected: The device is not connected to any network.
- Connected: The device is connected to a network.

1. Use the [▲ ▼ ◀ ▶] buttons to navigate in the menu.
2. Select the type of connection you want (WLAN/LAN).
  - LAN:** The connection to your network is established automatically.
  - WLAN:** Follow the instructions for the WLAN settings.
3. Select your network from the network list.
4. Enter your WiFi password. Click the "**Next**" button to close the keyboard.
5. Navigate to the "**OK**" menu item to confirm the password entry.
6. If the password entry worked, the status "**Connected**" is now displayed under the network.
7. Navigate to the "**Confirm**" button and press the [OK] button to complete the network entry.

### Welcome

Select whether you want to switch to the Smart TV interface or the TV area next.

1. Press the [▲ ▼ ◀ ▶] buttons to navigate in the menu.
2. Use the [OK] key to select the desired menu item.
3. The initial installation is now complete.

### Smart TV mode

If you have selected the menu item "Smart TV mode", the device changes to Smart TV mode and you have access to various Internet content.

## TV SETUP

Select the "Start Launcher Active" to get on the internet.

 


Note: If there is no internet available, please select "TV" mode and select "search" to search channels and watch TV broadcast programs.


### Voice remote control Bluetooth connection

Turn on the TV by remote control, follow the instructions from the OSD screen, get the tv connected to the wifi or internet cable.

1. After entering the system, as shown below:

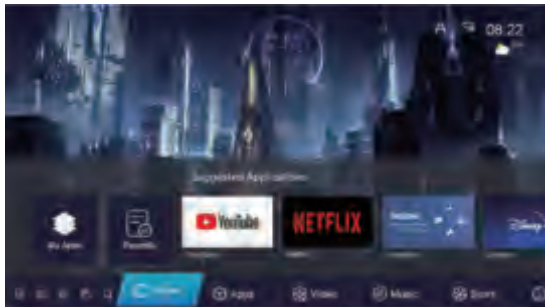

 2. Press the Voice button on the remote.

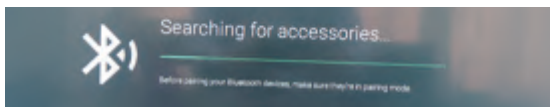


3. At the same time, press the Vol- and Back keys above the remote control.

Press the green indicator to start the flash, the remote control goes in the Bluetooth search status:




## TV SETUP

 
4. After the TV receives the remote control Bluetooth, press the remote control OK button to start the link, as shown below:

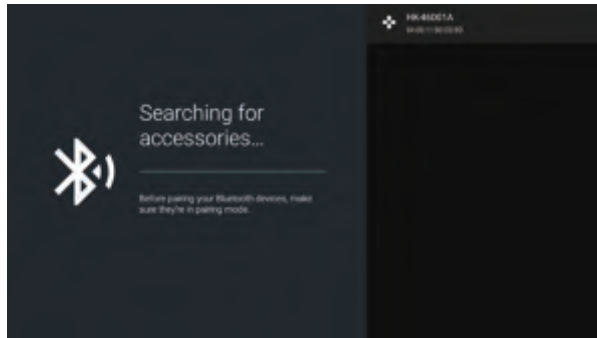

5. Once the remote is successfully paired, follow the below instructions:

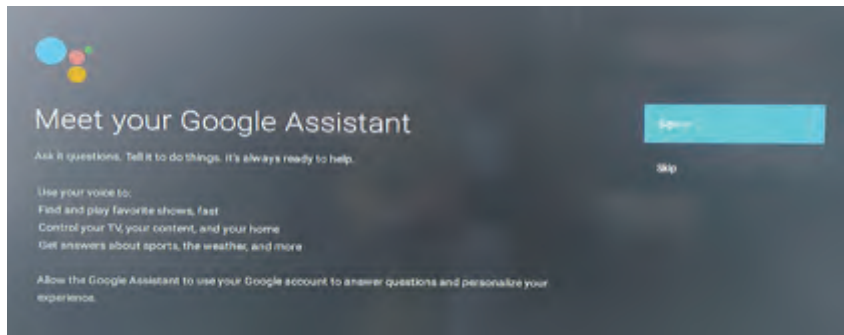

 6. Select Sign In, press the confirmation button to go to the next step, as shown below:

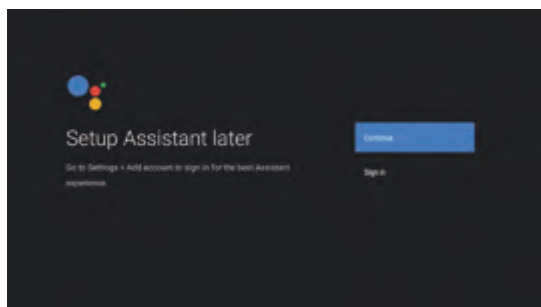

## TV SETUP

7. Enter the Google account and password to complete the login.

Notes: 1. When the voice remote control indicator is green, it means that the remote control is sending a bluetooth code to the TV.

 
2. Remote control name: HK-46D01A

### Home

#### Apps



The following pictures are for reference only, the real home menu may have some differences.

Press the ▲ / ▼ ◀ / ▶ buttons to select My Apps in the Home Menu, press OK to select APP Store and then press OK to enter.

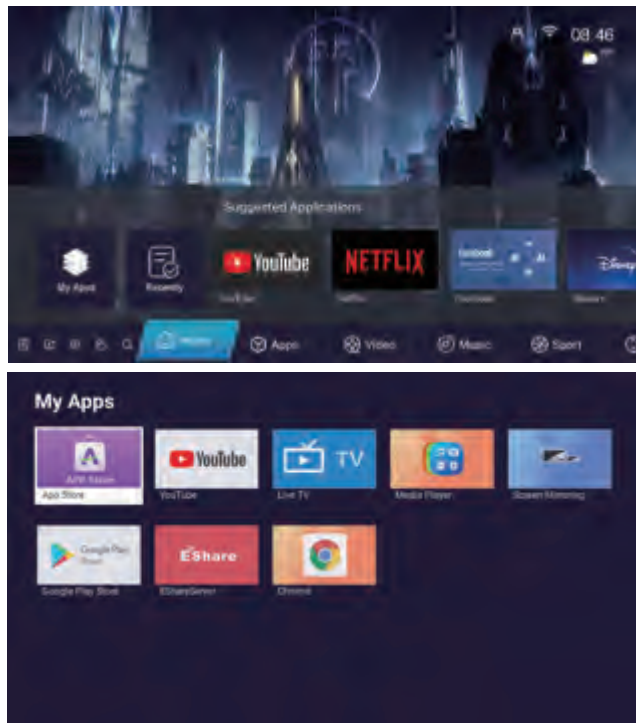

## TV SETUP

  select apps which you need from the TV store by keyboard as the figure shows.

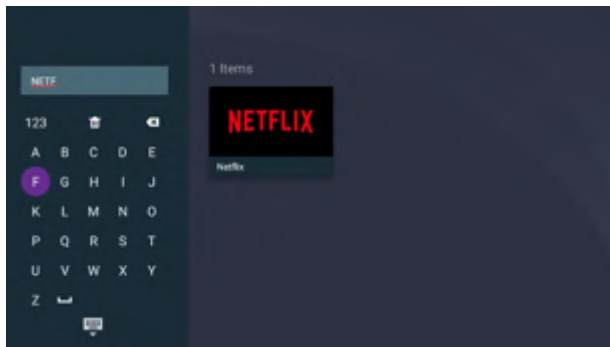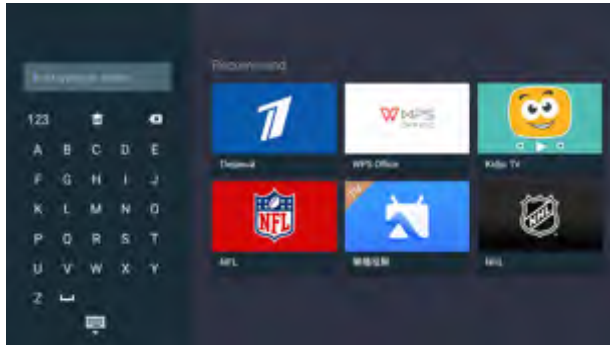

you can also select Browser to search the internet, As the figure shows.



Eshare Server : This APK casts the screen for the mobile phone.

imirror: This APK casts the screen for the mobile phone.

## Mounting Your TV to the Wall

If you are mounting your TV to the wall, don't attach the stands.

To mount your TV to the wall, purchase a VESA wall mount	
Models of 32"	Purchase a VESA 100x100 (4 M6x10mm screws)
Models of 40"	Purchase a VESA 200x100 (4 M6x8mm screws)

The VESA number is the horizontal and vertical measurement of the mounting holes. For example, 100x100 refers to mounting measurements that are 100mm horizontally and 100mm vertically.

Follow the instructions that come with the wall mount.

Your wall mount must be able to bear a minimum of five times the TV'S net weight to avoid causing damage.

Warning:

Never place a television set in an unstable location, a television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

## SPECIFICATION

ModelDescription		32"LED TV / 40"LED TV
Panel	Panel Type	LED Panel
	Diagonal Size	32 inches / 40 inches
	Screen Format	16:9
	Resolution	1366x 768
	Brightness	200 nits
	Contrast	3000:1
	View Angle	178(H)/178(V) / 176(H)/176(V)
	Response Time	8 ms
	Maximum Color	16. 7M colors
	Refresh Rate	60Hz
Systems	Color System	ATSC/NTSC
	Sound System	M
	Audio System	MTS
	Sound Output	L/R Speaker: 6W + 6W

This manual is only for your reference.  
Specifications are subject to update without prior notice.

## TROUBLESHOOTING GUIDE

Problem	CAUSE (AND Solution )
TV	
Bad Picture (snow, multiple images distortion,blurry)	<ul style="list-style-type: none"> <li>• Check the location of the antenna and adjust it if necessary.</li> <li>• Make sure the antenna cable is firmly connected.</li> <li>• Make sure all input cables are firmly connected.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>• Increase the volume.</li> <li>• Check whether the mute function has been activated on the Remote Control.</li> </ul>
Black and White picture.	<ul style="list-style-type: none"> <li>• Check the PICTURE setting within the PICTURE menu.</li> <li>• Check to make sure the program you are watching is broadcast in Color and not Black &amp; White.</li> </ul>
No picture or sound.	<ul style="list-style-type: none"> <li>• Make sure the unit is plugged in and turned on.</li> <li>• Make sure that the ATV mode is selected.</li> <li>• Try a new channel to check for possible station trouble.</li> <li>• Make sure the antenna is connected properly.</li> <li>• Increase the volume.</li> <li>• Make sure the antenna or audio/video source device is working properly.</li> <li>• Make sure all cables are firmly connected.</li> <li>• Check for local interference.</li> </ul>
Colored patches of picture.	<ul style="list-style-type: none"> <li>• Make sure there are no unshielded electrical devices nearby that are causing interference.</li> <li>• Turn theTV off for 30 minutes, then try it again.</li> </ul>
Panel function key does not respond correctly.	<ul style="list-style-type: none"> <li>• Under the influence of electrostatic phenomenon, the product may malfunction and require the user to power reset.</li> <li>• Unplug and re-plug the AC power cord.</li> </ul>
The display monitor's panel goes hot.	<ul style="list-style-type: none"> <li>• LED TV takes inside lighten phosphor. It may increase the temperature of the screen in some occasions. It's not a defect.</li> </ul>
Unusual dots	<ul style="list-style-type: none"> <li>• Black dots and bright points may appear on the LED screen. This is a structural property of the LED panel and is not a defect.</li> </ul>
Stripes on screen	<ul style="list-style-type: none"> <li>• Adjusting the impulse phase may decrease stripes. ( RGB in )</li> </ul>
The top of the monitor gets hot .	<ul style="list-style-type: none"> <li>• It may occur if it's working for a long time It's not a defect.</li> </ul>
Unable to select a certain channel.	<ul style="list-style-type: none"> <li>• The channel may be skipped. Choose this channel by directly selecting the buttons from the remote control.</li> </ul>
Disorder display at power on.	<ul style="list-style-type: none"> <li>• This may be caused because of a very short interval between POWER OFF and ON.</li> <li>• Unplug the power and restart.</li> </ul>