

# User Guide



15"/19"/22"/24" LED-LCD TV

**NS-15E720A12/NS-19E720A12/NS-22E730A12/NS-24E730A12**



## Contents

---

CHILD SAFETY .....	1
Important safety instructions .....	2
Warnings .....	2
Cautions .....	3
Introduction .....	5
Installing the stand or wall-mount bracket .....	6
Installing the stand .....	6
Installing a wall-mount bracket .....	7
TV components .....	8
Package contents .....	8
Front .....	8
Side controls .....	8
Jacks and ports .....	9
Remote control .....	11
Making connections .....	12
What connection should I use? .....	12
Connecting power .....	13
Connecting a cable or satellite box .....	13
Connecting an antenna or cable TV (no box) .....	17
Connecting a DVD or Blu-ray player .....	17
Connecting a VCR .....	21
Connecting a camcorder or game console .....	22
Connecting a computer .....	23
Connecting a USB flash drive .....	24
Connecting headphones .....	25
Connecting a basic home theater system .....	25
Connecting a home theater system with multiple devices .....	26
Using the remote control .....	27
Installing remote control batteries .....	27
Aiming the remote control .....	27
Turning on your TV for the first time .....	28
Understanding the basics .....	29
Turning your TV on or off .....	29
Selecting the video input source .....	29
On-screen menu overview .....	30
Navigating the menus .....	30
Selecting a channel .....	31
Adjusting the volume .....	31
Viewing channel information .....	31
Viewing system information .....	31
Adjusting the picture .....	32
Adjusting the TV picture .....	32
Adjusting the computer image .....	33



Adjusting the sound .....	34
Adjusting sound settings .....	34
Playing TV audio only .....	34
Changing channel settings .....	35
Automatically scanning for channels .....	35
Hiding channels .....	36
Setting up a favorite channel list .....	36
Viewing a favorite channel .....	37
Adding or changing a channel label .....	37
Checking the digital signal strength .....	38
Turning Auto Zoom on or off .....	38
Setting parental controls .....	39
Setting or changing the password .....	39
Locking control buttons .....	40
Blocking unrated TV .....	41
Setting parental control levels .....	42
Downloading rating information .....	43
Using closed captioning .....	44
Turning closed captioning on or off .....	44
Selecting the analog closed captioning mode .....	45
Customizing digital closed captioning styles .....	45
Adjusting time settings .....	46
Setting the clock .....	46
Setting the sleep timer .....	47
Adjusting menu settings .....	48
Selecting the menu language .....	48
Turning Auto Input Sensing on or off .....	48
Labeling an input source .....	49
Restoring settings to the defaults .....	50
Using INlink .....	50
Turning INlink on or off .....	50
Turning Device Auto Power Off on or off .....	51
Turning TV Auto Power On on or off .....	52
Turning Audio Receiver on or off .....	52
Displaying a list of INlink-compatible (HDMI CEC) devices .....	53
Waking INlink-compatible (HDMI CEC) devices .....	54
Opening an INlink-compatible device's root menu .....	54
Using a USB flash drive .....	55
Switching to USB mode .....	55
Browsing photos .....	55
Viewing favorite photos .....	56
Viewing photos in a slideshow .....	57
Customizing slideshow settings .....	58
Maintaining .....	59
Cleaning the TV cabinet .....	59
Cleaning the TV screen .....	59
Troubleshooting .....	59
Video and audio .....	59
Remote control .....	60
General .....	60

Specifications ..... 61

Programming universal remote controls ..... 63

    Programming a different universal remote control ..... 63

    Common universal remote control codes ..... 63

Legal notices ..... 64

Two-year limited warranty - Insignia Televisions ..... 65

    US and Canada Markets ..... 65

# CHILD SAFETY

**It makes a difference how and where you use your flat panel display**

**As you enjoy your new product, keep these safety tips in mind**

## The issue

The home theater entertainment experience is a growing trend, and larger TVs are popular purchases. However, TVs are not always supported on the proper stands or installed according to the manufacturer's recommendations. We and the consumer electronics industry are committed to making home entertainment enjoyable and safe.

*TVs that are inappropriately placed on dressers, bookcases, shelves, desks, speakers, chests, or carts may fall over and cause injury.*

## Tune into safety

- One size of TV stand does **not** fit all. Use only a TV stand rated for the weight of your TV.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't let children climb on or play with entertainment system furniture and TVs.
- Don't place TVs on furniture that can easily be used as steps, such as a crate or chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger-than-life" TV. Make sure that you place or install the TV where it cannot be pushed, pulled over, or knocked down.
- Make sure that you route all cords and cables so that they cannot be pulled or grabbed by curious children.



## Wall mounting

If you decide to wall mount your TV, always remember:

- One size of wall mount does **not** fit all. Use only a wall mount rated for the weight of your TV and that has been recommended by this TV manufacturer, listed in this manual, or otherwise listed by an independent laboratory as suitable for your TV.
- Follow all instructions supplied by the TV and wall mount manufacturers.
- If you have any doubts about your ability to safely wall mount your TV, get help from a professional installer.
- Make sure that the wall where you are mounting the TV is appropriate. Some wall mounts are not designed to be mounted to walls backed with steel studs or cinder blocks. If you are unsure, ask a professional installer.
- TVs can be heavy. At least two people are required for safe wall mount installation.



## Important safety instructions



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your TV. This label is located on the back of your TV.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your TV.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.



S3125A

- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 The *wall plug* is the disconnecting device. The plug must remain readily operable.
- 16 An apparatus with three-prong, grounding-type plug is a Class I apparatus. A Class I apparatus needs to be grounded to prevent possible electric shock. Make sure that you connect the Class I apparatus to a grounding-type, three-prong outlet.
- 17 Remote control batteries should not be exposed to excessive heat such as sunshine, fire, or the like.
- 18 The apparatus should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on the apparatus.

### Warnings

#### Electric shock hazard

To reduce the risk of fire or electric shock, do not remove any cover or expose the device to rain or moisture. No user-serviceable parts are inside. Refer servicing to qualified service technicians.

#### Lightning

For added protection for your device receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the power outlet and disconnect any antenna or cable system. This helps prevent property damage and personal injury from lightning and power line surges.

#### Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

#### Handling the LCD panel

- Your TV's screen is made of glass. Do not drop your TV or hit, jolt, or press hard against the LCD panel. If the screen breaks, be careful of broken glass.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle, rinse, and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.

## Replacement parts

When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, personal injury, or other hazards.

## Safety check

After completing any service or repair to this device, ask the service technician to perform routine safety checks to determine that your TV is in correct operating condition.

## Power source

Operate your TV only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult an electrician or your local power company.


## Cautions

### Damage requiring service

- Unplug this TV from the power outlet and refer servicing to qualified service personnel under the following conditions:
- When the power supply cord or plug is damaged or frayed.
  - If liquid has been spilled or objects have fallen into your TV.
  - If your TV has been exposed to rain or water.
  - If your TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore your TV to its normal operation.
  - If your TV has been dropped or damaged in any way.
  - When your TV exhibits a distinct change in performance.

## Outdoor antenna grounding

If an outside antenna or cable system is connected to your TV, make sure that the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to correct grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of the antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

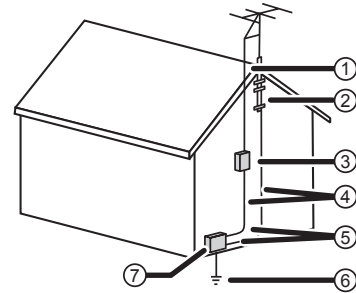

- ① Antenna lead-in wire
- ② Grounding clamp
- ③ Antenna discharge unit
- ④ Grounding conductors
- ⑤ Ground clamps
- ⑥ Power service grounding electrode system
- ⑦ Electric service equipment

### Note to CATV system installer

Article 820 of the National Electrical Code, ANSI/NFPA No. 40 provides guidance for correct grounding. Specifically, it states that the cable ground must be connected to the grounding system of the building as close to the point of cable entry as practical.

## Condensation

Moisture will form on the TV if the TV is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, the TV's performance may be impaired. To prevent this, let the TV stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually.

Condensation may also form during the summer if the TV is exposed to the breeze from an air conditioner. In such cases, change the location of the TV.

## Mobile telephone warning

To avoid interference with your TV picture and sound, operating problems, or even damage, keep your cordless and cellular telephones away from the TV.

**End of life directives**

Your TV contains tin-lead solder and a fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated for environmental reasons. Your TV also contains material that can be recycled and reused. For disposal or recycling information, contact your local authorities.

**Non-active pixels**

The LCD panel contains almost 3 million thin film transistors, which provide exceptionally sharp video quality. Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green, or red point. These non-active pixels do not adversely affect the performance of your TV, and are not considered defects.

# Insignia 15"/19"/22"/24" LED-LCD TV

---

## Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-15E720A12, NS-19E720A12, NS-22E730A12, or NS-24E730A12 represents the state of the art in LED-LCD TV design and is designed for reliable and trouble-free performance.

### **SRS TruSurround HD:**

At Insignia, providing you with superior audio quality is just as important as exceptional picture quality. That's why we added SRS TruSurround HD, which provides you with a theater-like surround-sound experience, with the clearer dialog and the enhanced bass sounds that movie viewers and gamers crave.

### **INlink:**

Enjoy the benefit of having HDMI CEC compatible products plug and play! No setup is needed! CEC technology lets different components discover and communicate with each other. (See page 50 for instructions on how to use INlink.)


## Installing the stand or wall-mount bracket

### Notes

If you plan to wall-mount your TV, do not install the stand.  
Store the stand and stand screws in case you decide to use the stand in the future.

- Make sure that the wide portion of the stand base faces the front of your TV, align the base to the stand column, then secure the base to the column with the provided screw.


Model	Screw type	Screw length
All models	M4 type	14 mm

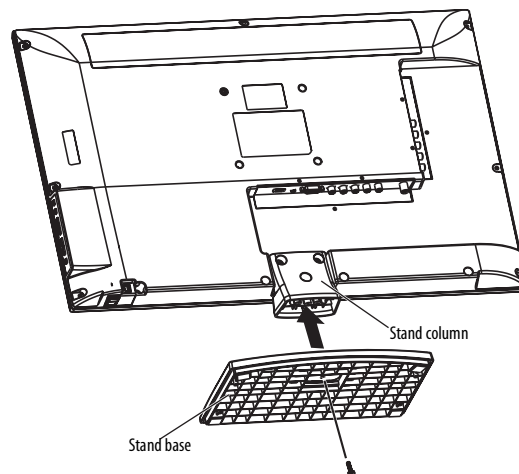

### Installing the stand


#### To install the stand:

- Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.

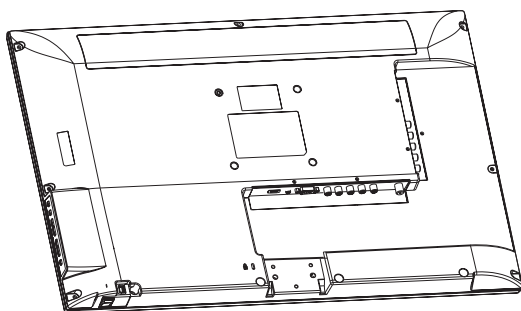

- Align the locators on the stand column with the locating grooves on the TV back and secure the stand column to your TV with the three provided screws.

Model	Screw type	Screw length
All models	M4 type	14 mm

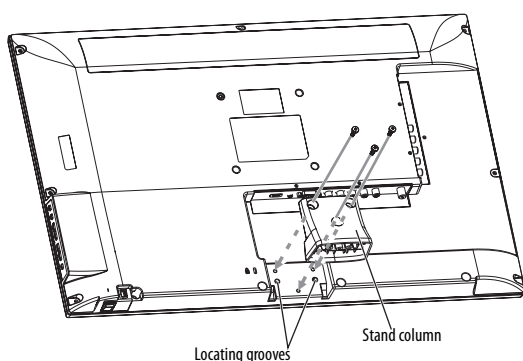




## Installing a wall-mount bracket

### Warning

This TV is intended to be supported by a UL Listed wall mount bracket with suitable weight/load. (See "Miscellaneous" on page 62.)

### To attach your TV to a wall-mount bracket:

- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Remove the three screws that secure the stand column to your TV, then remove the column.

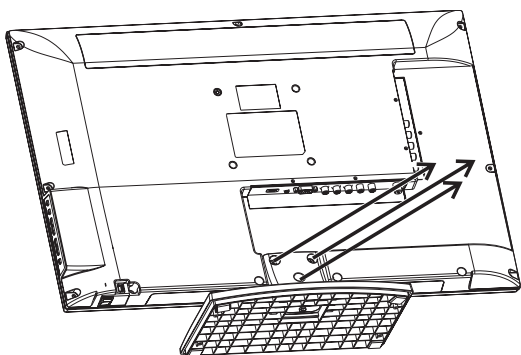


- 3 Attach the wall-mount bracket to your TV using the mounting holes on the back of your TV. See the instructions that came with the wall-mount bracket for information about how to correctly hang your TV.


### Note

The length of the wall-mount screws vary depending on the wall-mount bracket you purchased. See the instructions that came with the wall-mount bracket for screw lengths.


### NS-15E720A12 (15-inch)

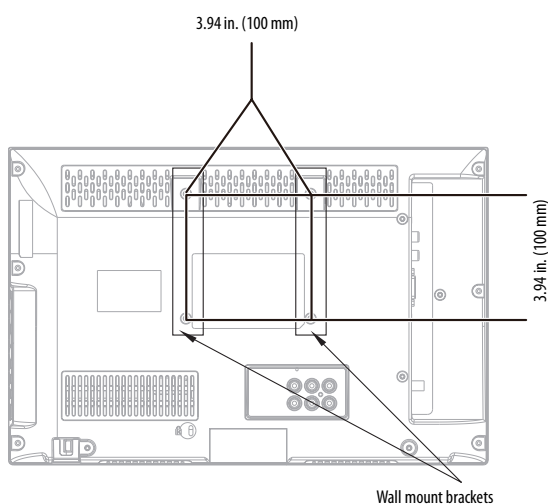


### NS-19E720A12 (19-inch)

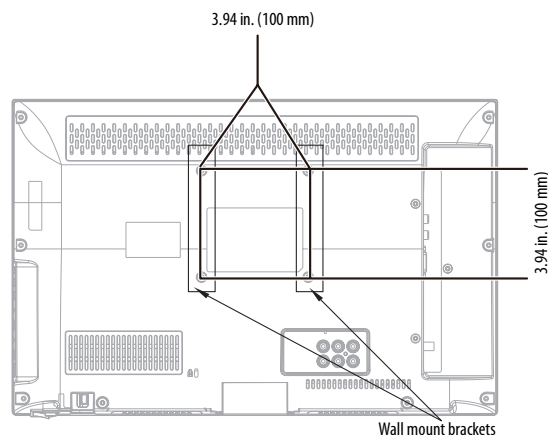

### NS-22E730A12 (22-inch)

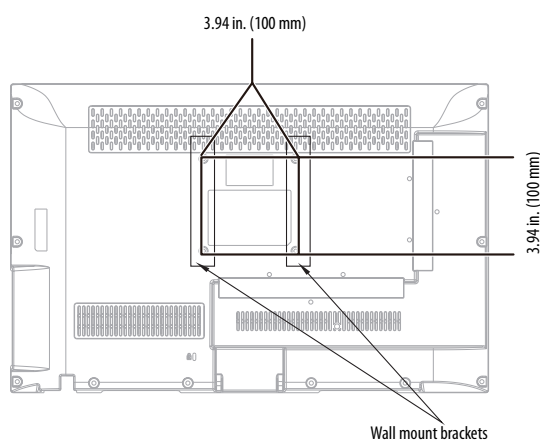

### NS-24E730A12 (24-inch)

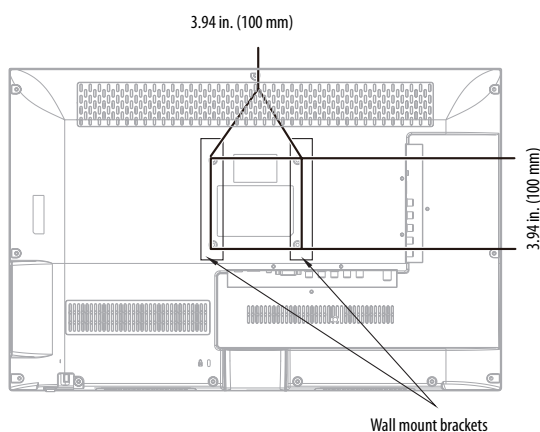


## TV components

### Package contents


Remote control and batteries (2 AAA)  
Stand and stand column with screws  
Component video cable  
Audio cable  
Cleaning cloth  
Quick Setup Guide

### Front

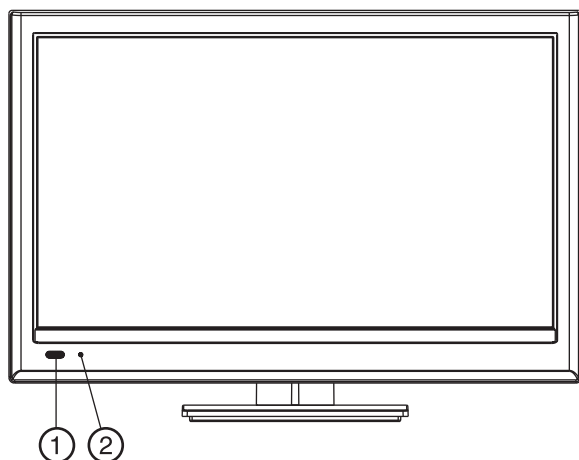

#	Item	Description
①	Remote control sensor	Receives signals from the remote control. Do not block.
②	Power indicator	Lights blue when your TV is turned on. Lights red when your TV is in standby mode. Turns off when the power cord is unplugged.


### Side controls

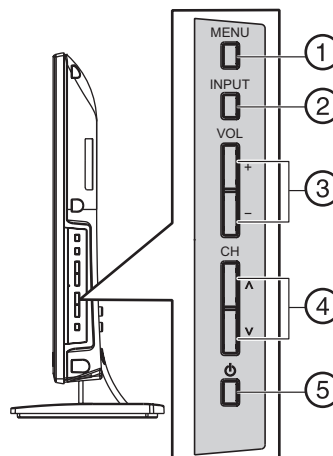

#	Item	Description
①	MENU	Press to open the on-screen menu. For more information, see "Navigating the menus" on page 30.
②	INPUT	Press to open the <i>INPUT SOURCE</i> list, then press ▲ or ▼ to select a video input source. In menu mode, press to confirm selections.
③	VOL+/VOL-	Press to increase or decrease the volume.
④	CH- /CH+	Press to go to the next or previous channel in the channel list. For more information, see "Selecting a channel" on page 31.
⑤	⏻ (power)	Press to turn your TV on or off (standby mode). When your TV is off, power still flows through it. To disconnect power, unplug the power cord.


## Jacks and ports

### 15-inch and 19-inch models

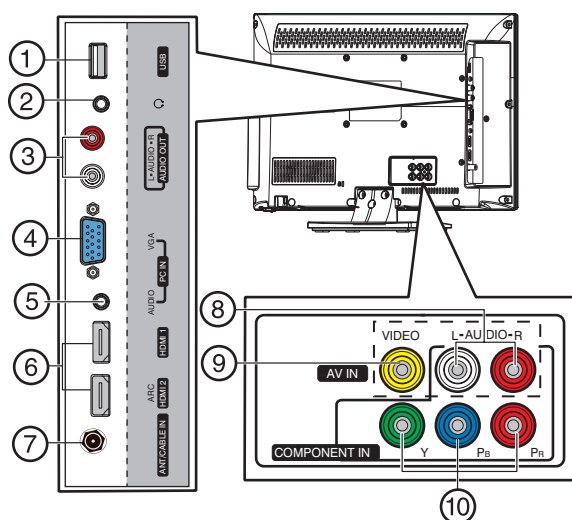


#	Item	Description
①	USB	Connect a USB flash drive to this jack. For more information, see "Connecting a USB flash drive" on page 24.
②	⌂ (headphone)	Connect headphones to this jack. For more information, see "Connecting headphones" on page 25.
③	L/R AUDIO OUT	Connect an external sound system to these jacks. For more information, see "Using analog audio output" on page 26.
④	PC IN VGA	Connect the video (VGA) for a computer to this jack. For more information, see "Using VGA" on page 23.
⑤	PC IN AUDIO	Connect the audio for a computer to this jack. For more information, see "Using VGA" on page 23. OR Connect the audio for a DVI device to this jack. For more information, see "Using DVI (same as HDMI but requires a sound connection)" on page 14 or 18.
⑥	HDMI 1/HDMI 2 ARC	Connect HDMI devices to these jacks. An HDMI cable carries both video and sound. You do not need to make an audio connection for an HDMI device. For more information, see "Using HDMI (best)" on page 13, 17, or 24.
⑦	ANT/CABLE IN	Connect an antenna or cable TV to this jack. For more information, see "Connecting an antenna or cable TV (no box)" on page 17.
⑧	L/R AUDIO	The component video jacks (COMPONENT IN Y/Pb/Pr) share these audio jacks with the composite video jack (AV IN VIDEO). Connect the audio for a component video device to these jacks. For more information, see "Using component video (better)" on page 15 or 19. OR Connect the audio for a composite video device to these jacks. For more information, see "Using composite video (good)" on page 16 or 20.
⑨	AV IN VIDEO	Connect the video for a composite video device to this jack. For more information, see "Using composite video (good)" on page 16 or 20.
⑩	COMPONENT IN Y/Pb/Pr	Connect the video for a component video device to these jacks. For more information, see "Using component video (better)" on page 15 or 19.

## 22-inch and 24-inch models

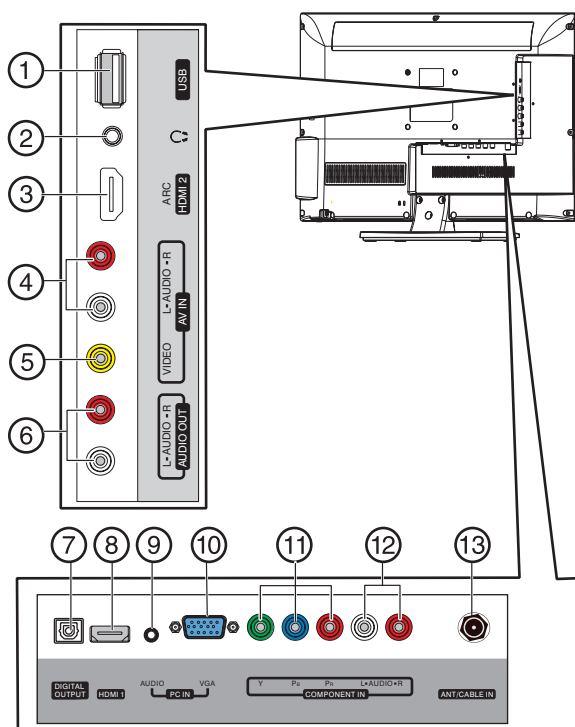

#	Item	Description
①	USB	Connect a USB flash drive to this jack. For more information, see "Connecting a USB flash drive" on page 24.
②	(headphone)	Connect headphones to this jack. For more information, see "Connecting headphones" on page 25.
③	HDMI 2 ARC	Connect an HDMI device to this jacks. An HDMI cable carries both video and sound. You do not need to make an audio connection for an HDMI device. There is another HDMI jack on the back of your TV. For more information, see "Using HDMI (best)" on page 13, 17, or 24.
④	AV IN L/R AUDIO	Connect the audio for a composite video device to these jacks. For more information, see "Using composite video (good)" on page 16 or 20.
⑤	AV IN VIDEO	Connect the video for a composite video device to this jack. For more information, see "Using composite video (good)" on page 16 or 20.
⑥	AUDIO OUT	Connect an external sound system to these jacks. For more information, see "Using analog audio output" on page 26.
⑦	DIGITAL OUTPUT	Connect an audio amplifier to this jack. For more information, see "Using digital audio output (22-inch and 24-inch only)" on page 25.
⑧	HDMI 1	Connect an HDMI device to this jack. An HDMI cable carries both video and sound. You do not need to make an audio connection for an HDMI device. There is another HDMI jack on the side of your TV. For more information, see "Using HDMI (best)" on page 13, 17, or 24.
⑨	PC AUDIO IN	Connect the audio for a computer to this jack. For more information, see "Using VGA" on page 23. OR Connect the audio for a DVI device to this jack. For more information, see "Using DVI (same as HDMI but requires a sound connection)" on page 14 or 18.
⑩	PC IN VGA	Connect the video (VGA) for a computer to this jack. For more information, see "Using VGA" on page 23.
⑪	COMPONENT IN Y/Pb/Pr	Connect the video for a component video device to these jacks. For more information, see "Using component video (better)" on page 15 or 19.
⑫	COMPONENT IN L/R AUDIO	Connect the audio for a component video device to these jacks. For more information, see "Using component video (better)" on page 15 or 19.
⑬	ANT/CABLE IN	Connect an antenna or cable TV to this jack. For more information, see "Connecting an antenna or cable TV (no box)" on page 17.

## Remote control

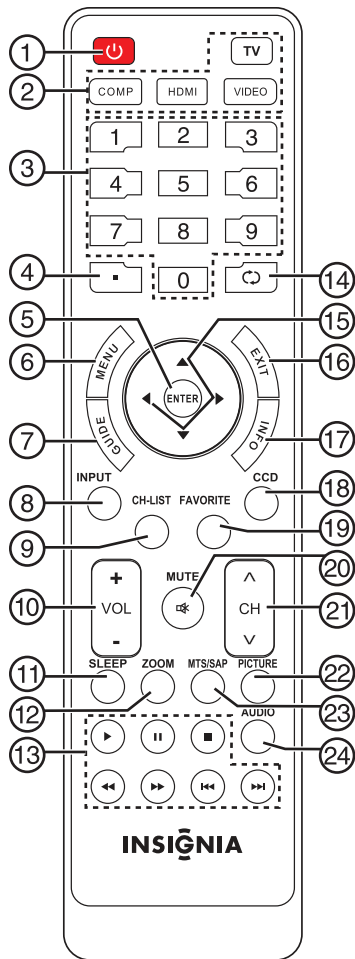

#	Button	Description
①	⏻ (power)	Press to turn your TV on or off (Standby mode). When your TV is off, power still flows through it. To disconnect power, unplug the power cord.
②	Video input	<b>TV</b> —Press to select your TV as the input source. <b>COMP</b> —Press to select the device connected to the <b>COMPONENT</b> video jacks. <b>HDMI</b> —Press one or more times to select the device connected to the <b>HDMI 1</b> or <b>HDMI 2</b> jack. <b>VIDEO</b> —Press to select the device connected to the <b>AV IN-VIDEO</b> jack.
③	Numbers	Press to enter channel numbers and the parental control password.
④	●	Press to enter a digital sub-channel number. For more information, see "Selecting a channel" on page 31.
⑤	ENTER	Press to confirm selections or changes.
⑥	MENU	Press to open the on-screen menu.
⑦	GUIDE	Press to display the program guide. For more information, see "Viewing channel information" on page 31.
⑧	INPUT	Press to open the <b>INPUT SOURCE</b> list, then press ▲ or ▼ to cycle through the available input sources. For more information, see "Selecting the video input source" on page 29.
⑨	CH-LIST	Press to open the channel list.
⑩	VOL+/-	Press to increase or decrease the volume.

#	Button	Description
⑪	SLEEP	Press to set the sleep timer. You can select <b>Off</b> , <b>5</b> , <b>10</b> , <b>15</b> , <b>30</b> , <b>60</b> , <b>90</b> , <b>120</b> , <b>180</b> , or <b>240</b> minutes. For more information, see "Setting the sleep timer" on page 47.
⑫	ZOOM	Press to select the aspect ratio. For more information, see "Adjusting the TV picture" on page 32.
⑬	Media control	Press these buttons to control the playback from an HDMI-CEC compatible device. For more information about HDMI-CEC compatible devices, see "Using INLink" on page 50.
⑭	○/RECALL	In TV mode, press to return to the previous channel.
⑮	▲▼◀▶	Press to move up, down, left, or right in on-screen menus.
⑯	EXIT	Press to close the on-screen menu.
⑰	INFO	Press to display TV status information, such as the channel number, channel name (if available), or signal source. For more information, see "Viewing channel information" on page 31.
⑱	CCD	Press to turn closed captioning on or off. You can select <b>CC Off</b> , <b>CC On</b> , or <b>CC on When Mute</b> . For more information, see "Turning closed captioning on or off" on page 44.
⑲	FAVORITE	Press to open the Favorite Channel list. For more information, see "Setting up a favorite channel list" on page 36 and "Viewing a favorite channel" on page 37.
⑳	🔇/MUTE	Press to mute the sound. Press again to restore the sound.
㉑	CH ▲/▼	Press to change TV channels. For more information, see "Selecting a channel" on page 31.
㉒	PICTURE	Press to select the picture mode. You can select <b>Vivid</b> , <b>Standard</b> , <b>Energy Savings</b> , <b>Theater</b> , or <b>Custom</b> . For more information, see "Adjusting the TV picture" on page 32.
		Press to select the audio mode for an analog program. You can select:
㉓	MTS/SAP	<ul style="list-style-type: none"> <li><b>MONO</b>—Select this option if there is noise or static on weak stereo broadcasts.</li> <li><b>STEREO</b>—Select this option for programs broadcast in stereo.</li> <li><b>SAP</b>—Select this option to listen to a secondary audio program, if available.</li> </ul>
㉔	AUDIO	Press to adjust sound mode. For more information, see "Adjusting sound settings" on page 34.




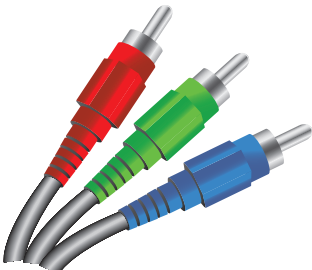

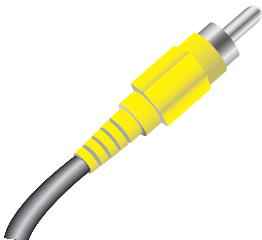


## Making connections




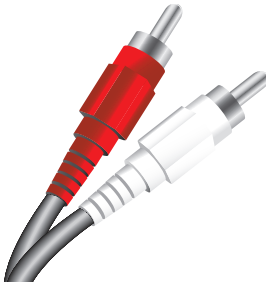

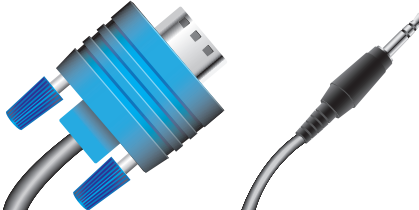
### What connection should I use?

Your TV has several connection types for connecting devices to your TV.

For the best video quality, you should connect a device to the best available connection.

Use the following tables to identify cables:

Connection type and jack	Video quality	Cable connector
<b>HDMI video/audio</b> 	<b>Best (use this if your devices have HDMI)</b>	
<b>Component video (requires an audio connection)</b> 	<b>Better than composite or coaxial</b>	
<b>Composite video (requires an audio connection)</b> 	<b>Better than coaxial</b>	
<b>Coaxial video/audio</b> 	<b>Good</b>	

Connection type and jack	Cable connectors
<b>Digital optical audio (SPDIF)</b> 	
<b>Analog audio</b> 	
<b>VGA (computer) video and audio</b> 	

You can use the **HDMI** jack on your TV to connect a DVI device to your TV. You need to attach an HDMI-to-DVI adapter to the end of the HDMI cable that connects to the DVI device.


#### Cautions

- Check the jacks for position and type before making any connections.
- Loose connections can result in image or color problems. Make sure that all connections are tight and secure.
- The external audio/video equipment shown may be different from your equipment. If you have questions, refer to the documentation that came with your equipment.
- Always unplug the power cord when connecting external equipment.

## Connecting power

### To connect the power:


- Plug the AC power cord into a power outlet.

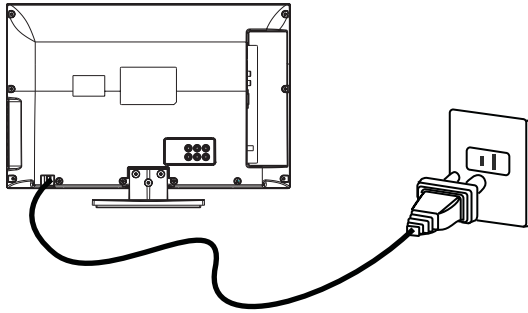

### Cautions

- Your TV should only be operated from the power source indicated on the label.
- Always unplug the AC power cord from the power outlet when you will not be using your TV for an extended period of time.
- The AC power cord is permanently attached to the back of your TV. Do not try to pull it out.

## 22-inch and 24-inch models

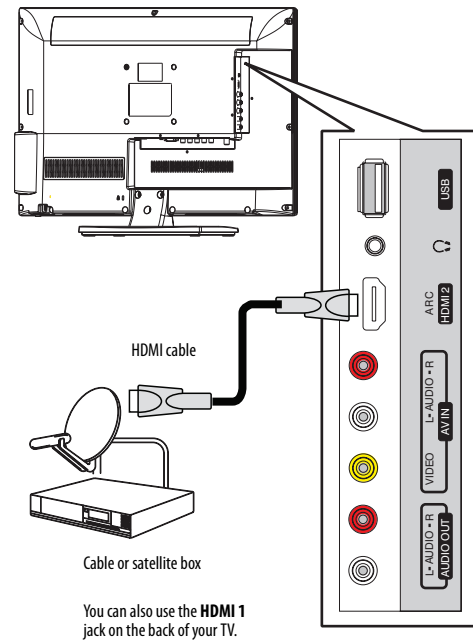

## Connecting a cable or satellite box


Many cable or satellite TV boxes have more than one connection type. To get the best video, you should use the best connection type available. For more information, see "What connection should I use?" on page 12.

### Using HDMI (best)

#### To connect a cable or satellite box using HDMI:

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect the incoming cable from the cable wall jack to the cable-in jack on the cable or satellite box.
- 3 Connect an HDMI cable (not included) to one of the **HDMI** jacks on your TV and to the **HDMI** jack on the cable or satellite box.

### 15-inch and 19-inch models

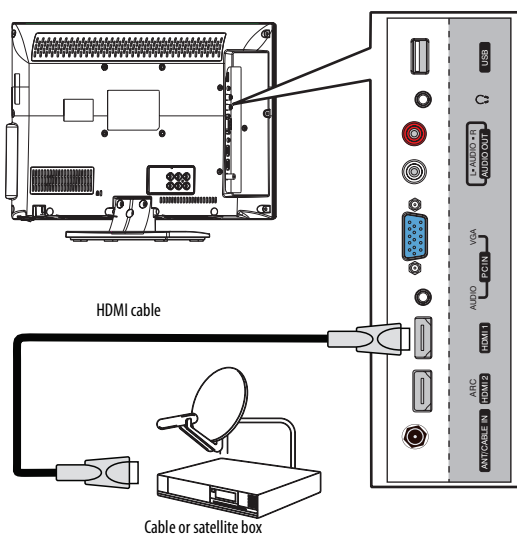

- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 5 Go through the Setup Wizard on page 28.

### Note


An HDMI cable carries both audio and video. You do not need to use any audio cables.

## Using DVI (same as HDMI but requires a sound connection)


### To connect a cable or satellite box using DVI:

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect the incoming cable from the cable wall jack to the cable-in jack on the cable box.
- 3 Connect an HDMI-DVI adapter (not included) to one end of an HDMI cable (not included).
- 4 Connect the HDMI-DVI adapter to an **HDMI** jack on your TV and to the **DVI OUT** jack on the cable or satellite box.

### 15-inch and 19-inch models

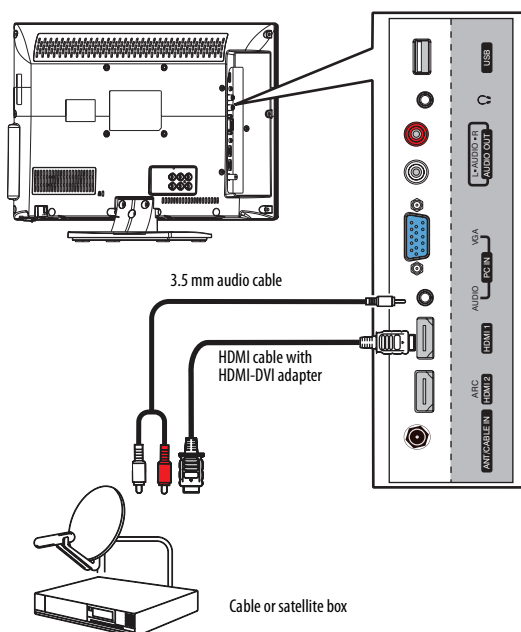

### 22-inch and 24-inch models

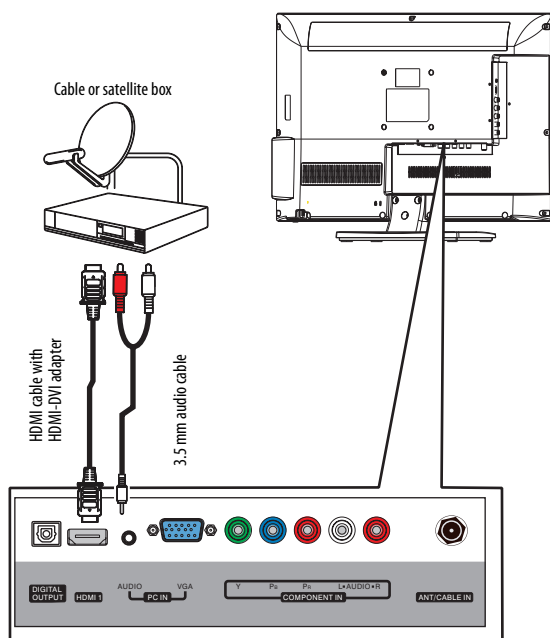

- 5 Connect a 3.5 mm audio cable (not included) to the **PC AUDIO IN** jack on your TV and to the **AUDIO OUT** jack on the cable or satellite box.

#### Note

When you connect the audio using the **PC AUDIO IN** jack, the audio output is analog.

- 6 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 7 Go through the Setup Wizard on page 28.




### Using component video (better)


#### To connect a cable or satellite box using component video:

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect the incoming cable from the cable wall jack to the cable-in jack on the cable box.
- 3 Connect a component video cable (included) to the **COMPONENT IN Y/Pb/Pr** video jacks and the **L/R AUDIO** jacks next to the **COMPONENT IN Y/Pb/Pr** on your TV and the component video and audio out jacks on the cable or satellite box.

#### 15-inch and 19-inch models

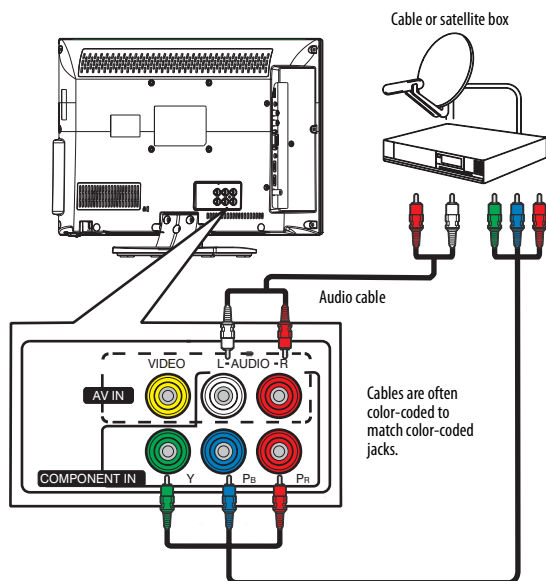

#### 22-inch and 24-inch models

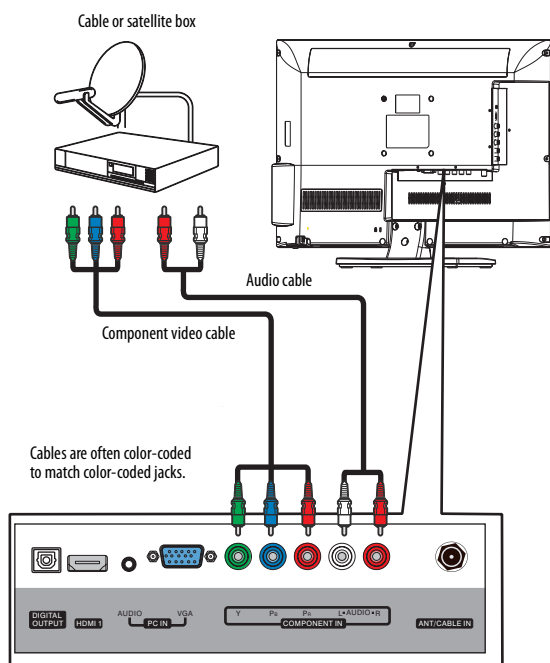

- 4 Connect an audio cable (included) to the **AUDIO L/R** next to the **COMPONENT IN** jacks on your TV and to the audio out jacks on the cable or satellite TV box.

#### Note

When you connect the audio using the **AUDIO L/R** audio jacks, the audio output is analog.


- 5 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 6 Go through the Setup Wizard on page 28.

## Using composite video (good)


### To connect a cable or satellite box using composite video:

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect the incoming cable from the cable wall jack to the cable-in jack on the cable or satellite box.
- 3 Connect an A/V cable (not included) to the **AV IN VIDEO** jack and **AUDIO L/R** jacks next to the **AV IN VIDEO** jack on your TV and to the composite video and audio out jacks on the cable or satellite box.

#### 15-inch and 19-inch models

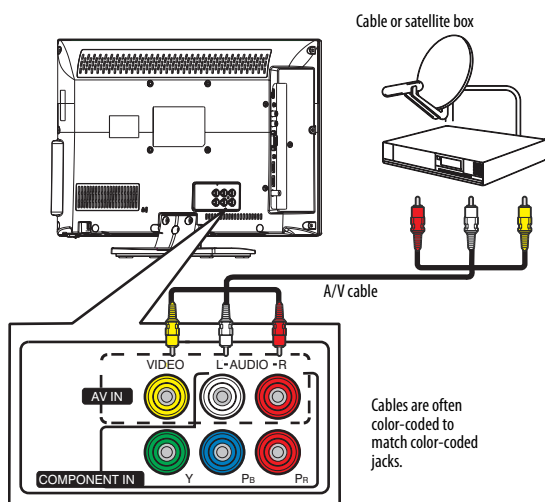

#### 22-inch and 24-inch models

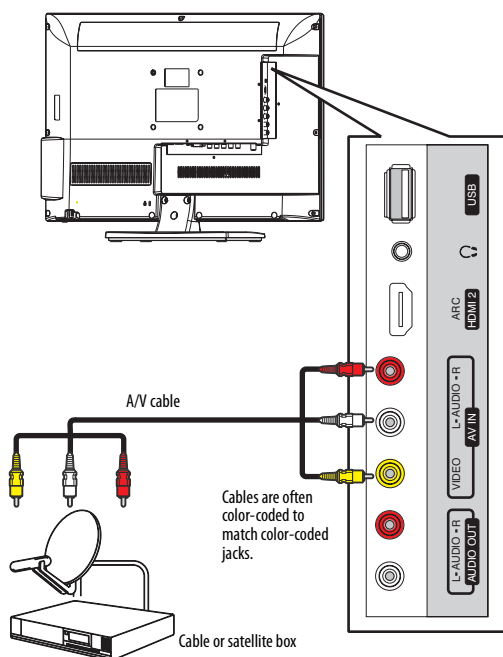


- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 5 Go through the Setup Wizard on page 28.

## Using coaxial (good)


### To connect a cable or satellite box using coaxial:

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect the incoming cable from the cable wall jack to the cable-in jack on the cable or satellite box.
- 3 Connect a coaxial cable (not included) to the **ANT/CABLE IN** jack on your TV and to the coaxial out jack on the cable or satellite box.

#### 15-inch and 19-inch models

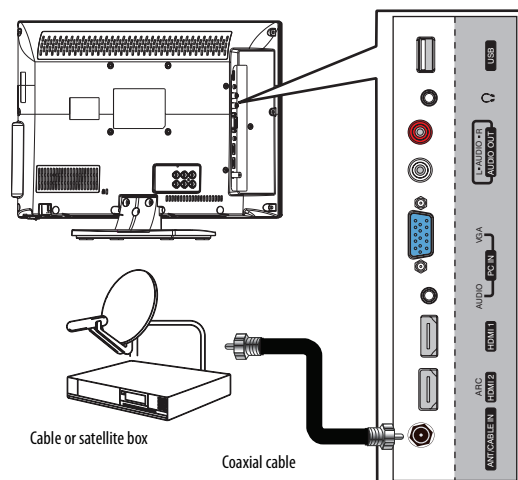

#### 22-inch and 24-inch models

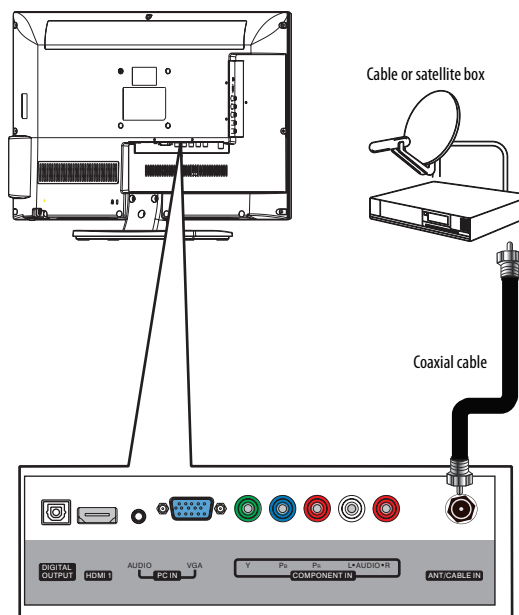

- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 5 Go through the Setup Wizard on page 28.

#### Notes


- Use a coaxial cable to eliminate interference and noise from radio waves.
- Do not bundle the coaxial cable with the power cord or other cables.

## Connecting an antenna or cable TV (no box)


### To connect an antenna or cable TV (no box):

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect a coaxial cable to the **ANT/CABLE IN** jack on your TV and to the antenna or cable TV wall jack.

#### 15-inch and 19-inch models

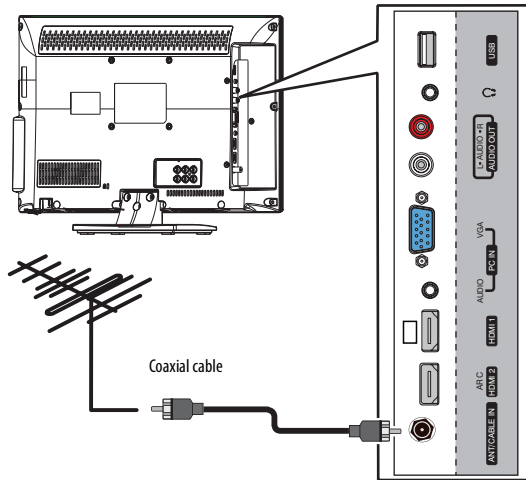

#### 22-inch and 24-inch models

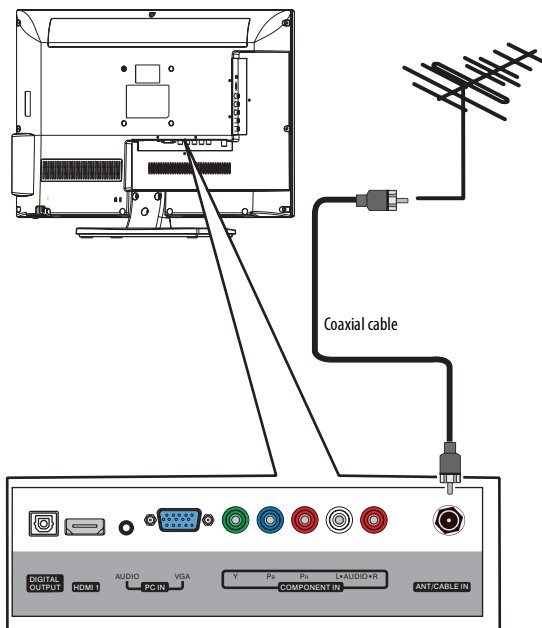

- 3 Plug your TV's power cord into a power outlet, then turn on your TV.
- 4 Go through the Setup Wizard on page 28.

#### Notes

- Use a coaxial cable to eliminate interference and noise from radio waves.
- Do not bundle the coaxial cable with the power cord or other cables.
- If the antenna is not installed correctly, contact qualified service personnel to correct the problem.


## Connecting a DVD or Blu-ray player

### Using HDMI (best)


### To connect a DVD or Blu-ray player using HDMI:

- 1 Make sure that your TV's power cord is unplugged and the DVD or Blu-ray player is turned off.
- 2 Connect an HDMI cable (not included) to an **HDMI** jack on your TV and to the **HDMI OUT** jack on the DVD or Blu-ray player.

#### 15-inch and 19-inch models

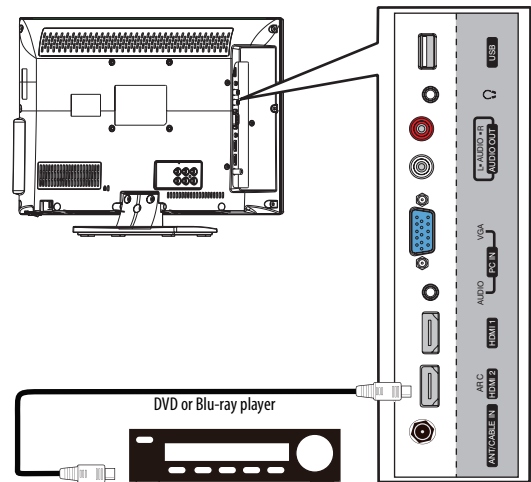

#### 22-inch and 24-inch models

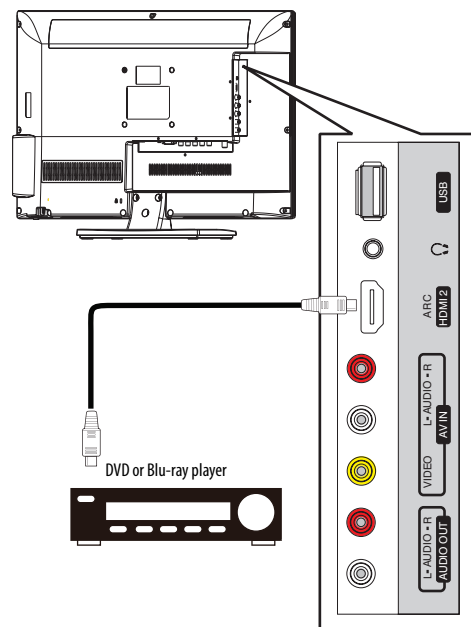

- 3 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the DVD or Blu-ray player.
- 4 Press **INPUT** to open the *INPUT SOURCE* list.
- 5 Press **▲** or **▼** to highlight **HDMI 1** or **HDMI 2**, then press **ENTER**.

#### Note


You can also press **HDMI** repeatedly to select the DVD or Blu-ray player.

## Using DVI (same as HDMI but requires a sound connection)


### To connect a DVD or Blu-ray player using DVI:

- 1 Make sure that your TV's power cord is unplugged and the DVD or Blu-ray player is turned off.
- 2 Connect an HDMI-DVI adapter (not included) to one end of an HDMI cable (not included).
- 3 Connect the HDMI-DVI adapter to an **HDMI** jack on your TV and to the **DVI OUT** jack on the DVD or Blu-ray player.

#### 15-inch and 19-inch models

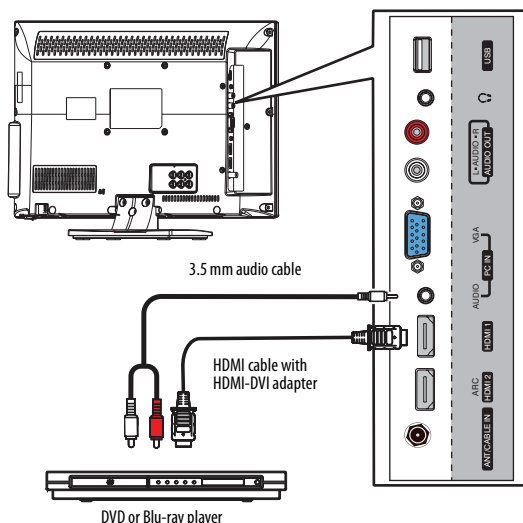

#### 22-inch and 24-inch models

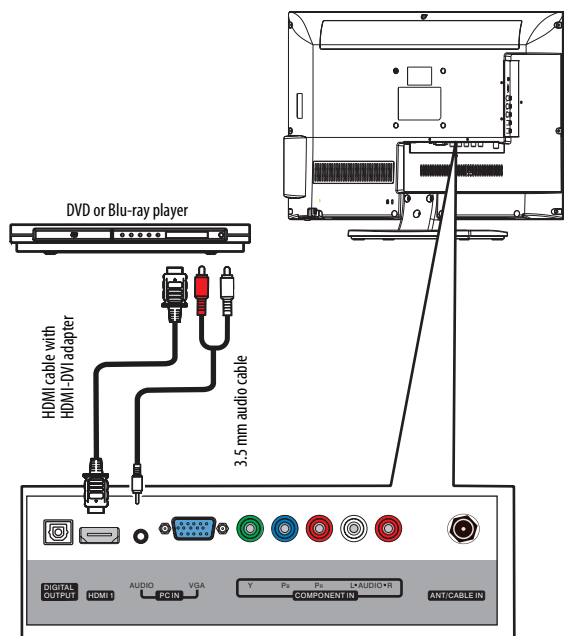

- 4 Connect a 3.5 mm audio cable (not included) to the **PC IN AUDIO** jack on your TV and to the **AUDIO OUT** jack on the DVD or Blu-ray player.

#### Note

When you connect the audio using the **PC IN AUDIO** jack, the audio output is analog.

- 5 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the DVD or Blu-ray player.
- 6 Press **INPUT** to open the *INPUT SOURCE* list.
- 7 Press **▲** or **▼** to select **HDMI 1** or **HDMI 2**, then press **ENTER**.

#### Note


You can also press **HDMI** repeatedly to select the **HDMI 1** or **HDMI 2**.

### Using component video (better)


#### To connect a DVD or Blu-ray player using component video:

- 1 Make sure that your TV's power cord is unplugged and the DVD or Blu-ray player is turned off.
- 2 Connect a component video cable (provided) to the **COMPONENT IN Y/Pb/Pr** jacks on your TV and to the **COMPONENT OUT** jacks on the component video device.

#### 15-inch and 19-inch models

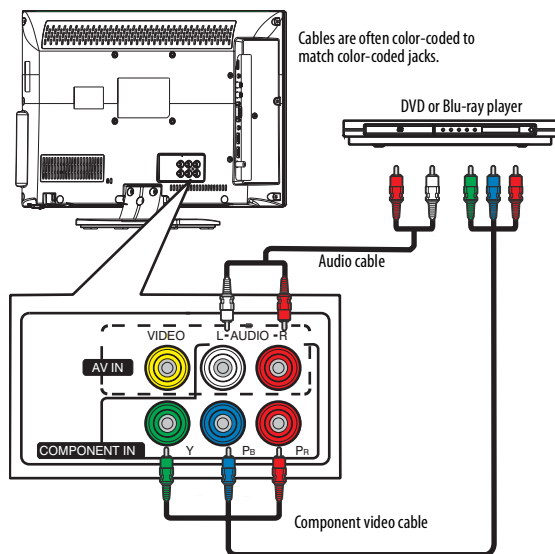

#### 22-inch and 24-inch models

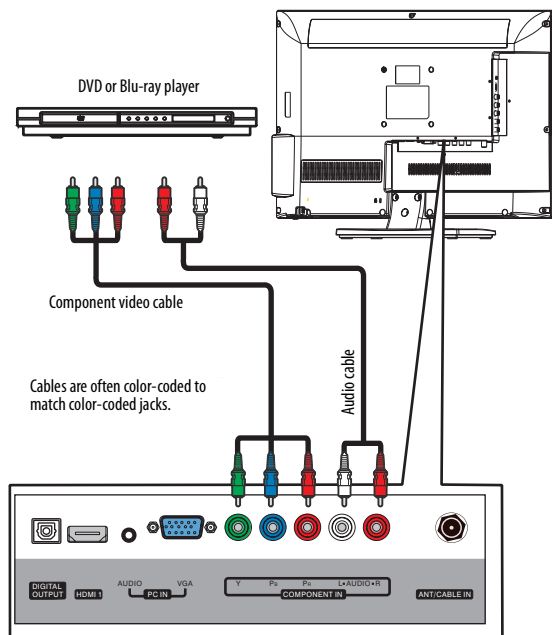

- 3 Connect an audio cable to the **AUDIO L/R** jacks next to the **COMPONENT IN** jacks on your TV and to the **L/R AUDIO OUT** jacks on the component video device.

#### Notes

On the 15-inch and 19-inch models, the **COMPONENT IN** jacks share the audio jacks with the **AV IN VIDEO** jack.

When you connect the audio using the **AUDIO L/ R** jacks, the audio output is analog.

- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the DVD or Blu-ray player.
- 5 Press **INPUT** to open the **INPUT SOURCE** list.
- 6 Press **▲** or **▼** to select **Component**, then press **ENTER**.

#### Note

You can also press **COMP** to select the component DVD or Blu-ray player.

## Using composite video (good)

### To connect a DVD or Blu-ray player using composite video:

- 1 Make sure that your TV's power cord is unplugged and the DVD or Blu-ray player is turned off.
- 2 Connect an AV cable (not provided) to the **AV IN VIDEO** jack and **AUDIO L/R** jacks next to the **AV IN VIDEO** jack on your TV and to the **AV OUT** jacks on the DVD or Blu-ray player.

#### Note


When you connect the audio using the **AUDIO L/R** audio jacks, the audio output is analog.

- 3 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the DVD or Blu-ray player.
- 4 Press **INPUT** to open the *INPUT SOURCE* list.
- 5 Press **▲** or **▼** to select **AV**, then press **ENTER**.


#### Notes

- You can also press **VIDEO** to select the DVD or Blu-ray player.
- On the 15-inch and 19-inch models, the **AV IN VIDEO** jack share the audio jacks with the **COMPONENT IN** jacks.
- When you connect the audio using the **AUDIO L/R** jacks, the audio output is analog.

### 15-inch and 19-inch models

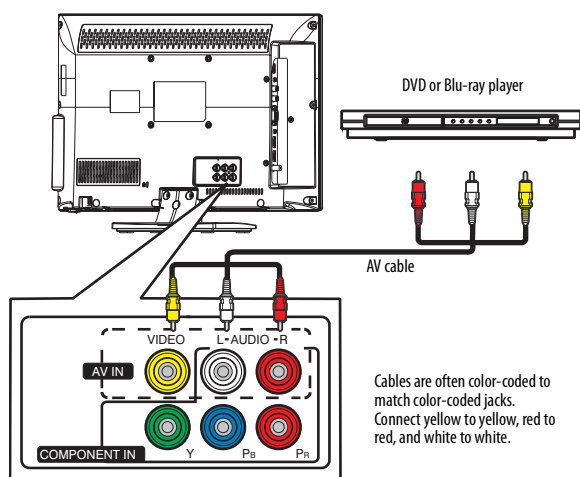

### 22-inch and 24-inch models

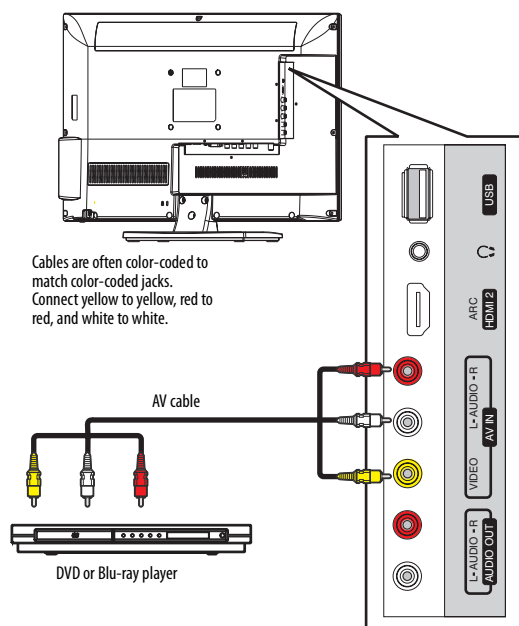

## Connecting a VCR


### To connect a VCR:

- 1 Make sure that your TV's power cord is unplugged and the VCR is turned off.
- 2 Connect an AV cable (not provided) to the **AV IN-VIDEO** and **L/R** (audio in) jacks on your TV and to the **AV OUT** jacks on the VCR.


#### Note

When you connect the audio using the **AUDIO L/R** jacks, the audio output is analog.

### 15-inch and 19-inch models

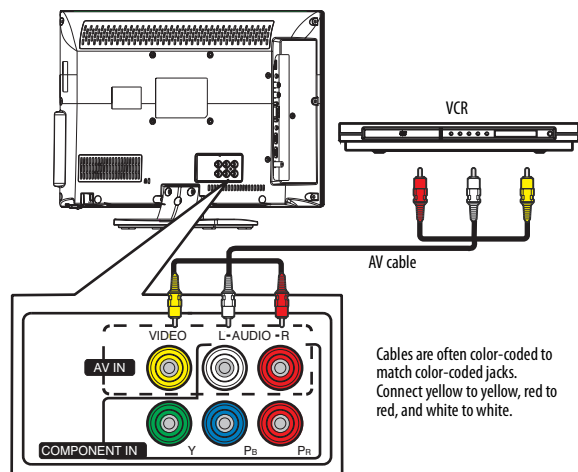

### 22-inch and 24-inch models

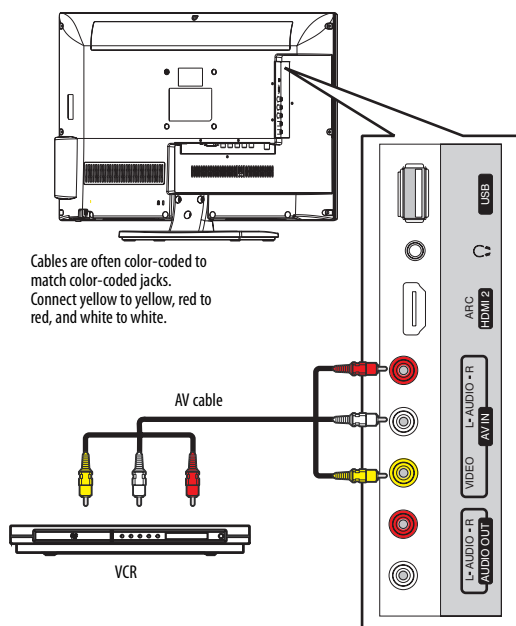

- 3 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the VCR.
- 4 Press **INPUT** to open the *INPUT SOURCE* list.
- 5 Press **▲** or **▼** to select **AV**, then press **ENTER**.

#### Note

You can also press **VIDEO** to select the VCR.

- 6 Insert a videotape, then press **PLAY** on the VCR.

#### Note

On the 15-inch and 19-inch models, the **AV IN VIDEO** jack shares the **AUDIO L/R** jacks with the **COMPONENT IN** video jacks.

## Connecting a camcorder or game console

### Note

If your camcorder or game console has an HDMI connection, we recommend that you use the HDMI connection to get the best quality possible.

### To connect a camcorder or game console:

- 1 Make sure that your TV's power cord is unplugged and the camcorder or game console is turned off.
- 2 Connect an AV cable (not provided) to the **AV IN VIDEO** jack and **AUDIO L/R** jacks next to the **AV IN VIDEO** on your TV and to the **AV OUT** jacks on the camcorder or game console.

### Note


When you connect the audio using the **L** and **R** audio jacks, the audio output is analog.

- 3 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the camcorder or game console.
- 4 Press **INPUT** to open the *INPUT SOURCE* list.
- 5 Press **▲** or **▼** to select **AV**, then press **ENTER**.


### Notes

- You can also press **VIDEO** to select the camcorder or game console.
- On the 15-inch and 19-inch models, the **AV IN VIDEO** jack shares the **AUDIO L/R** jacks with the **COMPONENT IN** video jacks.

### 15-inch and 19-inch models

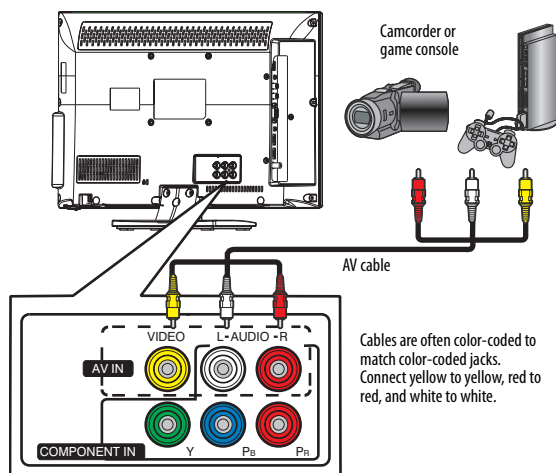

### 22-inch and 24-inch models

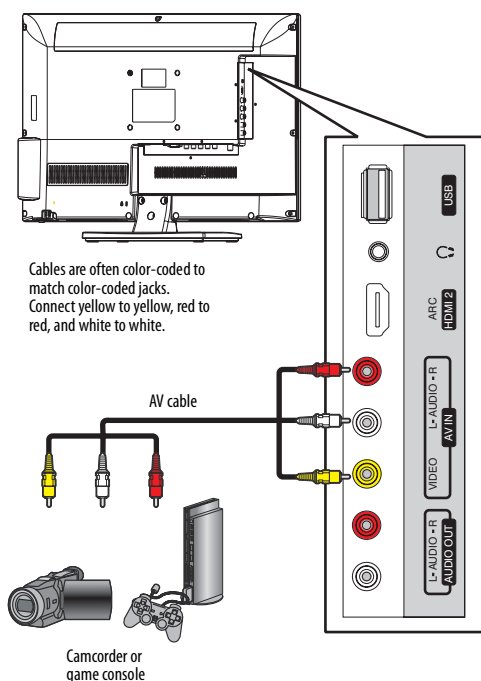



## Connecting a computer

### Tip


Some computers have an HDMI jack. You can use an HDMI cable to connect the computer for a better picture.

### Using VGA


#### To connect a computer using VGA:

- 1 Make sure that your TV's power cord is unplugged and the computer is turned off.
- 2 Connect a VGA cable (not provided) to the **PC IN VGA** jack on your TV and to the **VGA** jack on the computer.

#### 15-inch and 19-inch models

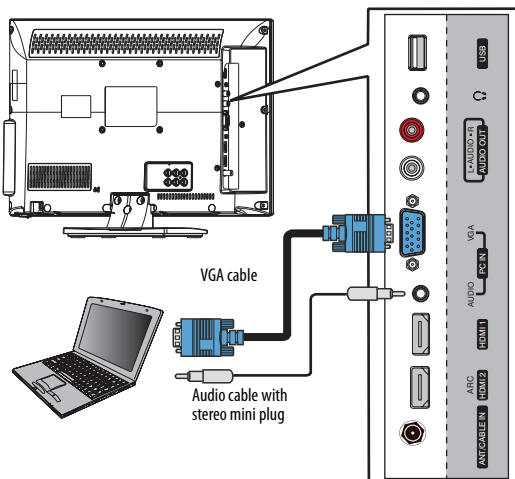

#### 22-inch and 24-inch models

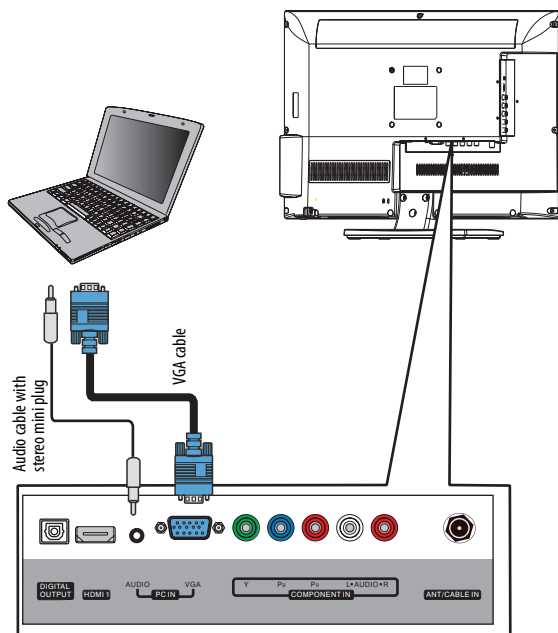


- 3 Connect an audio cable with stereo mini plug to the **PC IN AUDIO** jack on your TV and to the **LINE OUT** or **AUDIO OUT** jack on the computer.
- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the computer.
- 5 Press **INPUT** to open the *INPUT SOURCE* list.
- 6 Press **▲** or **▼** to select **VGA**, then press **ENTER**.
- 7 Adjust the display properties on the computer if necessary.

## Using HDMI


### To connect a computer using HDMI:

- 1 Make sure that your TV's power cord is unplugged and the computer is turned off.
- 2 Connect an HDMI cable (not included) to an **HDMI** jack on your TV and to the **HDMI OUT** jack on the computer.

#### 15-inch and 19-inch models

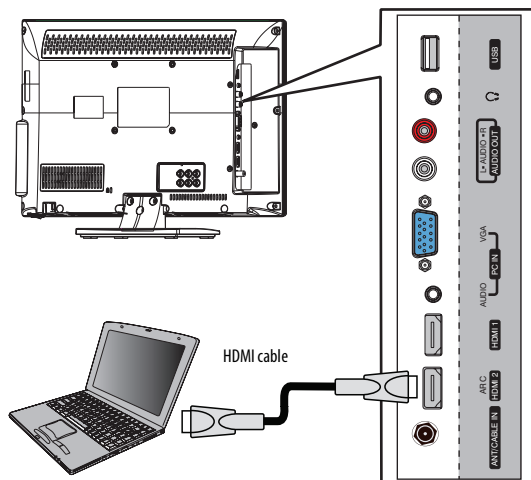

#### 22-inch and 24-inch models

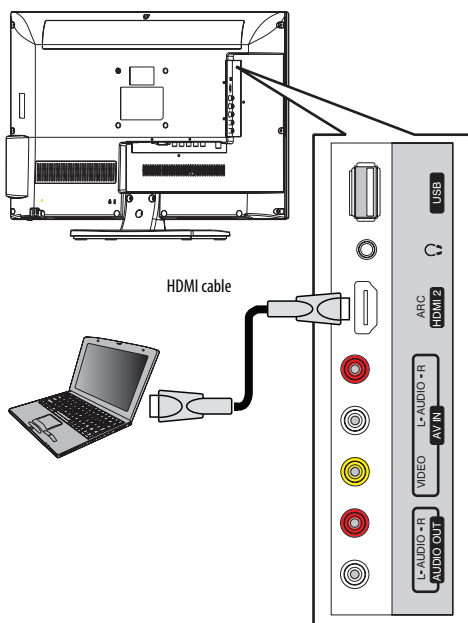

- 3 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the computer.
- 4 Press **INPUT** to open the **INPUT SOURCE** list.
- 5 Press **▲** or **▼** to highlight **HDMI 1** or **HDMI 2**, then press **ENTER**.

#### Note


You can also press **HDMI** repeatedly to select **HDMI 1** or **HDMI 2**.

## Connecting a USB flash drive


### To connect a USB flash drive:

- Plug a USB flash drive into the **USB** port on your TV.

#### 15-inch and 19-inch models

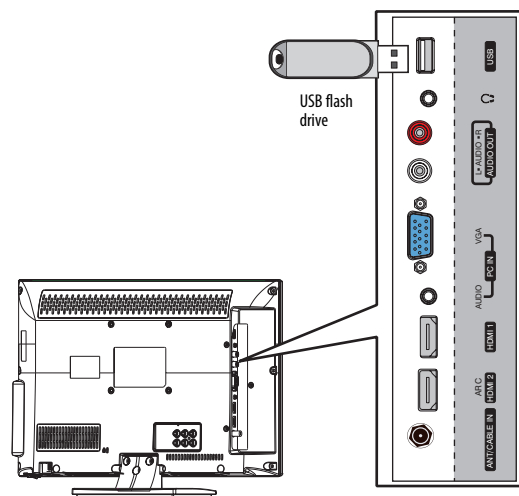

#### 22-inch and 24-inch models

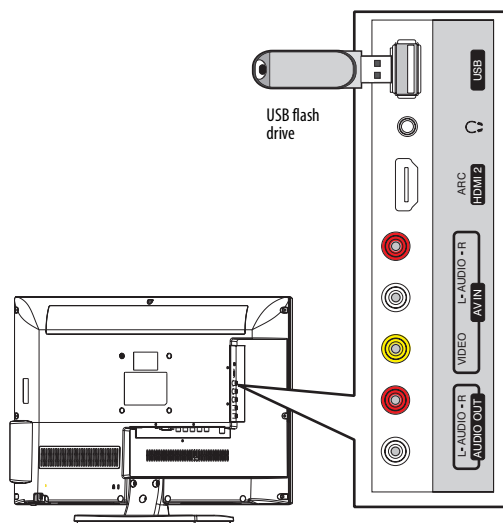

#### Caution

Do not remove the USB flash drive or turn off the TV while using the USB flash drive. You may lose data or damage the USB flash drive.

### To play from a USB flash drive:

- 1 Turn on your TV, then press **INPUT** to open the **INPUT SOURCE** list.
- 2 Press **▲** or **▼** to select **USB**, then press **ENTER**.

#### Notes

- Never remove the USB flash drive or turn off your TV while viewing JPEG pictures.
- The JPEG picture viewer only supports JPEG format images (with ".jpg" file extensions) and not all JPEG files are compatible with your TV. For more information, see "Using a USB flash drive" on page 55.


## Connecting headphones

The TV speakers are muted when headphones are attached.


### Warning

Loud noise can damage your hearing. When using headphones, use the lowest volume setting on your headphones that still lets you hear the sound.


### To connect headphones:

- Connect headphones to the  (headphone) jack on your TV.

#### 15-inch and 19-inch models

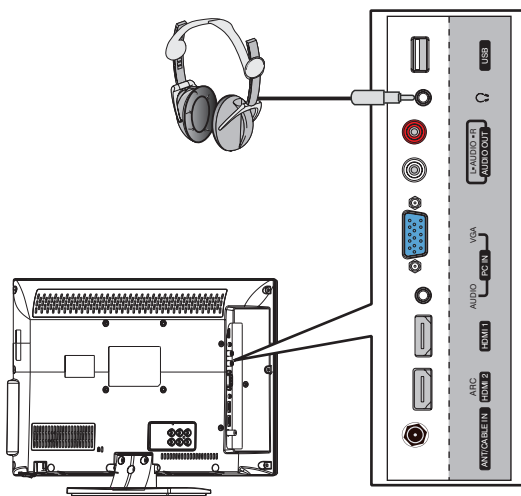

#### 22-inch and 24-inch models

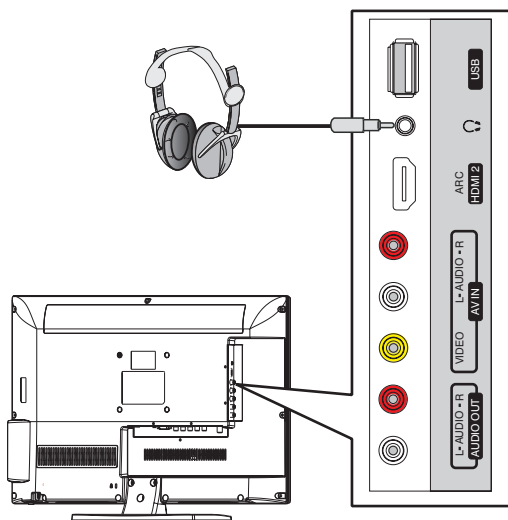


## Connecting a basic home theater system

### Using digital audio output (22-inch and 24-inch only)

#### To connect a basic home theater system using digital audio output:

- Make sure that your TV's power cord is unplugged and the home theater system is turned off.
- Connect a digital optical audio cable to the **DIGITAL OUTPUT** jack on your TV and to the digital optical audio jack on the digital home theater system.

#### 22-inch and 24-inch models

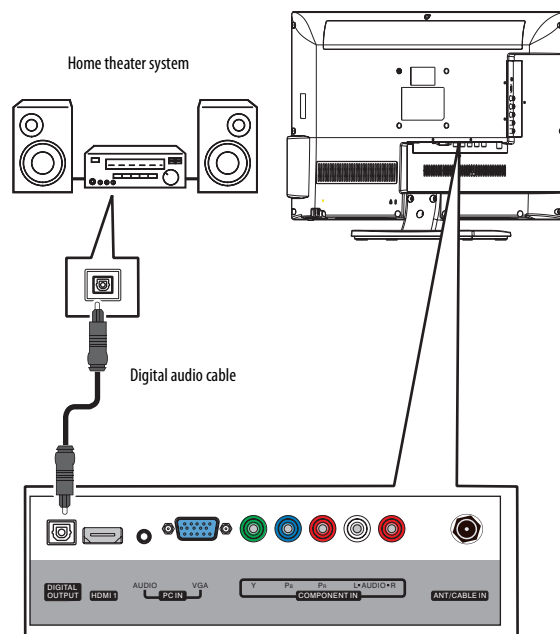


## Using analog audio output


### To connect a basic home theater system using analog audio output:

- 1 Make sure that your TV's power cord is unplugged and the home system is turned off.
- 2 Connect an audio cable to the **L/R AUDIO OUT** jack on your TV and to the **AUDIO IN** jacks on the home theater system.

#### 15-inch and 19-inch models

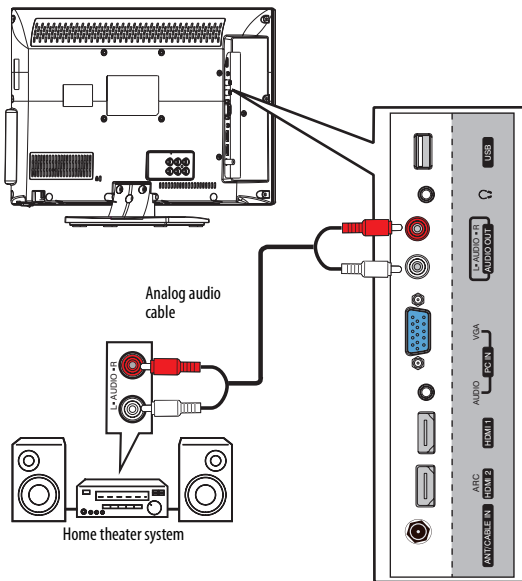

#### 22-inch and 24-inch models

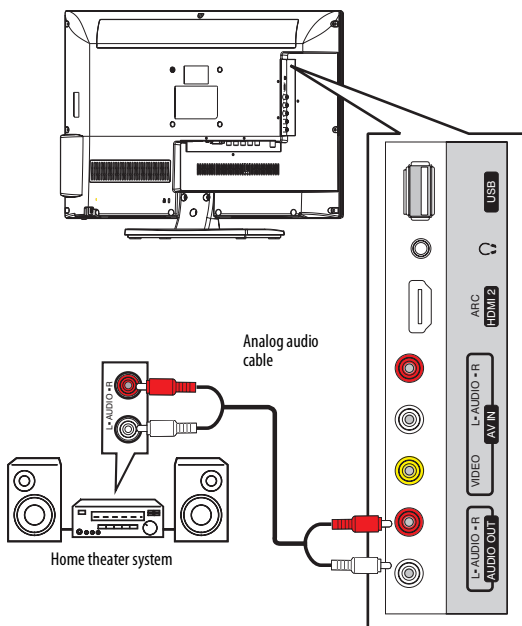


## Connecting a home theater system with multiple devices

### Notes

When connecting an AV receiver with the ARC function, we recommend that you connect the AV receiver's **HDMI OUT** jack to your TV's **HDMI2 (ARC)** jack by using an HDMI-ARC compliant cable.

In the following situations, the HDMI cable will route Dolby Digital audio to the AV receiver, so you do not need to connect a separate digital audio cable:

- Have a game console connected to one of your TV's **HDMI** jacks.
- When you watch a program through an antenna or cable TV connected to the **ANT/CABLE IN** jack.

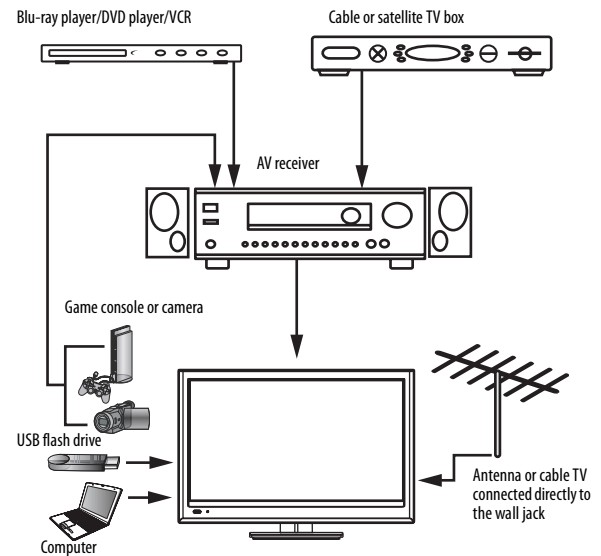

The connections you make depend on the video and audio jacks available on your devices. Refer to the documentation that came with your devices for connection information.


Just remember to use the best connection types available for the best picture and sound. For information about connection types, see "What connection should I use?" on page 12.

# Using the remote control


## Installing remote control batteries

### To install the remote control batteries:

- 1 While pressing the release latch on the back of the remote control, lift the battery cover off the remote control.

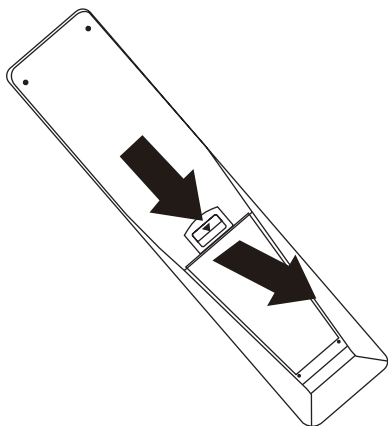

- 2 Insert two AAA batteries into the battery compartment. Make sure that you match the + and - symbols on the batteries with the + and - symbols in the battery compartment.

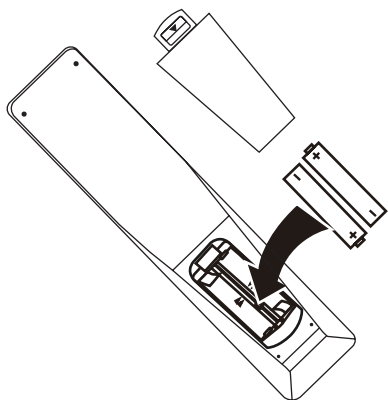

- 3 Replace the battery cover.

#### Cautions

- Batteries should not be exposed to excessive heat, such as sunshine, heat registers, or fire.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
- Make sure that batteries are disposed of correctly. Do not burn or incinerate.


#### Cautions

- Do not mix batteries of different types.
- Do not mix old and new batteries.
- If the remote control is not going to be used for an extended period of time, remove the batteries.

## Aiming the remote control

### To aim the remote control:


- Point the remote control towards the remote sensor on the front of your TV.

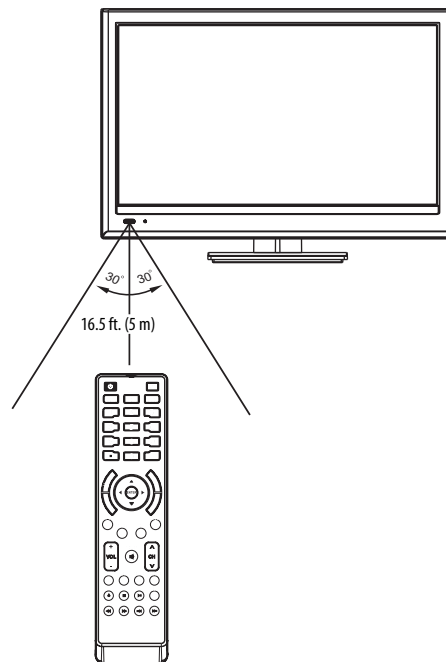



## Turning on your TV for the first time


The first time you turn on your TV, the Setup Wizard opens. The Setup Wizard guides you through setting up basic settings including the menu language, time setting, picture mode, TV signal source, and the channel list.


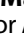
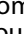

### To set up your TV:

- 1 Make sure that you have:
  - Installed the remote control batteries. (See page 27 for details.)
  - Connected an antenna, cable TV, or satellite TV. (See page 13 or 17 for details.)
  - Connected the power cord. (See page 13 for details.)
- 2 Press  (power) to turn on your TV. The *Choose Your Menu Language* screen opens.





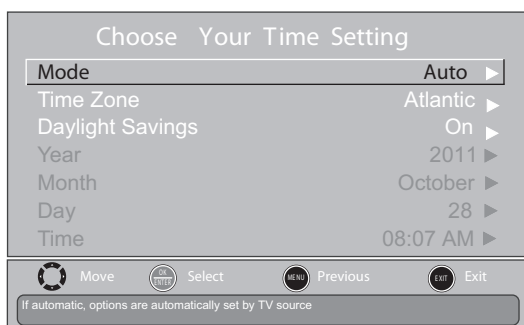















- 3 Press  or  to highlight the language you want, then press **ENTER**. The *Choose Your Time Setting* screen opens.



- 4 Press  or  to highlight **Mode**, then press  or  to select **Manual** (to set the date and time manually) or **Auto** (to set the date and time automatically from a TV signal source based on the time zone you select).

#### Note

If you select **Auto**, the displayed time will be incorrect until your TV gets the correct time from a TV signal source.


- 5 Press  or  to highlight **Time Zone**, then press  or  to select your time zone. You can select **Eastern, Central, Mountain, Pacific, Alaska, Hawaii, Newfoundland, or Atlantic**.
- 6 Press  or  to highlight **Daylight Savings**, then press  or  to select **On** (if your viewing area observes Daylight Savings Time) or **Off** (if your viewing area does not observe Daylight Savings Time).
- 7 If you selected **Manual** for **Mode**, set the date by pressing  or  to highlight **Year, Month, or Day**, then pressing  or  to adjust the setting.
- 8 If you selected **Manual** for **Mode**, set the time by pressing  or  to highlight **Time**, then pressing  or  to select the hour, minute, or AM/PM field. Press  or  to adjust the setting.
- 9 Press **ENTER**. The *Choose Your Picture Mode* screen opens.



- 10 Press  or  to highlight **Home Mode** or **Retail Mode**, then press **ENTER**.

If you selected **Retail Mode**, a message appears asking "Are you sure you want retail mode? In this mode, ENERGY STAR savings are not realized." Select **Yes** to continue, or select **No** to change your selection.

The *Choose Your TV Source* screen opens.

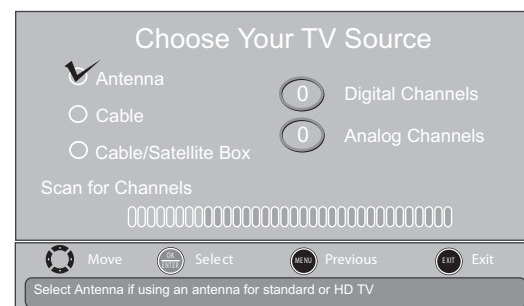

- 11 Press **▲** or **▼** to highlight **Antenna**, **Cable**, or **Cable/Satellite Box** (if your cable TV uses a box, select **Cable/Satellite Box**), then press **ENTER**. If you chose **Antenna** or **Cable**, your TV automatically starts scanning for channels available in your viewing area. If you chose **Cable/Satellite box**, your TV does not need to scan for channels.

During auto channel search, your TV searches for digital channels first. When the digital channel search is complete, a message appears asking if you want to search for analog channels. Select **Yes** to continue searching for analog channels, or select **No** to stop searching for channels.

#### Note

You can press **EXIT** to stop the auto channel search, but you will need to run the auto channel search again to create a channel list.

- 12 To watch TV, press **INPUT**, press **▲** or **▼** to highlight the video input source for your TV in the **INPUT SOURCE** list, then press **ENTER**.
- If your TV is connected to an antenna, cable TV (no box), or cable or satellite TV box using a coaxial cable, select **TV**.
  - If your TV is connected to a cable or satellite box using an HDMI cable or HDMI cable with a DVI adapter, select **HDMI1** or **HDMI2**.
  - If your TV is connected to a cable or satellite box using a component video cable, select **Component**.
  - If your TV is connected to a cable or satellite box using a composite video cable, select **AV**.

## Understanding the basics

### Turning your TV on or off

#### To turn your TV on or off:

- 1 Make sure that the power cord is connected to a power outlet.
- 2 Press **⏻** (power) to turn on your TV. The power indicator LED turns blue.
- 3 Press **⏻** (power) again to turn off your TV. Your TV enters standby mode and the power indicator LED turns red.

#### Warning

When your TV is in standby mode, it is still receiving power. To completely disconnect power, unplug the power cord.

#### Note

If your TV does not receive an input signal for several minutes, it automatically goes into standby mode.

### Selecting the video input source

#### To select the video input source:

- 1 Turn on your TV, then press **INPUT**. The **INPUT SOURCE** list opens.

#### Note

If the **Auto Input Sensing** feature is turned on (default setting), the device connected to the video jack must be turned on to select it in the **Input Source** list.

For more information, see "Turning Auto Input Sensing on or off" on page 48.

#### INPUT SOURCE

TV

AV

Component

HDMI1

HDMI2

VGA

USB

#### Note

If your TV is connected to an antenna, cable TV (no box), or cable or satellite box using a coaxial cable, select **TV** to watch TV.

If your TV is connected to a cable or satellite box using a different video connection, select the matching video input source to watch TV.

You can also press a direct input button to select the video input source.


- Press **TV** to select **TV** (if your TV is connected to an antenna, cable TV (no box), or cable or satellite TV using a coaxial cable).
- Press **VIDEO** to select **AV IN VIDEO**.
- Press **COMP** to select **COMPONENT IN**.
- Press **HDMI** once to select **HDMI1**. Press twice to select **HDMI2**.

## On-screen menu overview

### Notes

- Depending on the signal source selected, you may see different options on your screen. The following menus are shown in TV mode (except the USB menu).
- Menu items that are not selectable are grayed out.
- Menus in this manual are described in TV mode, unless otherwise indicated.
- The screens shown in this manual are for explanation purposes and may vary from the actual screens on your TV.

### Picture menu (TV mode)

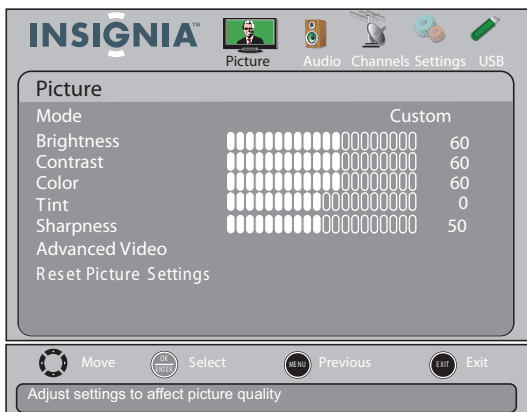


### Audio menu (TV mode)



### Channels menu (TV mode)




### Settings menu (TV mode)

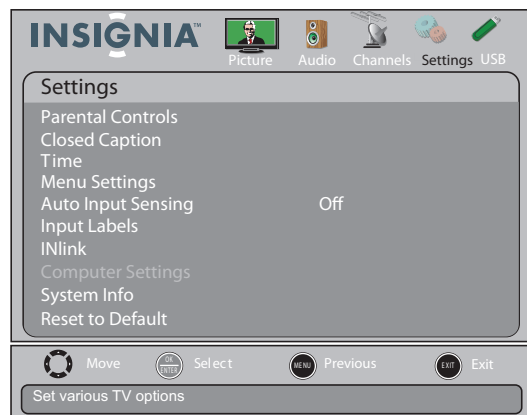

### USB menu (USB mode)



## Navigating the menus

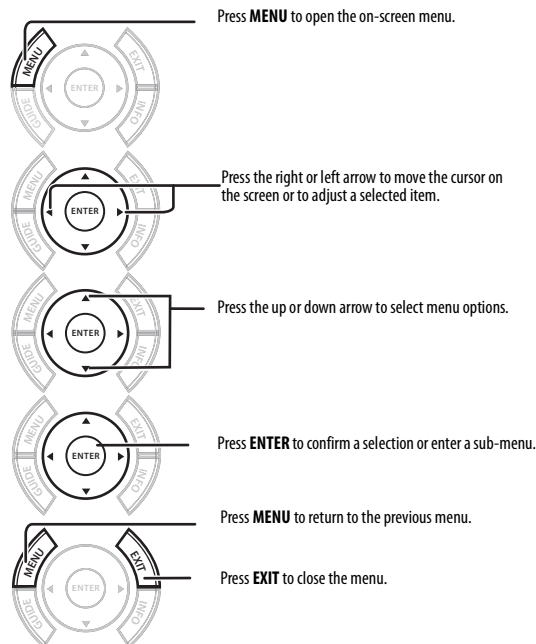



## Selecting a channel

### To select a channel:

- Press **CH**  $\wedge$  or **CH**  $\vee$  to go to the next or previous channel on the memorized channel list.
- Press the number buttons to enter the channel number you want, then wait for the channel to change or press **ENTER** to immediately change the channel.
- To select a digital sub-channel, press the number buttons to select the main digital channel, press **.** (dot), then press the number button for the sub-channel. Wait for the channel to change, or press **ENTER** to immediately change the channel. For example, to tune to channel 5.1, press **5**, **.** (dot), then **1**.

#### Note

Button presses must be within three seconds of each other.

- Press **RECALL** to go to the last viewed channel.
- Press **CH-LIST** to open the channel list, press  $\blacktriangle$  or  $\blacktriangledown$  to highlight a channel, then press **ENTER**. Hidden channels are grayed and cannot be selected. See "Hiding channels" on page 36.
- Press **FAVORITE** to open the favorite channel list, press  $\blacktriangle$  or  $\blacktriangledown$  to highlight a channel, then press **ENTER**.

#### Note

If a list has more than one page, press  $\blacktriangle$  or  $\blacktriangledown$  to scroll through the pages.

## Adjusting the volume

### To adjust the volume:

- Press **VOL +** or **VOL -** to increase or decrease the volume.
- Press **MUTE** to turn off the sound. Press **MUTE** again to turn the sound back on.

## Viewing channel information

### To view channel information:

- Press **INFO** to view an information banner. The information banner shows the current program information such as channel number, video input source, and resolution.
  - Digital channel information—Displays the channel number, station name, channel label, broadcast program name, TV rating, signal type, audio information, resolution, CC mode, current time, and current program start and end times.
  - Analog channel information—Displays channel number, channel label (if preset), signal type, audio information, and resolution.
- Press **GUIDE** to show the digital program guide, which may show a list of available programs, program times, and program summaries, depending on the information provided by the broadcaster.


## Viewing system information

### To view system information:

- 1 Press **MENU**. The on-screen menu opens.



- 2 Press  $\blacktriangleleft$  or  $\blacktriangleright$  to highlight **Settings**, then press  $\blacktriangledown$  or **ENTER**. The *Settings* menu opens.

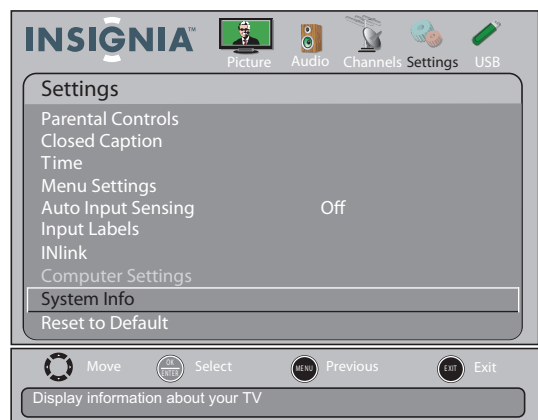


- 3 Press  $\blacktriangle$  or  $\blacktriangledown$  to highlight **System Info**, then press **ENTER**. A screen opens that displays your TV's *Model Name* and *Firmware Version*.
- 4 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Adjusting the picture

### Adjusting the TV picture

To adjust the TV picture:

- 1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

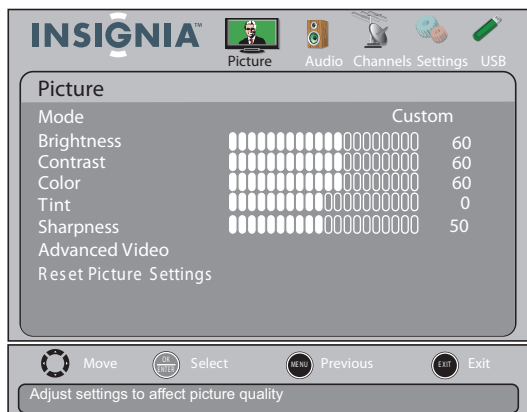

- 2 Press **▼** or **ENTER** to access the menu.
- 3 Press **▲** or **▼** to highlight an option, then press **ENTER** to access the option. You can select:


- **Mode**—Selects the picture mode. You can select:
  - **Vivid**—(a bright and vivid picture). Significantly increases the contrast, brightness, and sharpness. This selection is good for video games, animation, and in bright light environments.
  - **Standard**—(a standard picture). Moderately increase the contrast, brightness, and sharpness. This selection is good for standard TV broadcasts.
  - **Theater**—(a finely detailed picture). Adjusts the brightness and contrast and lowers the sharpness for a more realistic picture. This selection is good for watching the highest quality video such as Blu-ray Discs, DVDs, and HDTV.
  - **Energy Savings**—(the backlight brightness is decreased). Your TV has a backlight that provides light for displaying a picture. By reducing the amount of light, your TV uses less energy.
  - **Custom**—(customized picture). Lets you manually adjust picture settings such as brightness, contrast, and sharpness.

#### Note

You can also press **PICTURE** to select the picture mode.

- **Brightness**—Adjusts the brightness of the dark areas of the picture.
- **Contrast**—Adjusts the brightness of the light areas of the picture.
- **Color**—Adjusts the color intensity of the picture. A low setting may make the color look faded. A high setting may make the color look artificial.

- **Tint**—Adjusts the color balance of the picture. Use this control to make skin tones look more natural.
- **Sharpness**—Adjusts the color detail of images. If you set this control too high, dark images may appear with light or white edges.
- **Advanced Video**—Opens the *Picture-Advanced Video* menu where you can adjust additional video options.

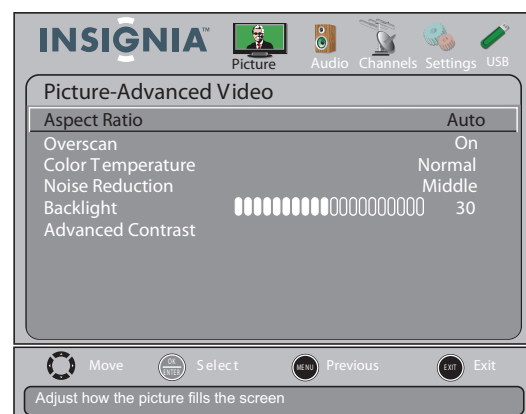

- **Aspect Ratio**—Selects the aspect ratio of the picture.

Aspect ratio option	Example
<b>Normal:</b> Displays the original aspect ratio. If the original aspect ratio is 4:3, the TV image appears with vertical black bars on the left and right of the image.	
<b>Zoom:</b> Expands the image to fill the screen. The top and bottom of the image may be cropped.	
<b>Wide:</b> Use this option to view content recorded in a 16:9 (wide-screen) aspect ratio.	
<b>Cinema:</b> Stretches the image at the edges, but keeps a clear image in the center.	
<b>Auto:</b> Automatically adjusts the image based on the screen size and the TV program. <b>Note:</b> <b>Auto</b> is only available when <b>Auto Zoom</b> in the <b>CHANNELS</b> menu is set to <b>On</b> .	

#### Note


You can also press **ZOOM** to select the aspect ratio.

- **Overscan**—Adjusts the picture's reproduction rate. You can select **On** or **Off**.
  - **Color Temperature**—Selects the color temperature. You can select **Cool** (to enhance the blues), **Normal**, or **Warm** (to enhance the reds).
  - **Noise Reduction**—Selects the noise reduction mode to reduce picture noise (snow). You can select **Low**, **Middle**, **High**, or **Off**.
  - **Backlight**—Sets the overall brilliance of the screen. When **Dynamic Contrast Ratio** is turned on, you cannot change the backlight setting.
  - **Advanced Contrast**—Selects from:
    - **Adaptive Contrast**—Automatically adjusts picture detail and brightness. You can select **On** or **Off**.
    - **Dynamic Contrast Ratio**—Enhances the contrast ratio between light and dark areas of the picture. You can select **On** or **Off**. When this option is turned on, you cannot change the backlight option.
  - **Reset Picture Settings**—Resets all picture settings to factory mode.
- 4 Press **◀** or **▶** to adjust the option, or press **▲** or **▼** to select a setting.
  - 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.


## Adjusting the computer image

### To adjust the computer image:


- 1 Make sure that your TV is in VGA mode. For more information, see "Selecting the video input source" on page 29.
- 2 Press **MENU**. The on-screen menu opens.

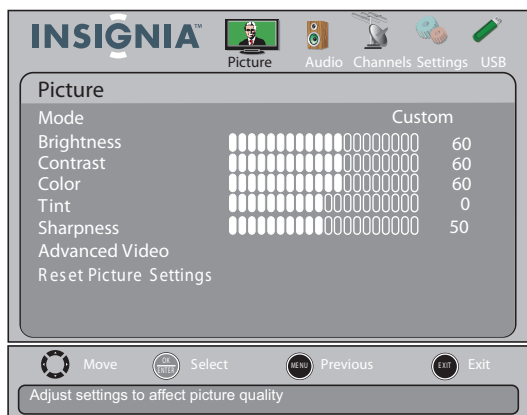

- 3 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

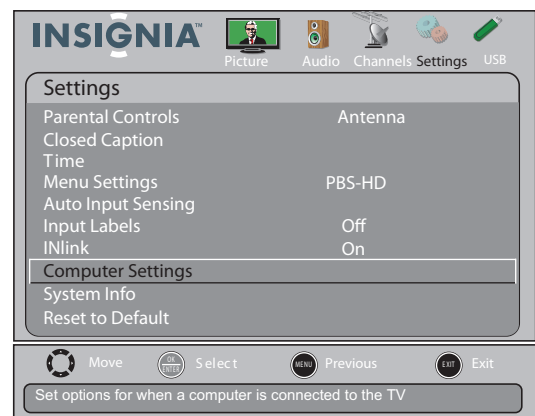

- 4 Press **▲** or **▼** to highlight **Computer Settings**, then press **ENTER**. The *Settings-Computer Settings* menu opens.

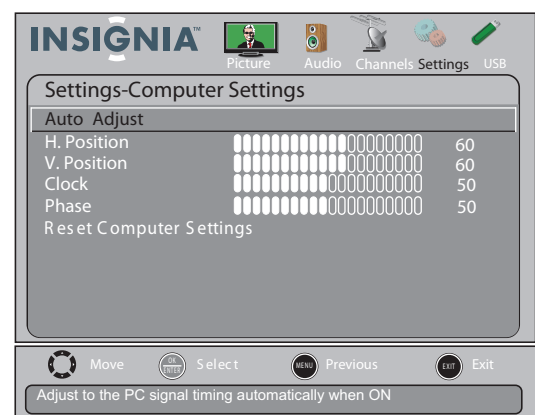


- 5 Press **▲** or **▼** to highlight an option, then press **ENTER** to access the option. You can select:
  - **Auto Adjust**—Automatically adjusts the image settings such as position and phase.
  - **H. Position**—Moves the image right or left.
  - **V. Position**—Moves the image up or down.
  - **Clock**—Adjusts the sample frequency.
  - **Phase**—Adjusts the focus of stable images.
  - **Reset Computer Settings**—Resets all computer settings to factory mode.
- 6 Press **◀** or **▶** to adjust the option, or press **▲** or **▼** to select a setting.
- 7 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Adjusting the sound

### Adjusting sound settings

To adjust sound settings:

- 1 Press **MENU**. The on-screen menu opens.

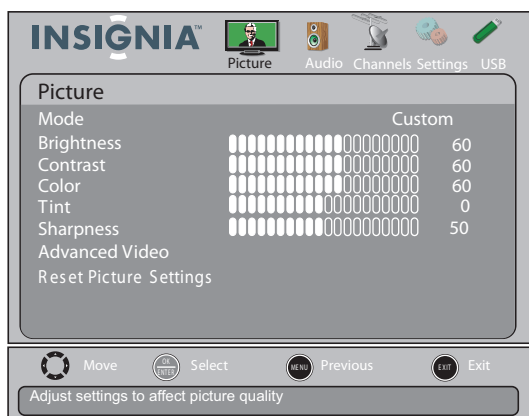

- 2 Press **◀** or **▶** to highlight **Audio**, then press **▼** or **ENTER**. The **Audio** menu opens.



- 3 Press **▲** or **▼** to highlight an option, then press **ENTER** to access the option. You can select:

- **SRS TruSurround HD**—Provides an impressive, feature-rich surround sound experience from two speakers, complete with rich bass, high frequency detail, and clear dialog.
- **Treble**—Adjusts the high sounds.
- **Bass**—Adjusts the low sounds.
- **Balance**—Adjusts the balance between the left and right audio channels.

#### Note

You can quickly adjust **SRS**, **Treble**, or **Balance** or reset audio settings by using the **AUDIO** and **◀** or **▶** buttons on the remote control. Press **AUDIO** repeatedly to toggle between the **SRS**, **Bass**, **Treble**, **Balance**, and **Reset Audio Settings** screens, then press **◀** or **▶** to adjust the option.

- **Digital Audio/SPDIF**—Sends digital audio to an external audio system. You can select **PCM** (to output audio in 2-channel stereo), or **RAW** (to pass through the original digital audio sound).

- **Audio Language**—(Digital channels only) Selects an alternate audio language, if available.
- **MTS/SAP**—(Analog channels only) Selects the audio mode. You can select:
  - **MONO**—Select this option if there is noise or static on weak stereo broadcasts.
  - **STEREO**—Select this option for programs broadcast in stereo.
  - **SAP**—Select this option to listen to a secondary audio program, if available.

#### Note

You can also press **MTS/SAP** one or more times to select the audio mode.


- **Reset Audio Settings**—Resets all audio settings to factory defaults.
- 4 Press **◀** or **▶** to adjust the option, or press **▲** or **▼** to select a setting.
  - 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

### Playing TV audio only


You can turn off the picture on your TV and listen to the program audio only.

To play TV audio only:

- 1 Press **MENU**. The on-screen menu opens.

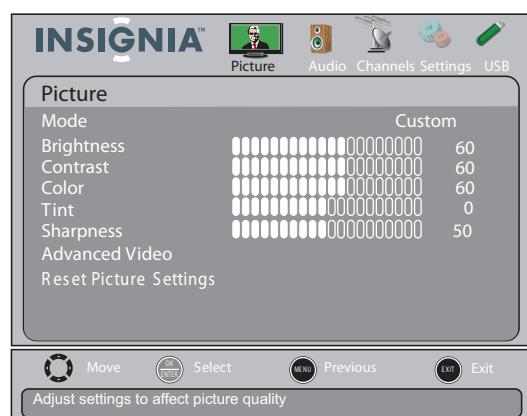

- 2 Press **◀** or **▶** to highlight **Channels**, then press **▼** or **ENTER**. The **Channels** menu opens.

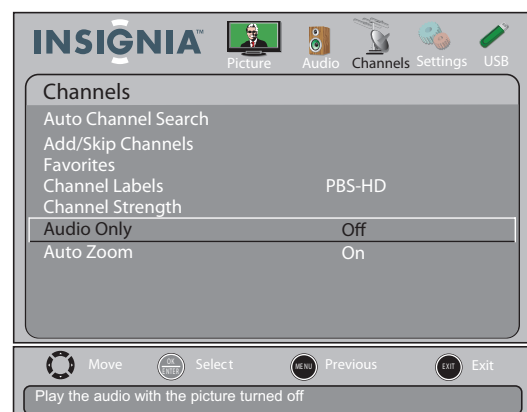

- 3 Press **▲** or **▼** to highlight **Audio Only**, then press **ENTER**.

- 4 Press **▲** or **▼** to select **On**.
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

#### Notes

- After you close the menu, the picture will turn off in about 10 seconds.
- **Audio Only** works only when the input source is TV, and your TV is receiving a broadcast signal.
- To exit audio only mode, press any button. When you exit audio only mode, the **Audio Only** option is automatically reset to **Off**.

## Changing channel settings


### Automatically scanning for channels

When you scan for channels, your TV searches for channels with signals and stores the channel information in the channel list. When you press **CH ▲** or **CH ▼**, your TV goes to the next or previous channel in the channel list.


If the TV signal source changes, for example you change from an outdoor antenna to cable TV (no box), you need to scan for channels.

#### To automatically scan for channels:

- 1 Press **MENU**. The on-screen menu opens.

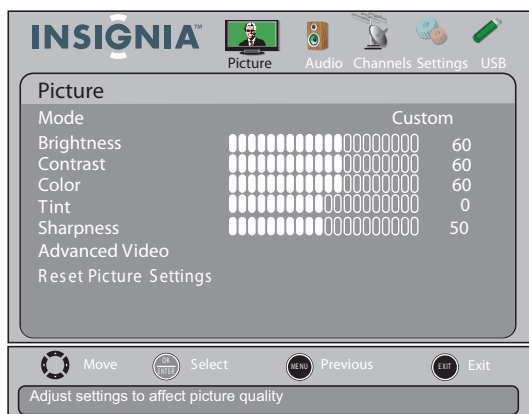

- 2 Press **◀** or **▶** to highlight **Channels**, then press **▼** or **ENTER**. The **Channels** menu opens.

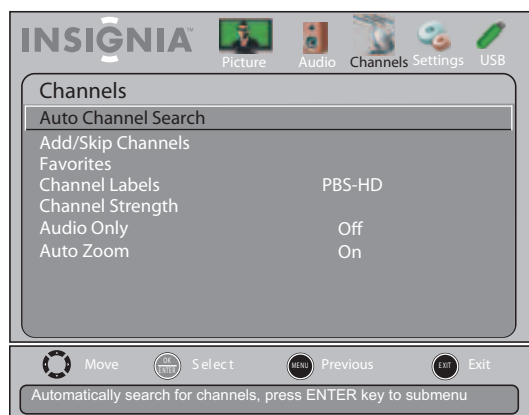

- 3 Press **▲** or **▼** to highlight **Auto Channel Search**, then press **ENTER**. The **Channels-Auto Channel Search** screen opens.



- 4 Press **▲** or **▼** to highlight **Antenna**, **Cable**, or **Cable/Satellite Box**, then press **ENTER**.
  - If you are using an antenna for a standard or HDTV signal, select **Antenna**.
  - If your cable is connected directly to the TV (using no tuner box), select **Cable**.
  - If your cable is connected to your TV through a tuner box, select **Cable/Satellite Box**.

If you selected **Antenna** or **Cable**, your TV searches automatically for available channels in your area and stores the channel information in the channel list. This may take several minutes. While searching, the TV displays a progress report.

#### Or,

If you selected **Cable/Satellite Box**, the channel search is not necessary.

#### Note


You can press **EXIT** to stop the auto channel search, but you will need to run the auto channel search again to create a channel list.

## Hiding channels


You can hide channels in the channel list. When you press **CH**  $\wedge$  or **CH**  $\vee$ , your TV skips the hidden channels. You can still tune to a hidden channel by pressing the number buttons for the channel.

### To hide channels:


- 1 Press **MENU**. The on-screen menu opens.

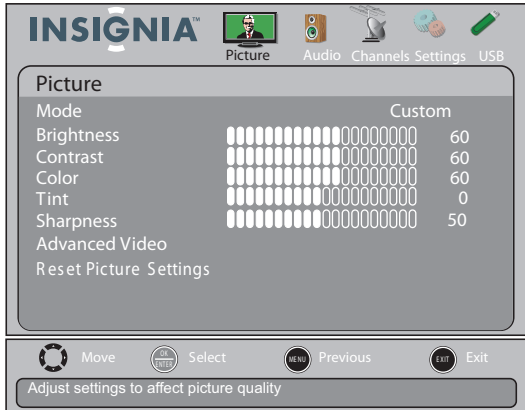

- 2 Press  $\leftarrow$  or  $\rightarrow$  to highlight **Channels**, then press  $\vee$  or **ENTER**. The *Channels* menu opens.

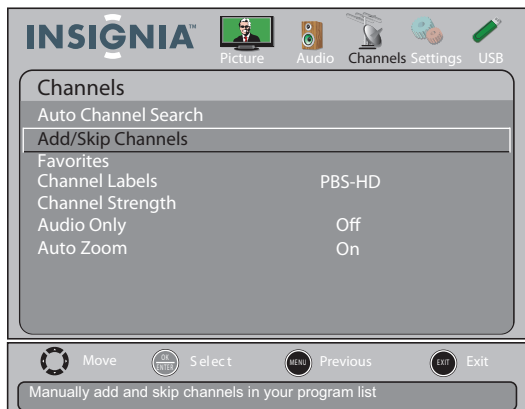

- 3 Press  $\blacktriangle$  or  $\blacktriangledown$  to highlight **Add/Skip Channels**, then press **ENTER**. The *Channels-Add/Skip Channels* screen opens.

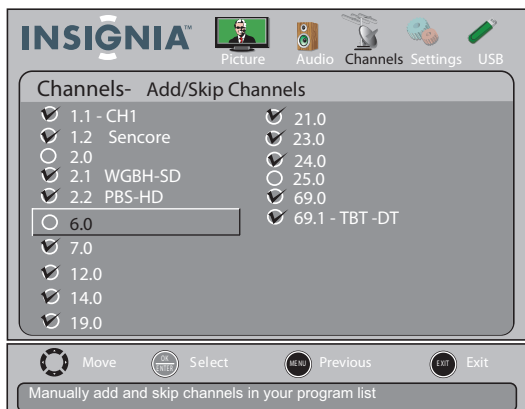

- 4 Press  $\blacktriangle$   $\blacktriangledown$   $\leftarrow$  or  $\rightarrow$  to highlight the channel you want to hide, then press **ENTER**. The check mark disappears.

### Notes

- A channel with a check mark is not hidden. A channel with no check mark is hidden.
- If the list has more than one page, press  $\blacktriangle$  or  $\blacktriangledown$  to scroll through the pages.
- When you press **CH-LIST**, hidden channels are grayed in the channel list and cannot be selected.


- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Setting up a favorite channel list

You can create a favorite channel list so you can quickly browse through your favorite channels by pressing **FAVORITE**, then selecting a channel from the favorite channel list.

### To set up a favorite channel list:

- 1 Press **MENU**. The on-screen menu opens.

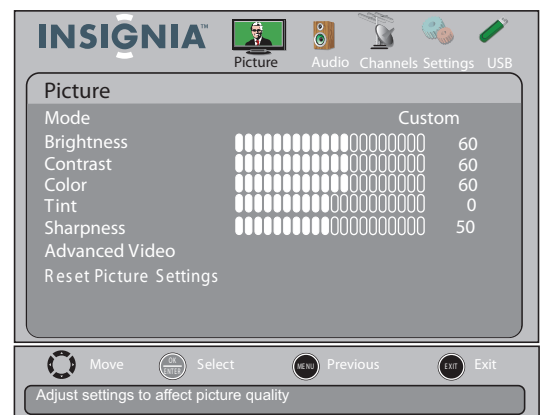


- 2 Press  $\leftarrow$  or  $\rightarrow$  to highlight **Channels**, then press  $\vee$  or **ENTER**. The *Channels* menu opens.





- 3 Press **▲** or **▼** to highlight **Favorites**, then press **ENTER**. The *Channels-Favorites* screen opens.

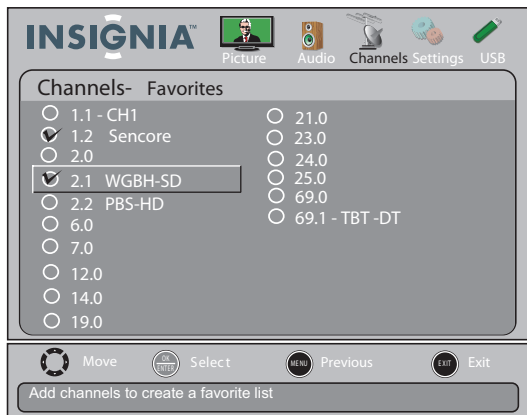

- 4 Press **▲** **▼** **◀** or **▶** to highlight the channel you want to add to the favorites list, then press **ENTER**. A check mark appears next to the channel.

#### Notes

- To remove a channel from the favorites list, highlight the channel, then press **ENTER**. The check mark disappears and the channel is removed from the list.
- If the list has more than one page, press **▲** or **▼** to scroll through the pages.

- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Viewing a favorite channel

### To view a favorite channel:


- Press **FAVORITE**. The favorite channel list opens.
- Press **▲** or **▼** to highlight a channel, then press **ENTER**.

## Adding or changing a channel label

If a channel is not already labeled, you can label the channel to make it easier to identify. You can also relabel a channel that is already labeled.

### To add or change a channel label:

- Press **MENU**. The on-screen menu opens.

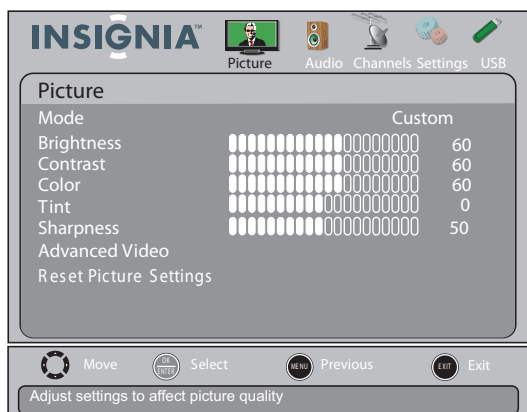

- 2 Press **◀** or **▶** to highlight **Channels**, then press **▼** or **ENTER**. The *Channels* menu opens.



- 3 Press **▲** or **▼** to highlight **Channel Labels**, then press **ENTER**. The *Channels-Channel Labels* screen opens with the channel number field highlighted.



- 4 Press **▲** or **▼** to select the channel you want to label, then press **▶** to move to the channel label field.



- 5 Press **▲** or **▼** to select a character, then press **◀** or **▶** to move to the previous or next character position. Repeat this step to enter additional characters. You can enter as many as 11 characters.


- 6 When you have completed the label, press **MENU**.
- 7 Press **EXIT** to close the menu.

## Checking the digital signal strength

You can check the digital signal strength to determine if you need to adjust your antenna or digital cable input. The higher the signal strength, the less likely you are to experience picture degradation.

### To check the digital signal strength:

- 1 Press **MENU**. The on-screen menu opens.

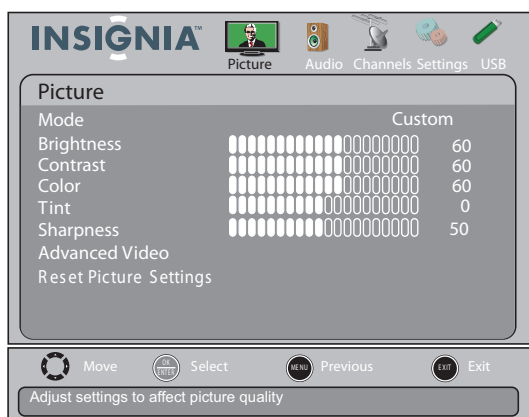

- 2 Press **◀** or **▶** to highlight **Channels**, then press **▼** or **ENTER**. The **Channels** menu opens.



- 3 Press **▲** or **▼** to highlight **Channel Strength**, then press **ENTER**. The signal strength meter is displayed.




- 4 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Turning Auto Zoom on or off


When **Auto Zoom** is turned on and **Auto aspect ratio** is selected, your TV automatically adjusts the aspect ratio based on the screen size and the aspect ratio of the TV program.

### To turn Auto Zoom on or off:

- 1 Press **MENU**. The on-screen menu opens.

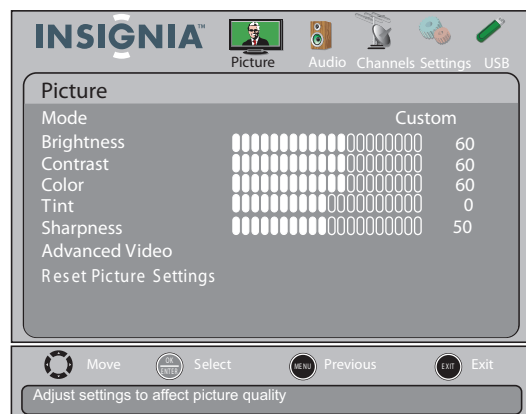

- 2 Press **◀** or **▶** to highlight **Channels**, then press **▼** or **ENTER**. The **Channels** menu opens.

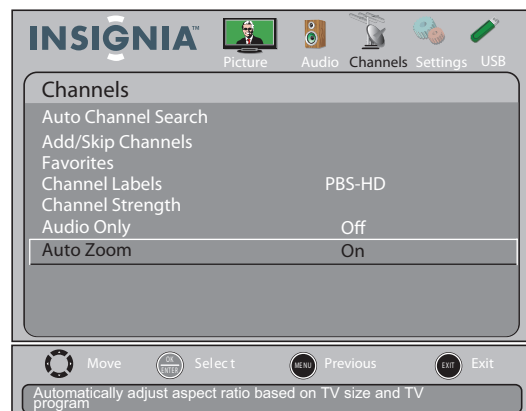

- 3 Press **▲** or **▼** to highlight **Auto Zoom**, then press **ENTER**.
- 4 Press **▲** or **▼** to select **On** or **Off**.
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.




# Setting parental controls

## Setting or changing the password


Parental controls let you prevent your children from watching inappropriate material on TV. When set, parental controls read the rating of the program (with some exceptions, such as news and sports) and deny access to programs that exceed the ratings level you select. To watch programs that exceed the selected rating, you must enter a password.

### To set or change the password:


- 1 Press **MENU**. The on-screen menu opens.

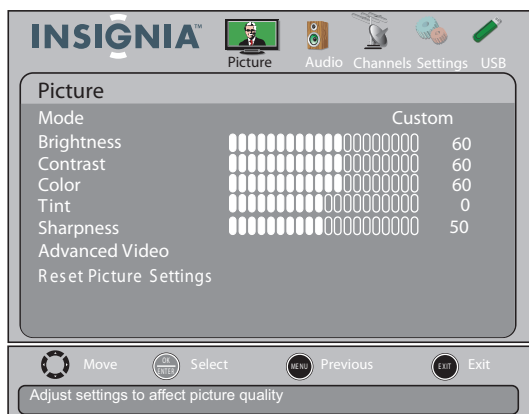


- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens with **Parental Controls** highlighted.

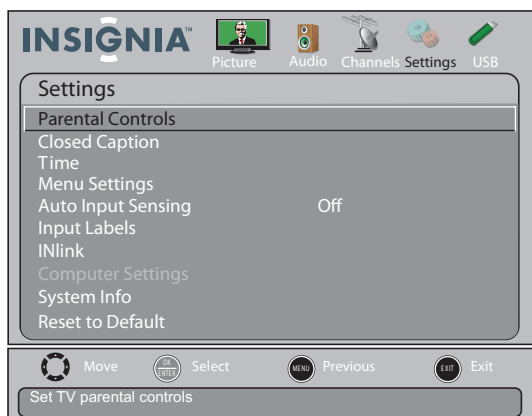


- 3 Press **ENTER**. The *Enter Password* screen opens.

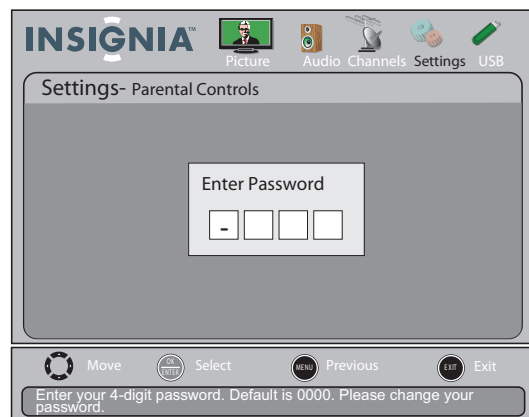

- 4 Press the number buttons to enter the four-digit password. The default password is **0000**. You should change the password to a number you can remember. The *Parental Controls* menu opens.

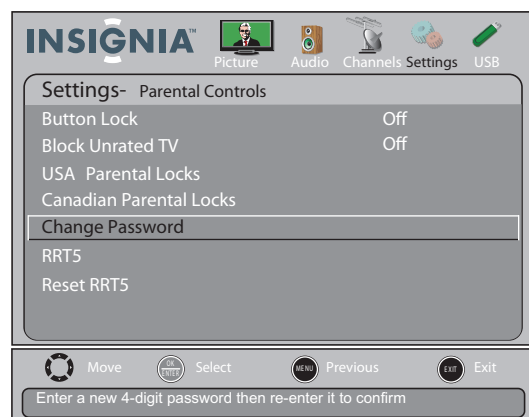

- 5 Press **▲** or **▼** to highlight **Change Password**, then press **ENTER**. The *Settings-Parental Controls-Change Password* screen opens.

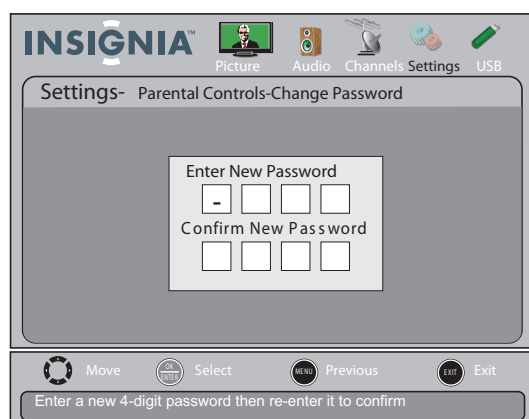

- Press the number buttons to enter a password, then enter the password again. "Password successfully changed" is displayed.

#### Note

If you forget your password, enter **9999**.


- Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Locking control buttons


When the button lock is turned **On**, the buttons on the side of your TV are locked and you can only operate your TV using the remote control.

### To lock control buttons:


- Press **MENU**. The on-screen menu opens.

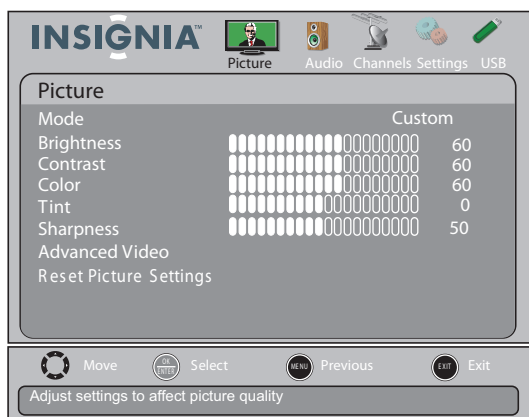


- Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The **Settings** menu opens with **Parental Controls** highlighted.

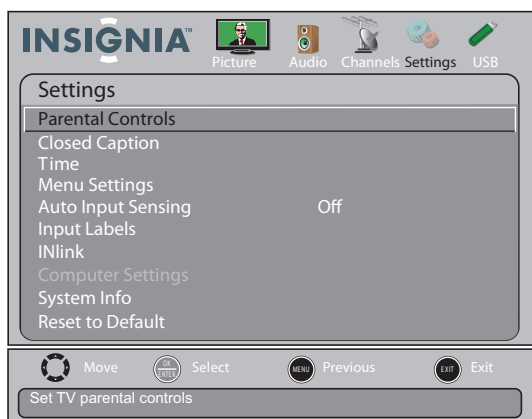

- Press **ENTER**. The **Enter Password** screen opens.

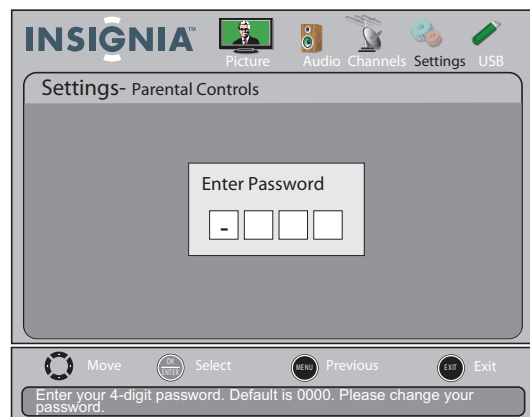

- Press the number buttons to enter the four-digit password. The **Settings-Parental Controls** menu opens with **Button Lock** highlighted.

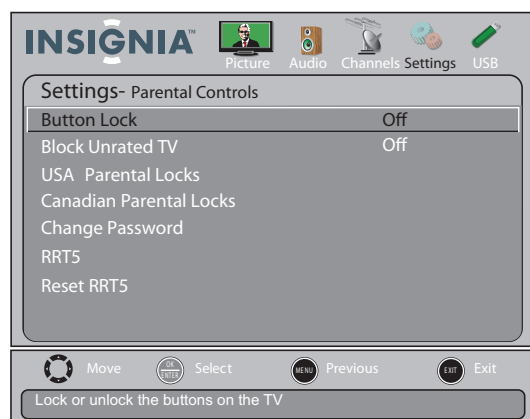


- Press **ENTER**.
- Press **▲** or **▼** to select **On** (locks the buttons) or **Off** (unlocks the buttons).
- Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.


## Blocking unrated TV

### To block unrated TV:


- 1 Press **MENU**. The on-screen menu opens.

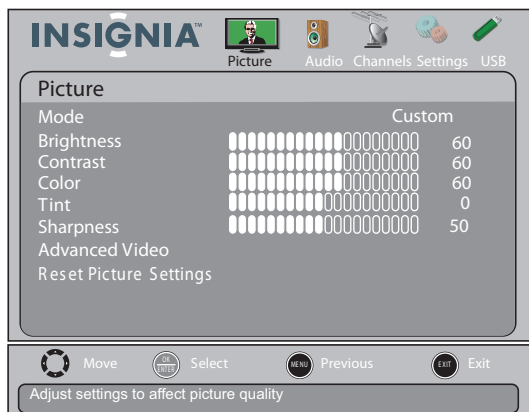


- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The **Settings** menu opens with **Parental Controls** highlighted.

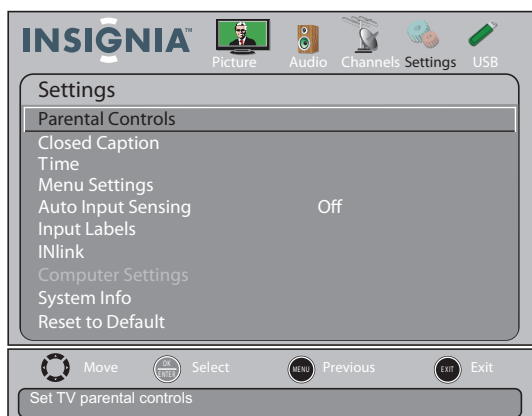

- 3 Press **ENTER**. The **Enter Password** screen opens.

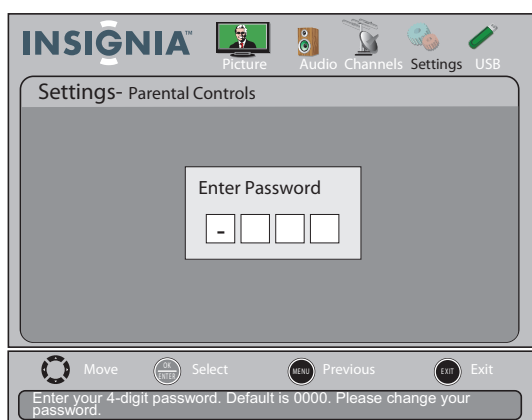

- 4 Press the number buttons to enter the four-digit password. The **Settings-Parental Controls** menu opens.

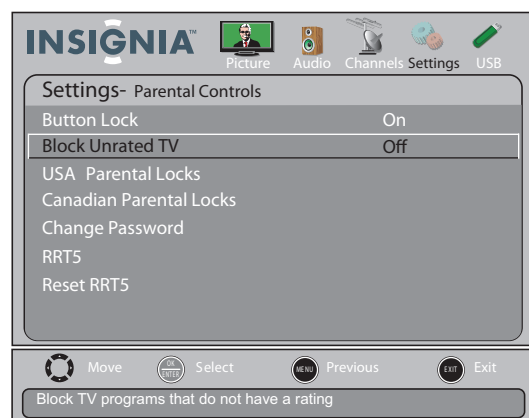


- 5 Press **▲** or **▼** to highlight **Block Unrated TV**, then press **ENTER**.
- 6 Press **▲** or **▼** to select **On** (to block unrated TV) or **Off** (to unblock unrated TV).
- 7 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Setting parental control levels


You can set parental controls for the U.S. and Canada.

### To set parental control levels:


- 1 Press **MENU**. The on-screen menu opens.

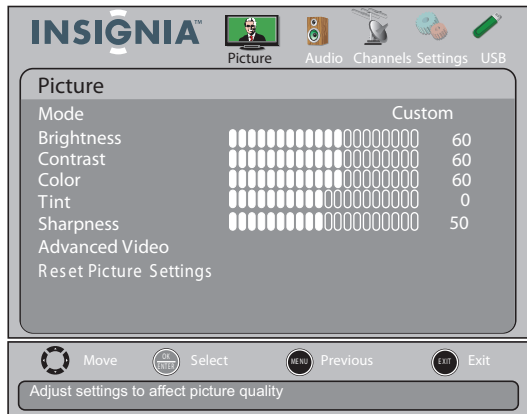


- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The **Settings** menu opens with **Parental Controls** highlighted.

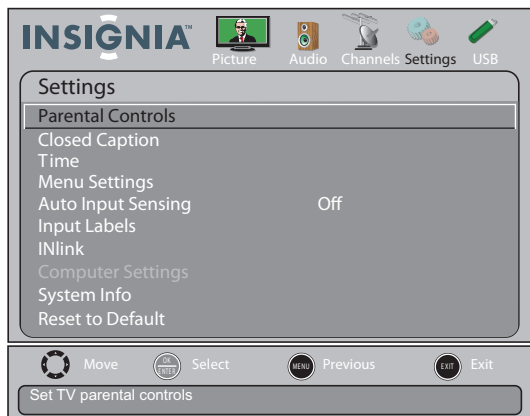

- 3 Press **ENTER**. The **Enter Password** screen opens.

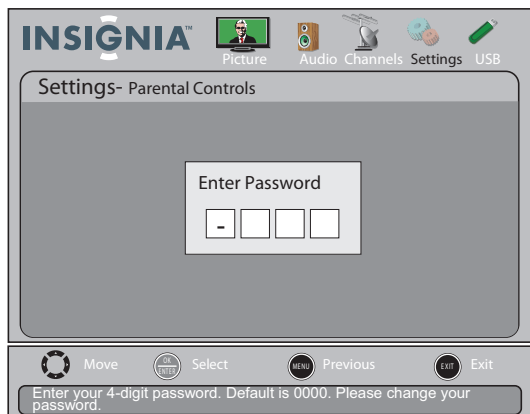


- 4 Press the number buttons to enter the four-digit password. The **Settings-Parental Controls** menu opens.

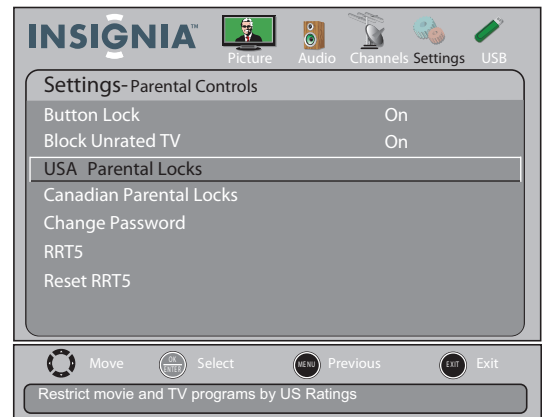


- 5 Press **▲** or **▼** to highlight **USA Parental Locks**, then press **ENTER**. (To set Canadian ratings, select **Canadian Parental Locks**.)

### USA Parental Locks

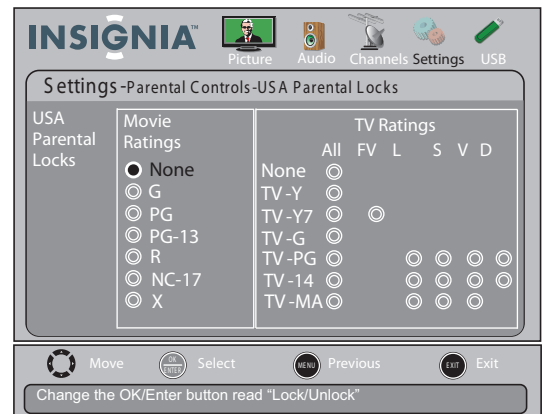

### Canadian Parental Locks

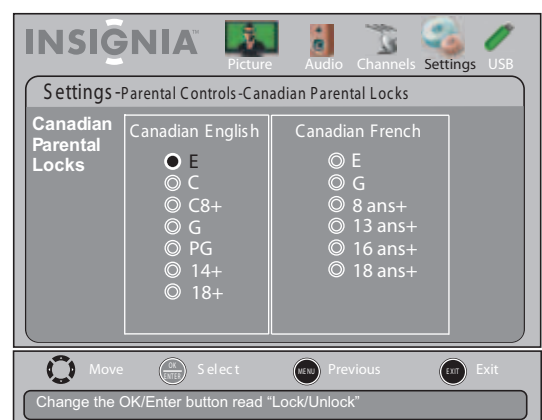

- 6 Press **◀** or **▶** to highlight:
  - **Movie Ratings** or **TV Ratings** for USA ratings.
  - **English Rating** or **French Rating** for Canadian ratings.

- 7 Press **▲** or **▼** to select the rating. If a rating has sub-ratings, press **◀** or **▶** to highlight a sub-rating.

#### Note

When you block a rating, that rating and all higher ratings are blocked.

- 8 Press **ENTER** to confirm. A lock symbol appears when a rating is blocked.
- 9 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

#### U.S. TV ratings

NONE	Not rated
TV-Y	All children
TV-Y7	Suitable for children 7 and older
TV-G	General audiences
TV-PG	Parental guidance suggested
TV-14	Parental guidance strongly suggested
TV-MA	Mature audiences only

Some of the age-based TV Parental Guidelines ratings also have content-based ratings.

#### U.S. TV content ratings

All	All ratings are blocked
FV	Fantasy violence
L	Strong language
S	Sexual situations
V	Violence
D	Suggestive dialog

#### U.S. movie (MPAA) ratings

None	Movie not rated
G	General audiences
PG	Parental guidance suggested
PG-13	Suitable for children 13 and older
R	Parental guidance suggested for children under 17
NC-17	Not suitable for children under 17
X	Adults only

#### Canadian English ratings

E	Exempt programming
C	Suitable for all children
C8+	Suitable for children 8 and older
G	General audiences
PG	Parental guidance suggested
14+	Suitable for children 14 and older
18+	Adult only

#### Canadian French ratings


E	Exempt programming
G	General audiences
8ans+	Suitable for children 8 and older
13ans+	Suitable for children 13 and older
16ans+	Suitable for children 16 and older
18ans+	Adult only

## Downloading rating information


You can download rating information to use when setting parental controls.

**To download rating information:**


- 1 Press **MENU**. The on-screen menu opens.

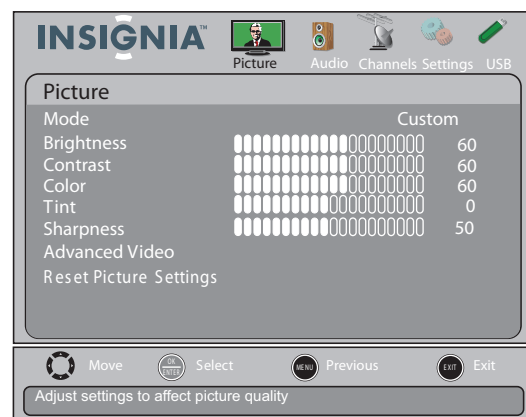


- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The **Settings** menu opens with **Parental Controls** highlighted.

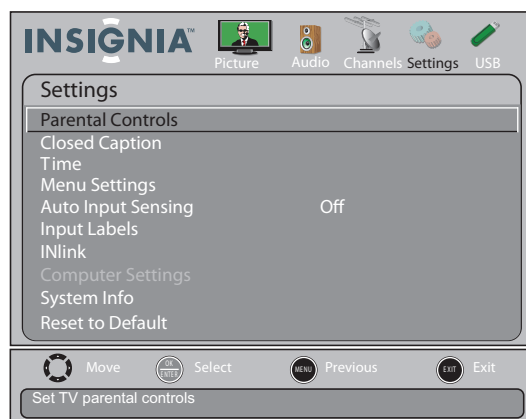

- 3 Press **ENTER**. The *Enter Password* screen opens.

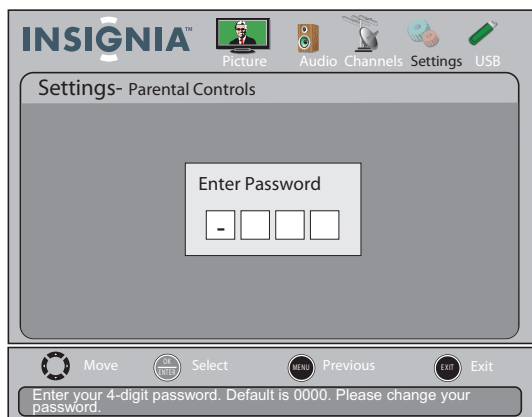

- 4 Press the number buttons to enter the four-digit password. The *Settings-Parental Controls* menu opens.

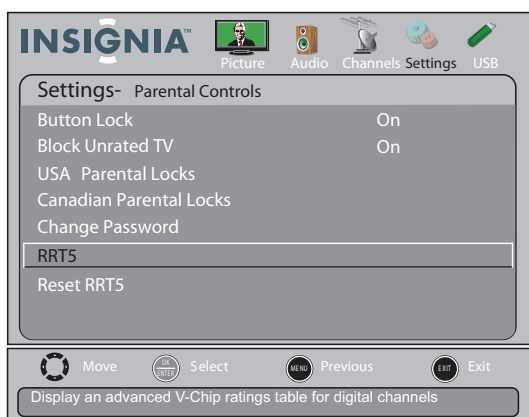

- 5 Press **▲** or **▼** to highlight **RRT5**, then press **ENTER**.

If the program is broadcast with RRT5 rating information, the information is downloaded automatically and can be used for parental controls.


- 6 To reset RRT5 information to factory mode, press **▲** or **▼** to highlight **Reset RRT5**, then press **ENTER**.
- 7 Select Yes (to reset the information) or No (to keep the information), then press **ENTER**.
- 8 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Using closed captioning


### Turning closed captioning on or off

To turn closed captioning on or off:


- 1 Press **MENU**. The on-screen menu opens.

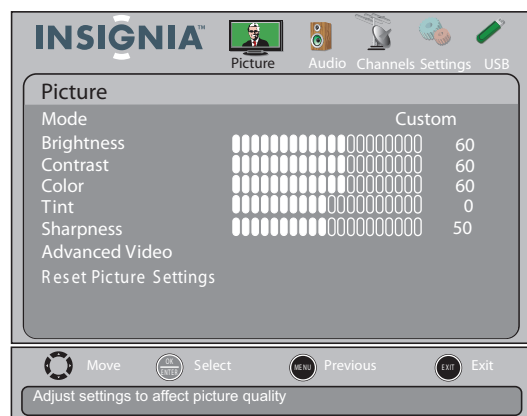

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

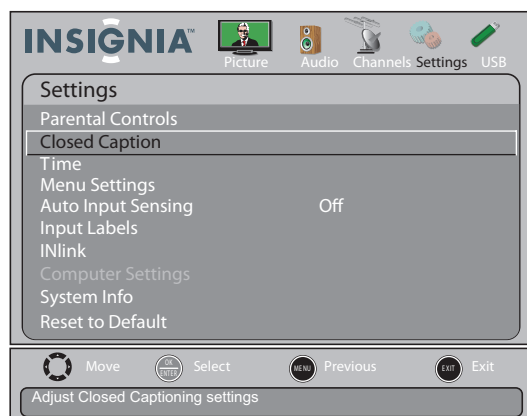

- 3 Press **▲** or **▼** to highlight **Closed Caption**, then press **ENTER**. The *Settings-Closed Caption* menu opens.

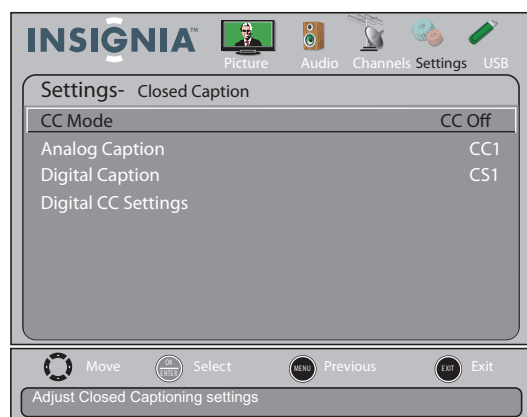

- 4 Press **▲** or **▼** to highlight **CC Mode**, then press **ENTER**. A menu opens.

- 5 Press **▲** or **▼** to select **CC Off** (turns off closed captioning), **CC On** (turns on closed captioning), or **CC On When Mute** (turns on closed captioning when the sound is muted).
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

#### Note

You can also press **CCD** to turn closed captioning on or off.


## Selecting the analog closed captioning mode

To select the analog closed captioning mode:


- 1 Press **MENU**. The on-screen menu opens.



- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

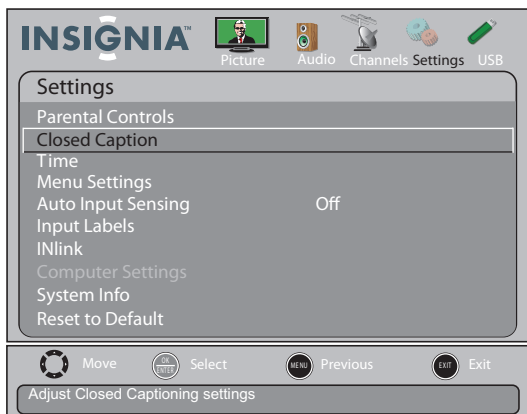

- 3 Press **▲** or **▼** to highlight **Closed Caption**, then press **ENTER**. The *Settings-Closed Caption* menu opens.

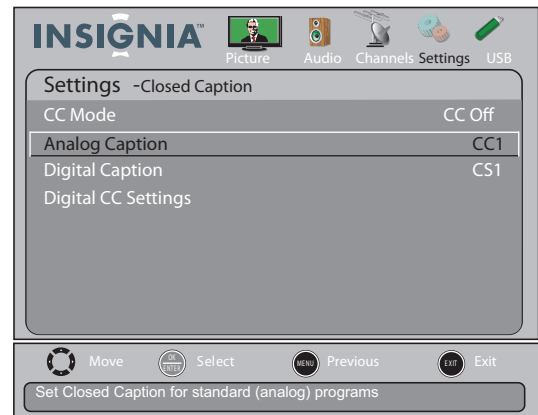


- 4 Press **▲** or **▼** to highlight **Analog Caption**, then press **ENTER**. A menu opens.
- 5 Press **▲** or **▼** to select an analog caption setting. You can select:
  - **CC1** through **CC4**—Closed captioning appears in a small banner across the bottom of the screen. **CC1** is usually the “printed” version of the audio. **CC2** through **CC4** display content provided by the broadcaster.
  - **Text1** through **Text4**—Closed captioning covers half or all of the screen. **Text1** through **Text4** display content provided by the broadcaster.
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.


## Customizing digital closed captioning styles

To customize digital closed captioning styles:


- 1 Press **MENU**. The on-screen menu opens.

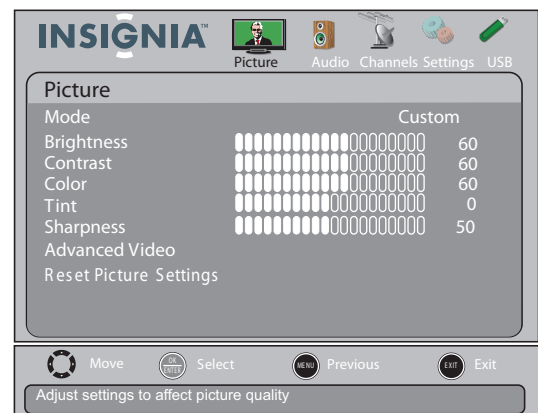


- Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

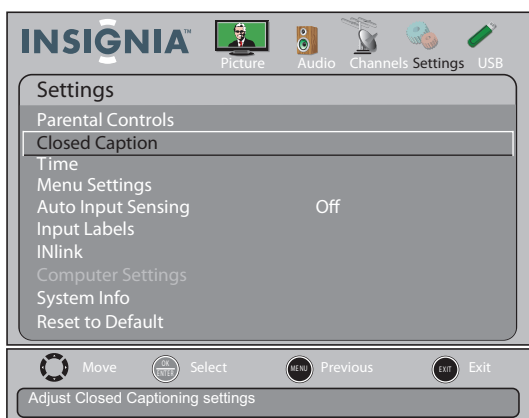

- Press **▲** or **▼** to highlight **Closed Caption**, then press **ENTER**. The *Settings-Closed Caption* menu opens.

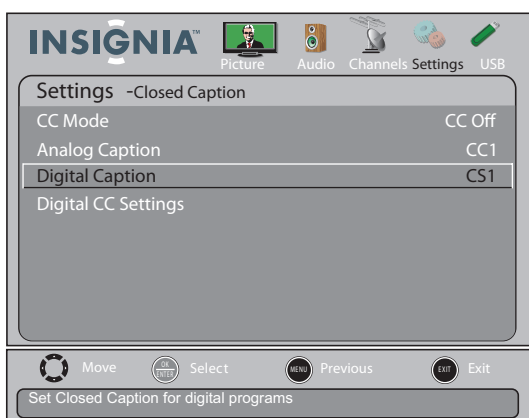

- Press **▲** or **▼** to highlight **Digital Caption**, then press **ENTER**. A menu opens.
- Press **▲** or **▼** to highlight a digital caption setting, then press **ENTER**. You can select **CS1** through **CS6** or **CC1** through **CC4**.
- Press **▲** or **▼** to highlight **Digital CC Settings**, then press **ENTER**. The *Digital CC Settings* menu opens with **Style** highlighted.

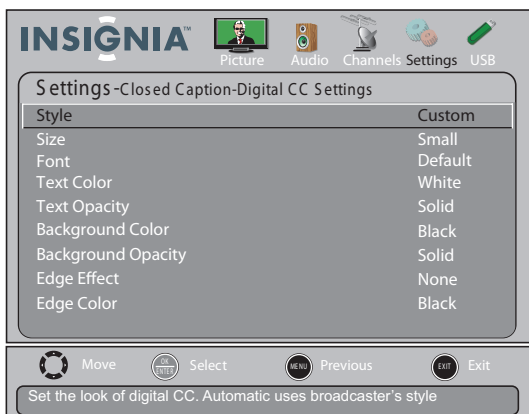

- Press **ENTER**, press **▲** or **▼** to select **Custom**, then press **ENTER**.

- Press **▲** or **▼** to highlight an option, then press **ENTER**. You can select:

- **Size**—Selects the font size.
- **Font**—Selects the font style.
- **Text Color**—Selects the color for the words.
- **Text Opacity**—Selects the opacity level for the words.
- **Background Color**—Selects the color for the background.
- **Background Opacity**—Selects the opacity level for the background.
- **Edge Effect**—Selects the edge style.
- **Edge Color**—Selects the edge color.


- Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Adjusting time settings


### Setting the clock

To set the clock:

- Press **MENU**. The on-screen menu opens.

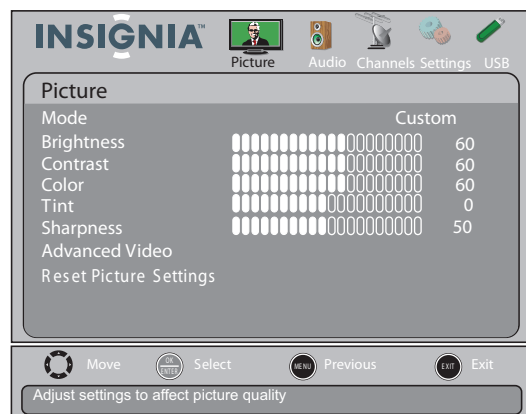

- Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

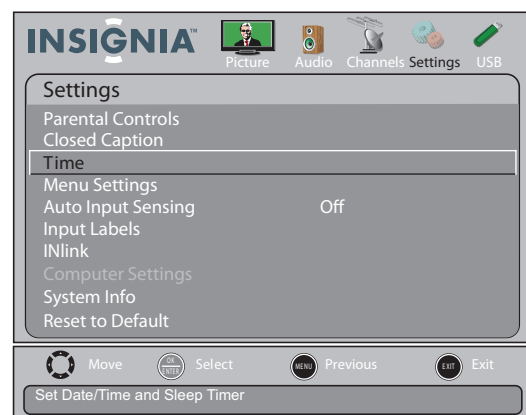




- 3 Press **▲** or **▼** to highlight **Time**, then press **ENTER**. The *Settings-Time* menu opens.



- 4 Press **▲** or **▼** to highlight **Date/Time**, then press **ENTER**. The *Settings-Time-Date/Time* menu opens.

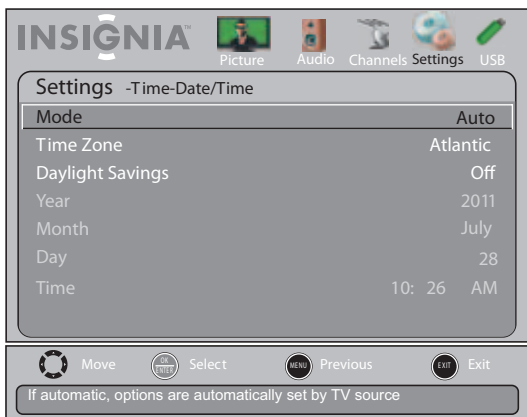


- 5 Press **▲** or **▼** to highlight **Mode**, then press **ENTER**. A menu opens.
- 6 Press **▲** or **▼** to highlight **Manual** (to set the options manually) or **Auto** (the options are automatically set by the TV signal source).
- 7 Press **ENTER** to close the menu.
- 8 Press **▲** or **▼** to highlight **Time Zone**, then press **ENTER**. A menu opens.
- 9 Press **▲** or **▼** to select your time zone, then press **ENTER**. You can select **Eastern, Central, Mountain, Pacific, Alaska, Hawaii, Newfoundland**, or **Atlantic**.
- 10 If your viewing area observes daylight savings time and you selected **Auto** for **Mode**:
  - Press **▲** or **▼** to highlight **Daylight Savings**, then press **ENTER**.
  - Press **▲** or **▼** to select **On** or **Off**, then press **ENTER** to close the menu.
- 11 If you selected **Manual** for **Mode**:
  - Press **▲** or **▼** to highlight **Year**, **Month**, or **Day**, then press **◀** or **▶** to adjust the setting.
  - Press **▲** or **▼** to highlight **Time**, press **◀** or **▶** to select the hour, minute, or AM/PM field, then press **▲** or **▼** to adjust the setting.
- 12 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Setting the sleep timer


You can specify the amount of time before your TV automatically turns off.

**To set the sleep timer:**

- 1 Press **MENU**. The on-screen menu opens.

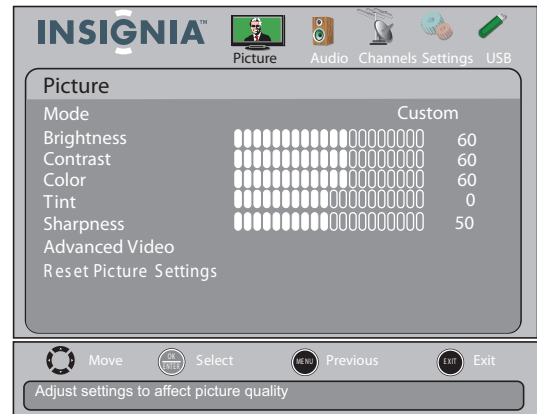

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

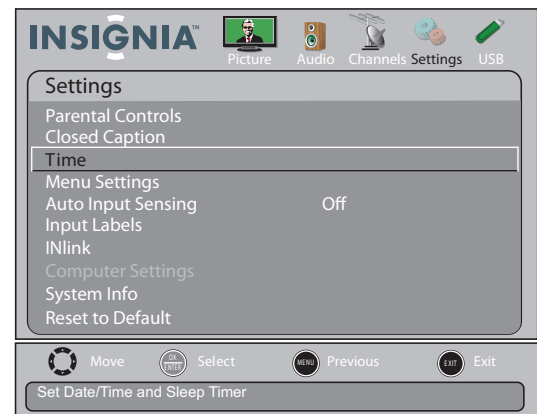

- 3 Press **▲** or **▼** to highlight **Time**, then press **ENTER**. The *Settings-Time* menu opens.



- 4 Press **▲** or **▼** to highlight **Sleep Timer**, then press **ENTER**. A menu opens.

- 5 Press **▲** or **▼** to select the amount of time before your TV turns off automatically. To turn off the sleep timer, select **Off**.
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Note


You can also press **SLEEP** to set the sleep timer.

# Adjusting menu settings


## Selecting the menu language

To select the menu language:

- 1 Press **MENU**. The on-screen menu opens.

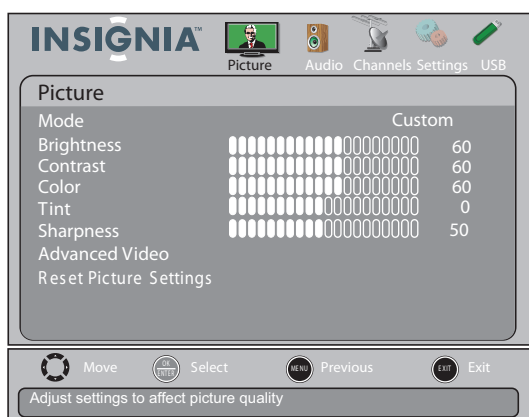

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

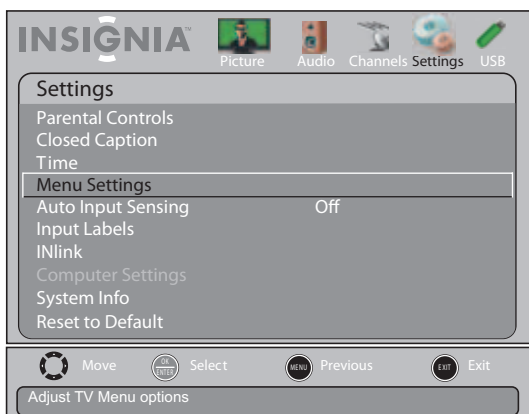

- 3 Press **▲** or **▼** to highlight **Menu Settings**, then press **ENTER**. The *Settings-Menu Settings* menu opens.




- 4 Press **ENTER**. A language menu opens.
- 5 Press **▲** or **▼** to highlight **English**, **Français**, or **Español**, then press **ENTER** to close the menu.
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Turning Auto Input Sensing on or off


When the Auto Input Sensing feature is turned on, your TV automatically detects which video jacks have devices connected to them. Your TV uses this information to determine what options you can select on the *INPUT SOURCE* list when you press **INPUT**.

To turn Input Sensor on or off:

- 1 Press **MENU**. The on-screen menu opens.

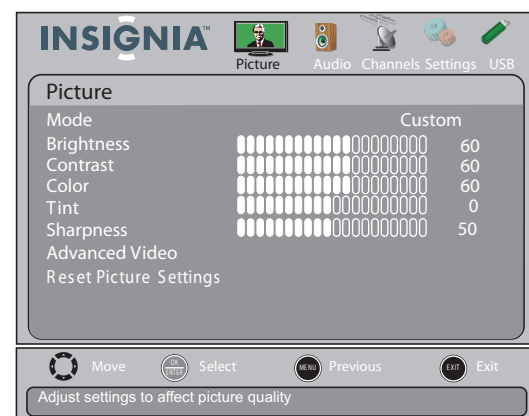

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

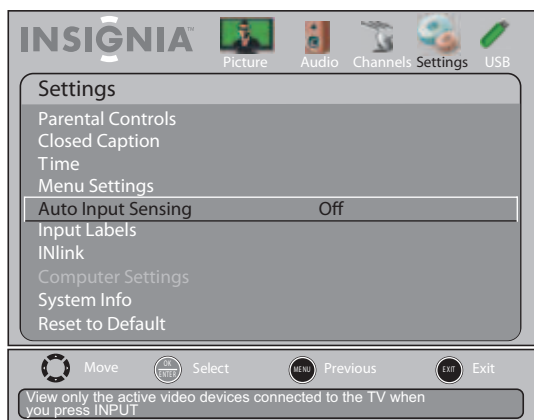

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.




- 3 Press **▲** or **▼** to highlight **Auto Input Sensing**, then press **ENTER**. A menu opens.
- 4 Press **◀** or **▶** to select **On** (to activate Auto Input Sensing) or **Off** (to deactivate Auto Input Sensing).
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Labeling an input source


You can add a label to an input source to make it easier to identify.

### To label an input source:

- 1 Press **MENU**. The on-screen menu opens.

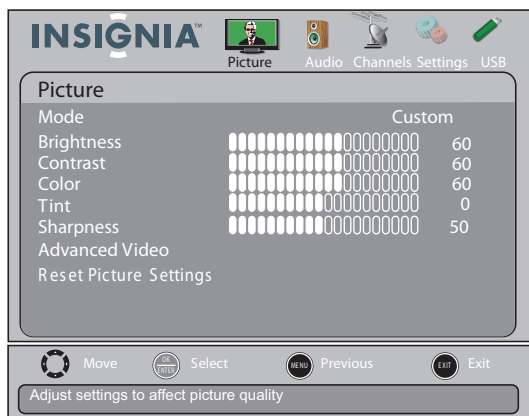

- 3 Press **▲** or **▼** to highlight **Input Labels**, then press **ENTER**. The *Settings-Input Labels* screen opens with the input source field highlighted.

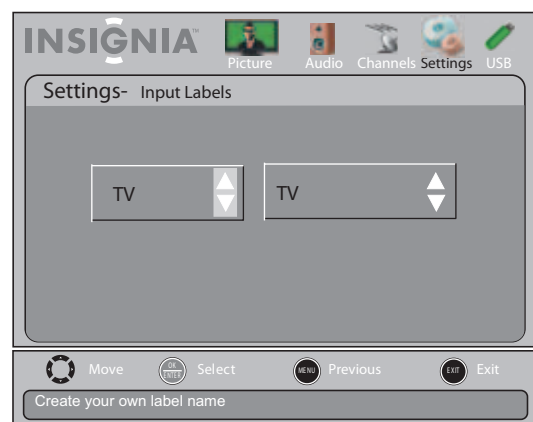


- 4 Press **▲** or **▼** to select the input source you want to label, then press **▶** to move to the custom label field.
- 5 Press **▲** or **▼** to select a character, then press **◀** or **▶** to move to the previous or next character position. Repeat this step to enter additional characters. You can enter as many as 10 characters.
- 6 When you have completed the label, press **ENTER**.
- 7 Press **MENU** to return to the previous menu or press **EXIT** to close the menu. The next time you press **INPUT**, your label will appear in the *INPUT SOURCE* list.

## Restoring settings to the defaults


When you restore default settings, all the settings you have customized (except the password and parental rating) are reset.

### To restore settings to the defaults:

- 1 Press **MENU**. The on-screen menu opens.

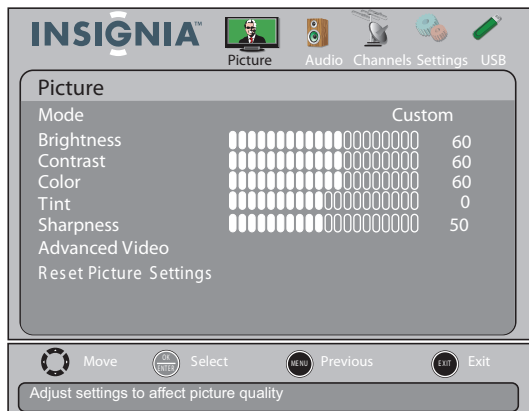

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The **Settings** menu opens.

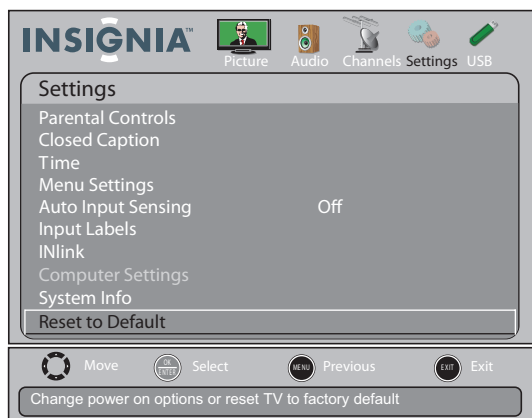

- 3 Press **▲** or **▼** to highlight **Reset to Default**, then press **ENTER**. A menu opens.
- 4 Press **▲** or **▼** to highlight **Power on in Vivid Mode**, then press **ENTER**.
- 5 Press **▲** or **▼** to highlight **On** (when you turn on your TV, it will be in **Vivid** picture mode) or **Off** (when you turn on your TV, it will be in the picture mode it was in before you reset to defaults), then press **ENTER**.
- 6 Press **▲** or **▼** to highlight **Reset to Default**, then press **ENTER**.
- 7 Press **◀** or **▶** to select **Yes** (to reset) or **No** (to not reset), then press **ENTER**.
- 8 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Using INlink

INlink lets you control HDMI CEC-compatible devices connected to the HDMI jacks on your TV using the remote control that came with your TV.

To use INlink, you must set the **INlink Control** option on the **SETTINGS-INlink** menu to **On**.


### Notes

- HDMI cables must be used to connect HDMI CEC-compatible devices to your TV.
- The connected device's HDMI CEC feature must be turned on.
- If you connect an HDMI device that is not HDMI CEC-compatible, all the INlink Control features do not work.
- Depending on the connected HDMI device, the INlink Control feature may not work.


## Turning INlink on or off

### To turn INlink on or off:


- 1 Press **MENU**. The on-screen menu opens.

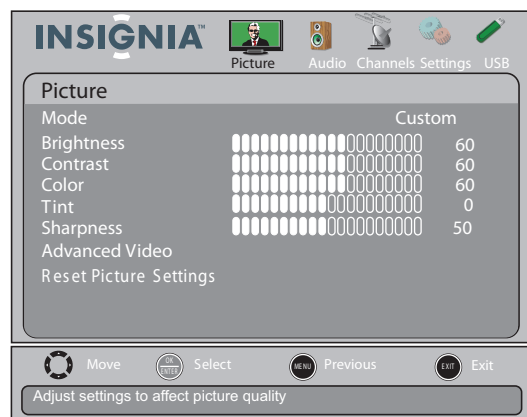


- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The **Settings** menu opens.

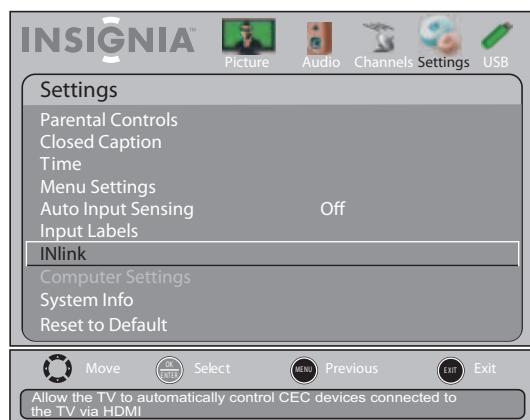

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The *Settings-INlink* menu opens.

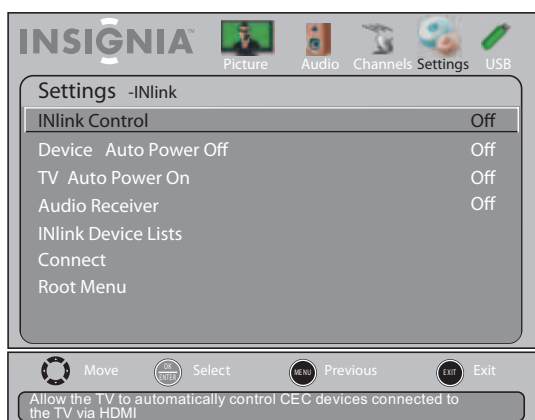

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

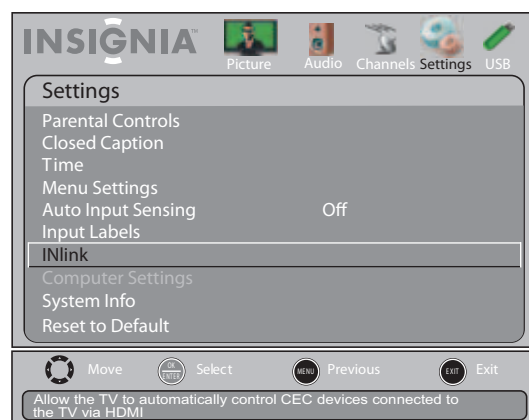


- 4 Press **▲** or **▼** to highlight **INlink Control**, then press **ENTER**. A menu opens.
- 5 Press **▲** or **▼** to highlight **On** (to turn on the **INlink Control** feature) or **Off** (to turn off the **INlink Control** feature).
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

### Turning Device Auto Power Off on or off


When INlink is turned on, **Device Auto Power Off** turns off HDMI CEC devices when you turn off your TV.

#### To turn Device Auto Power Off on or off:

- 1 Press **MENU**. The on-screen menu opens.

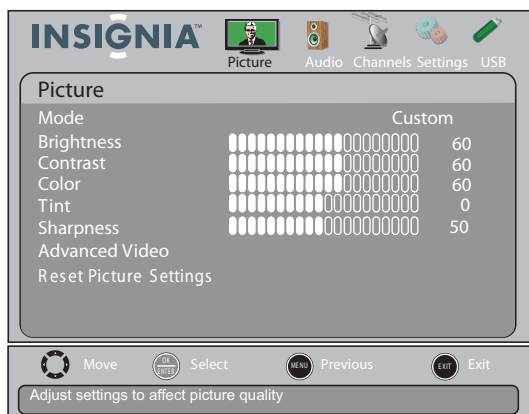

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The *Settings-INlink* menu opens.

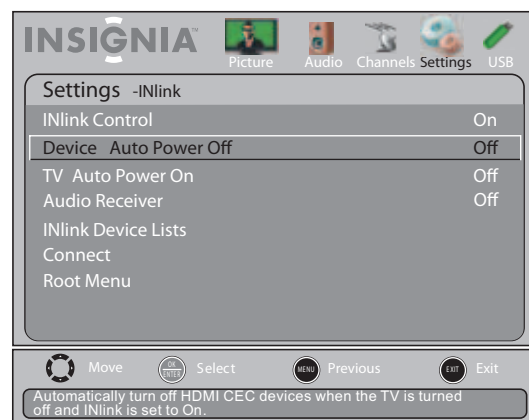


- 4 Press **▲** or **▼** to highlight **Device Auto Power Off**, then press **ENTER**. A menu opens.
- 5 Press **▲** or **▼** to select **On** (turns off the connected devices when you turn off your TV) or **Off** (does not turn off the connected devices when you turn off your TV).
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Turning TV Auto Power On on or off


When INlink is turned on and you turn on a DVD or Blu-ray player that is HDMI CEC-compatible, **TV Auto Power On** turns on your TV automatically.

### To turn TV Auto Power On on or off:


- 1 Press **MENU**. The on-screen menu opens.

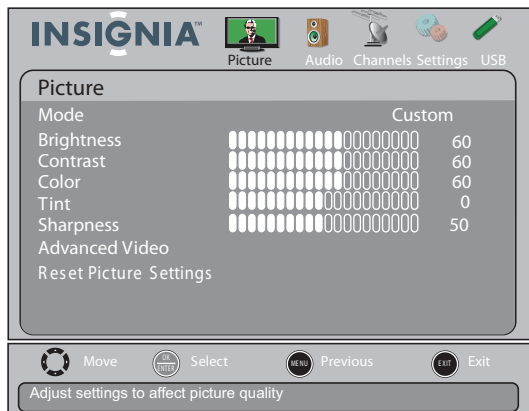

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The **Settings** menu opens.

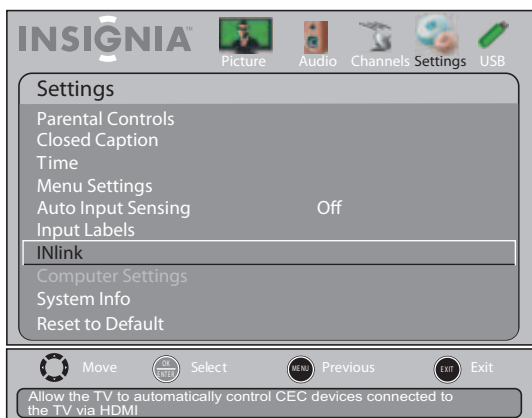

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The **Settings-INlink** menu opens.

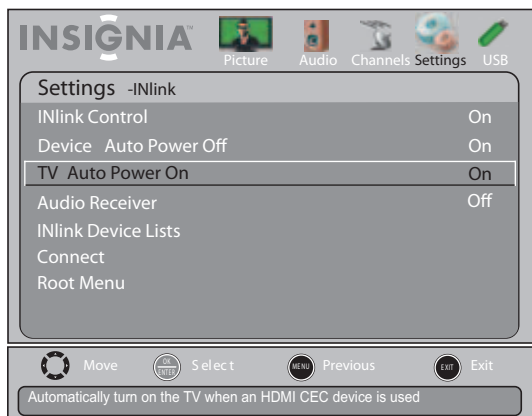

- 4 Press **▲** or **▼** to highlight **TV Auto Power On**, then press **ENTER**. A menu opens.


- 5 Press **▲** or **▼** to select **On** (turns on your TV when you turn on the connected device) or **Off** (does not turn on your TV when you turn on the connected device).
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Turning Audio Receiver on or off


When INlink is turned on and you have connected an audio receiver to your TV, turning on Audio Receiver lets you use your TV's remote control to control the volume on the audio receiver.

### To turn Audio Receiver on or off:


- 1 Press **MENU**. The on-screen menu opens.

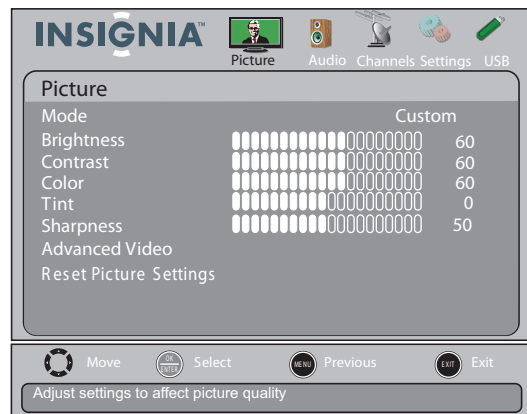


- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The **Settings** menu opens.

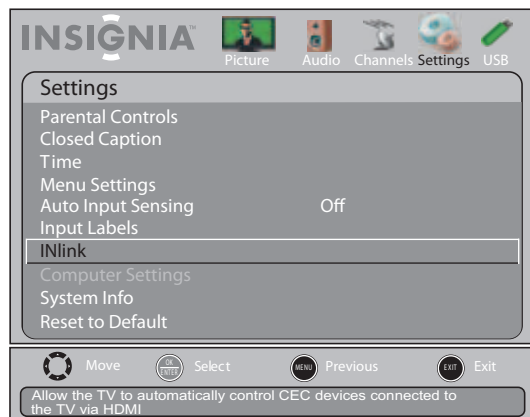

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The *Settings-INlink* menu opens.

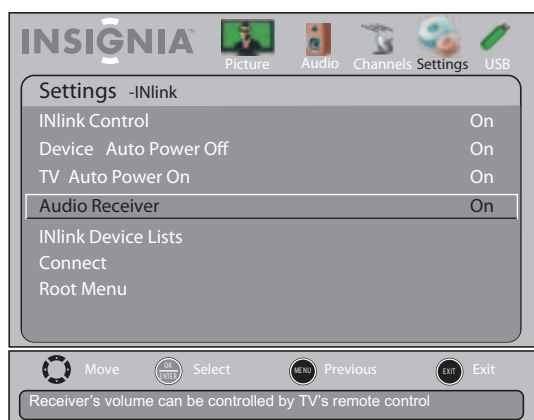

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

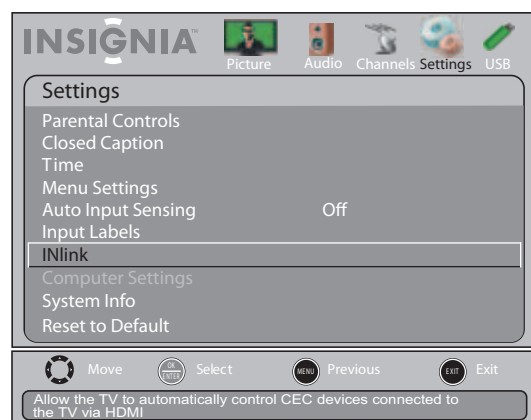


- 4 Press **▲** or **▼** to highlight **Audio Receiver**, then press **ENTER**. A menu opens.
- 5 Press **▲** or **▼** to select **On** (your TV's remote control controls the connected audio receiver's volume) or **Off** (your TV's remote control does not control the connected audio receiver's volume).
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Displaying a list of INlink-compatible (HDMI CEC) devices

You can display a list of HDMI CEC devices that are connected to your TV.

### To display a list of INlink-compatible (HDMI CEC) devices:

- 1 Press **MENU**. The on-screen menu opens.

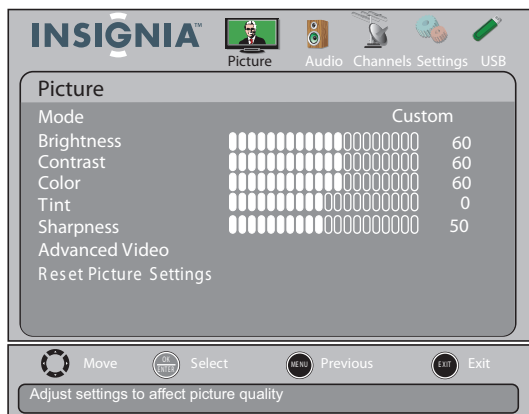

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The *Settings-INlink* menu opens.



- 4 Press **▲** or **▼** to highlight **INlink Device Lists**, then press **ENTER**. A list of the HDMI CEC-compatible devices you have connected appears.
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

### Notes

HDMI cables must be used to connect HDMI CEC-compatible devices to your TV.  
The connected device's HDMI CEC feature must be turned on.  
If you connect an HDMI device that is not HDMI CEC-compatible, the **INlink Control** option does not work.




## Waking INlink-compatible (HDMI CEC) devices


When a connected INlink-compatible device is in standby mode, use the **Connect** option to wake (turn on) the device.

### To wake INlink-compatible devices:


- 1 Press **MENU**. The on-screen menu opens.

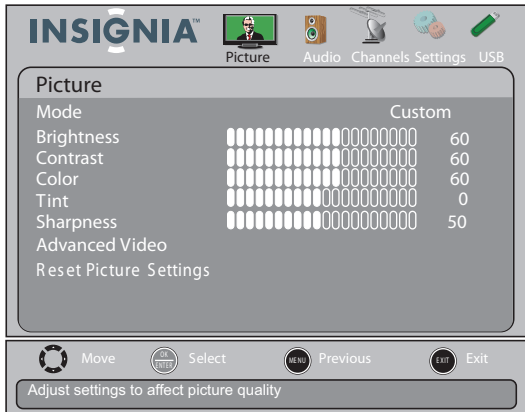

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

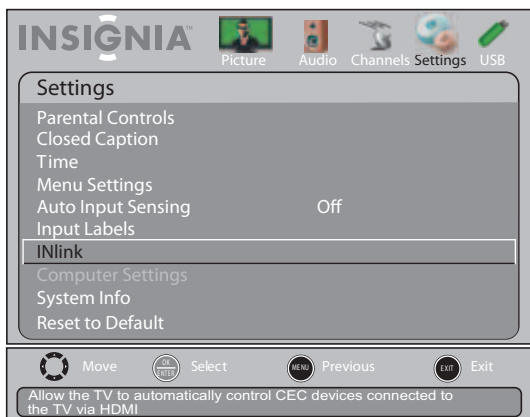

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The *Settings-INlink* menu opens.

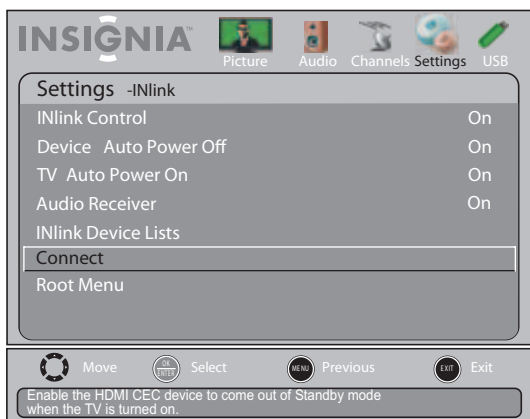

- 4 Press **▲** or **▼** to highlight **Connect**, then press **ENTER**. The connected INlink-compatible device in standby mode turns on.


- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Opening an INlink-compatible device's root menu


You can open an INlink-compatible device's root menu, then use your TV's remote control to control the device.

### To open an INlink-compatible device's root menu:


- 1 Press **MENU**. The on-screen menu opens.

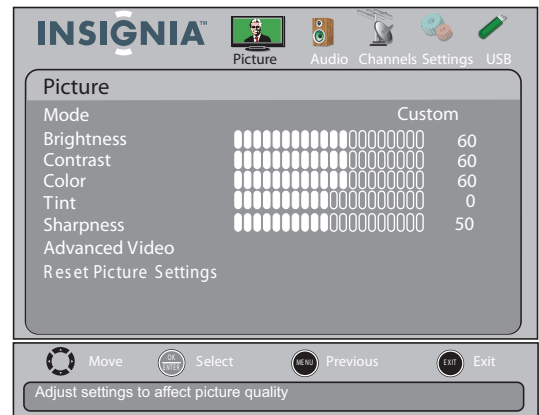

- 2 Press **◀** or **▶** to highlight **Settings**, then press **▼** or **ENTER**. The *Settings* menu opens.

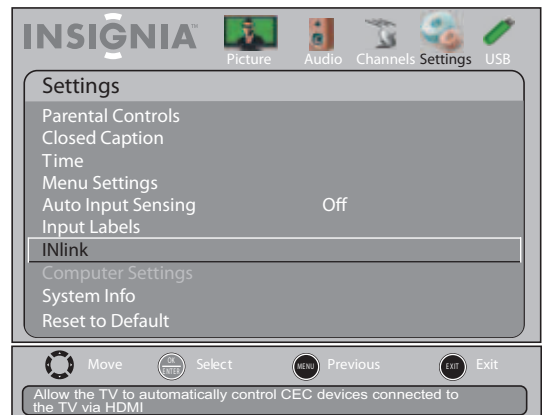

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The *Settings-INlink* menu opens.

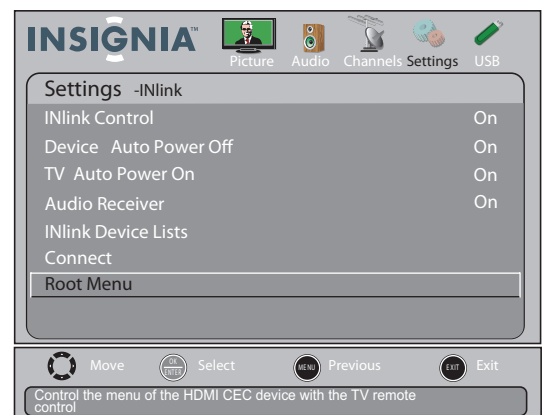



- 4 Press **▲** or **▼** to highlight **Root Menu**, then press **ENTER**. The device's root menu opens, and you can use the TV's remote control to control the device.
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Using a USB flash drive

You can connect a USB flash drive to your TV to view compatible JPEG pictures.

### Notes

- Never remove the USB flash drive or turn off your TV while viewing JPEG pictures.
- The JPEG picture viewer only supports JPEG format images (with ".jpg" file extensions) and not all JPEG files are compatible with your TV.

## Switching to USB mode

### To switch to USB mode:

- 1 Make sure that you have connected the USB flash drive to the USB port on your TV.
- 2 Press **INPUT**. The *INPUT SOURCE* list opens.
- 3 Press **▲** or **▼** to highlight **USB**, then press **ENTER**.

### Note

To exit USB mode, press **INPUT** to open the *INPUT SOURCE* list, then select another input source.


## Browsing photos

### To browse photos:

- 1 Switch to USB mode. See "Switching to USB mode" on page 55
- 2 Press **MENU**. The *USB* menu opens.




- 3 Press **▼** or **ENTER** to access the menu. **Photos** is highlighted.

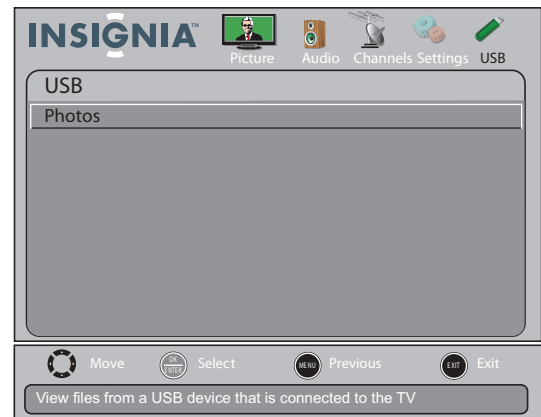

- 4 Press **ENTER**. The *USB-photos* menu opens




- 5 Press **▲** or **▼** to highlight **Browse Photos**, then press **ENTER**. The screen displays folder names and photo files stored on the USB flash drive in a thumbnail index with the first photo or folder highlighted. A control bar appears at the bottom of the screen.

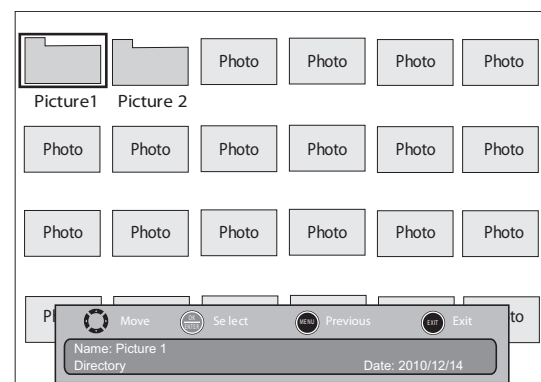

- 6 To navigate the thumbnail index screen, press:
  - **▲ ▼ ◀ ▶** to browse through the files and folders.
  - **ENTER** to view a highlighted photo full-screen or open a highlighted folder.
  - **MENU** to open the *USB* menu.

- **FAVORITE** to add or remove a photo from the favorite photo list. A heart appears on a photo that has been added to the favorite photo list.
- **EXIT** to return to the *USB* menu.

When a photo is displayed full-screen, a control bar appears at the bottom of the photo. The file name, picture resolution, size, and date are displayed on the bottom of the control bar. If you do not press a button within 10 seconds, the control bar closes. Press any button to open the control bar again.

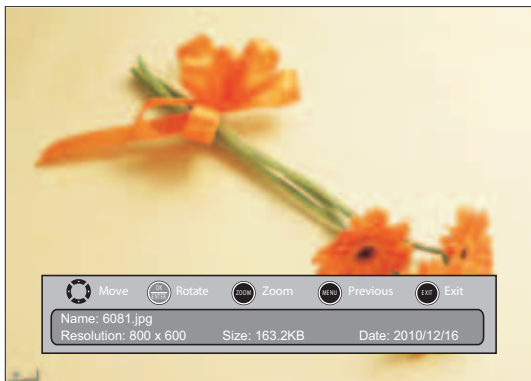

- 7 To navigate on the photo screen, press:
- ◀ or ▲ to go to the previous photo.
  - ▶ or ▼ to go to the next photo.
  - **ENTER** to rotate the photo clockwise.
  - **ZOOM** one or more times to enlarge the image by 2x or 4x or to select **Fill** (the photo is displayed at it's actual size). You can press ▲ ▼ ◀ or ▶ to pan the photo.
  - **EXIT** to return to the thumbnail index.
  - **MENU** to return to the *USB* menu.

## Viewing favorite photos


After you created your favorite photo list, you can browse among your favorite photos quickly.

### To view favorite photos:

- 1 Switch to USB mode. See "Switching to USB mode" on page 55
- 2 Press **MENU**. The *USB* menu opens.




- 3 Press ▼ or **ENTER** to access the menu. **Photos** is highlighted.

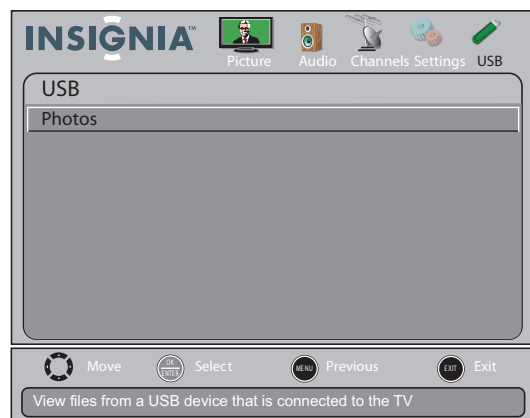

- 4 Press **ENTER**. The *USB-photos* menu opens.



- 5 Press ▲ or ▼ to highlight **Favorite Photos**, then press **ENTER**. A thumbnail index of your favorite photos opens with a control bar at the bottom of the screen.

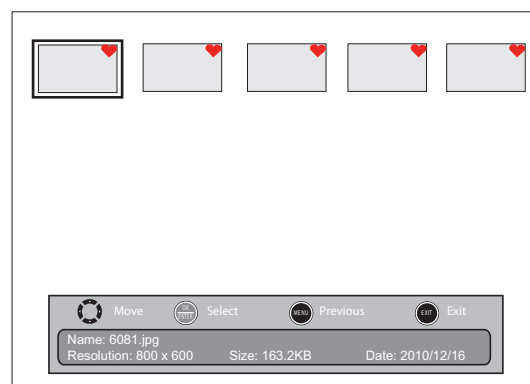

You select photos and navigate on the photo screen in the same way you do when you are browsing through photos. For more information, see "Browsing photos" on page 55.

## Viewing photos in a slideshow

You can view your photos in a slideshow.

### To view photos in a slideshow:

- 1 Switch to USB mode. See "Switching to USB mode" on page 55
- 2 Press **MENU**. The *USB* menu opens.



- 3 Press **▼** or **ENTER** to access the menu. **Photos** is highlighted.



- 4 Press **ENTER**. The *USB-photos* menu opens.




- 5 If you want to view all the photos on the USB flash drive, press **▲** or **▼** to highlight **Browse Photos**, press **ENTER**, then press **MENU** to return to the *USB-Photos* menu.

OR

If you want to view your favorite photos only, press **▲** or **▼** to highlight **Favorite Photos**, press **ENTER**, then press **MENU** to return to the *USB-Photos* menu.

- 6 Press **▲** or **▼** to highlight **View Slideshow**, then press **ENTER**. A slideshow starts with the first photo in the current folder.

When a photo is displayed full-screen, a control bar appears at the bottom of the photo. The file name, picture resolution, size, and date are displayed on the bottom of the control bar. If you do not press a button within 10 seconds, the control bar closes. Press any button to open the control bar again.

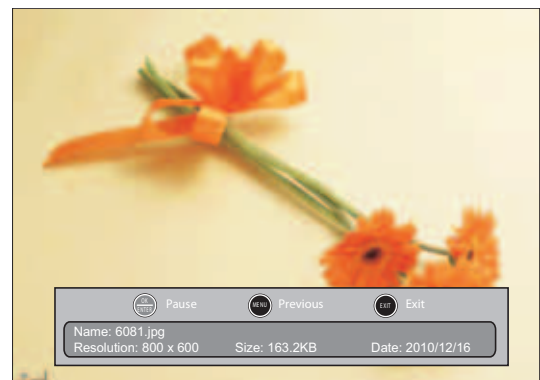

- 7 To control in the slideshow, press:
  - **ENTER** to pause or start the slideshow.
  - **EXIT** to exit the slideshow and return to thumbnail index.
  - **MENU** to go to the *USB* menu.

## Customizing slideshow settings


You can customize the slideshow settings, including **Repeat**, **Shuffle**, **Speed**, and **Transition**.

### To customize slideshow settings:

- 1 Switch to USB mode. See "Switching to USB mode" on page 55
- 2 Press **MENU**. The *USB* menu opens.



- 3 Press **▼** or **ENTER** to access the menu. **Photos** is highlighted.

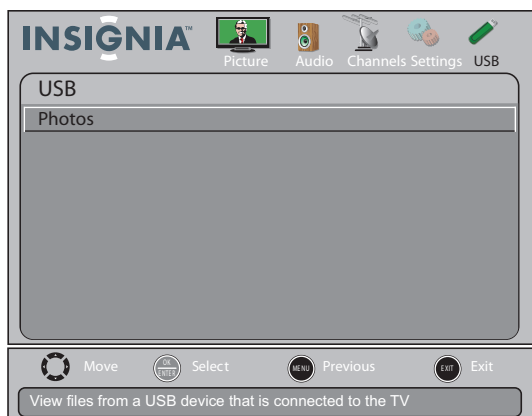

- 4 Press **ENTER**. The *USB-photos* menu opens.



- 5 Press **▲** or **▼** to highlight **Settings**, then press **ENTER**. The *USB-Photo-Settings* menu opens.



- 6 Press **▲** or **▼** to highlight an option, then press **ENTER**. You can select:

- **Repeat**—Repeats the slideshow when it reaches the end. You can select **On** or **Off**.
- **Shuffle**—Displays the slideshow photos in random order. You can select **On** or **Off**.
- **Speed**—Sets the amount of time a photo is displayed before the slideshow moves to the next photo. You can select **4 Sec**, **6 Sec**, or **8 Sec**.
- **Transition**—Selects the way photos transition when moving to the next file in the slideshow. You can select:
  - **None**—No transition effect.
  - **Fade to Black**—Fades the screen to black between photos.
  - **Vertical Wipe**—Wipes the screen from top to bottom between photos.
  - **Horizontal Wipe**—Wipes the screen from left to right between photos.
  - **Random**—Randomly selects a transition effect.

- 7 Press **EXIT** to close the menu.

## Maintaining

- Do not use your TV in areas that are too hot or too cold, because the cabinet may warp or the screen may malfunction. Your TV works best in temperatures that are comfortable to you.
- Storage temperatures are 32° to 122°F (0° to 50°C).
- Working temperatures are 41° to 104°F (5° to 40°C).
- Do not place your TV in direct sunlight or near a heat source.

### Cleaning the TV cabinet

Clean the cabinet with a soft, lint-free cloth. If the cabinet is especially dirty, moisten a soft, lint-free cloth in a weak detergent solution, squeeze the excess moisture from the cloth, then wipe the screen or cabinet with the cloth. Use a clean cloth to dry the screen or cabinet.

### Cleaning the TV screen


Clean the screen with a soft, lint-free cloth.

## Troubleshooting

#### Warning

Do not try to repair your TV yourself. Contact authorized service personnel.

### Video and audio

Problem	Solution
Picture does not fill the screen. There are black bars around the picture.	<ul style="list-style-type: none"> <li>• Change the aspect ratio. An increasing amount of digital TV and movies are presented in wide screen (16:9). See "Adjusting the TV picture" on page 32.</li> </ul>
No picture (screen is not lit) and no sound.	<ul style="list-style-type: none"> <li>• Press  on the TV or the remote control.</li> <li>• Make sure that the <b>Audio Only</b> option is set to <b>Off</b>. See "Playing TV audio only" on page 34.</li> <li>• Make sure that the video cables are connected securely to your TV.</li> <li>• Adjust the contrast and brightness. See "Adjusting the TV picture" on page 32.</li> <li>• Make sure that the power cord is plugged in.</li> <li>• Make sure that the correct video input source is selected. See "Selecting the video input source" on page 29.</li> <li>• Try another channel. The station may be experiencing problems.</li> <li>• Make sure that the incoming signal is compatible.</li> <li>• Make sure that the antenna or cable TV is connected correctly and securely. See "Connecting a cable or satellite box" on page 13 or "Connecting an antenna or cable TV (no box)" on page 17.</li> <li>• Check the closed caption settings. Some TEXT modes can block the screen.</li> </ul>

Problem	Solution
Dark, poor, or no picture (screen is lit), but sound is good.	<ul style="list-style-type: none"> <li>• Try another channel. The station may be experiencing problems.</li> <li>• Make sure that the antenna or cable TV is connected correctly and securely. See "Connecting a cable or satellite box" on page 13 or "Connecting an antenna or cable TV (no box)" on page 17.</li> <li>• Adjust the brightness. See "Adjusting the TV picture" on page 32.</li> <li>• Make sure that the correct picture mode is selected. See "Adjusting the TV picture" on page 32.</li> <li>• If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see "Checking the digital signal strength" on page 38.</li> <li>• If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier.</li> <li>• Make sure that the video cables are connected securely to your TV.</li> <li>• The video cable(s) you are using may be bad. Try a new set.</li> <li>• Try another channel. The station may be experiencing problems.</li> </ul>
No color, dark picture, or color is not correct.	<ul style="list-style-type: none"> <li>• Try another channel. The station may be experiencing problems.</li> <li>• Adjust the color settings. See "Adjusting the TV picture" on page 32.</li> <li>• Make sure that the video cables are connected correctly and securely to your TV.</li> <li>• Make sure that the antenna or cable TV is connected correctly and securely. See "Connecting a cable or satellite box" on page 13 or "Connecting an antenna or cable TV (no box)" on page 17.</li> <li>• If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see "Checking the digital signal strength" on page 38.</li> <li>• If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier.</li> </ul>
Only snow (noise) appears on the screen.	<ul style="list-style-type: none"> <li>• Try another channel. The station may be experiencing problems.</li> <li>• Make sure that the antenna or cable TV is connected correctly and securely. See "Connecting a cable or satellite box" on page 13 or "Connecting an antenna or cable TV (no box)" on page 17.</li> <li>• If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see "Checking the digital signal strength" on page 38.</li> <li>• If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier.</li> </ul>

Problem	Solution
Dotted lines or stripes appear on the screen.	<ul style="list-style-type: none"> <li>Make sure that the antenna or cable TV is connected correctly and securely. See “Connecting a cable or satellite box” on page 13 or “Connecting an antenna or cable TV (no box)” on page 17.</li> <li>If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see “Checking the digital signal strength” on page 38.</li> <li>If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier.</li> <li>Make sure that the video cables are connected securely to your TV.</li> <li>The video cable(s) you are using may be bad. Try a new set.</li> <li>Other devices (for example, a surround sound receiver, external speakers, fans, or hair dryers) may be interfering with your TV. Try turning off one device at a time to determine which device is causing interference. Once you have determined which device is causing interference, move it further from the TV to eliminate the interference.</li> </ul>
Double images.	<ul style="list-style-type: none"> <li>Use a highly directional outdoor antenna, cable TV, or satellite TV.</li> </ul>
The picture has a few bright or dark spots.	<ul style="list-style-type: none"> <li>A few bright or dark spots on an LCD screen is normal. It does not affect the operation of your TV.</li> </ul>
Good picture, but no sound.	<ul style="list-style-type: none"> <li>Increase the volume.</li> <li>Make sure that the sound is not muted.</li> <li>Disconnect the headphones.</li> <li>Make sure that the correct audio mode is selected.</li> <li>Make sure that the audio cables are connected correctly and securely to your TV.</li> <li>Make sure that the antenna or cable TV is connected correctly and securely. See “Connecting a cable or satellite box” on page 13 or “Connecting an antenna or cable TV (no box)” on page 17.</li> <li>If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see “Checking the digital signal strength” on page 38.</li> <li>The audio cable(s) you are using may be bad. Try a new set.</li> </ul>
Poor picture	<ul style="list-style-type: none"> <li>Make sure that the room is not too bright. Light reflecting off the screen can make the picture difficult to see.</li> <li>If an S-VHS camera or a camcorder is connected while another connected device is turned on, the picture may be poor. Turn off one or more devices.</li> </ul>
Good sound but poor color	<ul style="list-style-type: none"> <li>Adjust the contrast, color, and brightness settings. See “Adjusting the TV picture” on page 32.</li> </ul>
Audio noise	<ul style="list-style-type: none"> <li>Other devices (for example, a surround sound receiver, external speakers, fans, or hair dryers) may be interfering with your TV. Try turning off one device at a time to determine which device is causing interference. Once you have determined which device is causing interference, move it further from the TV to eliminate the interference.</li> </ul>

Problem	Solution
No output from one of the speakers	<ul style="list-style-type: none"> <li>Adjust the audio balance. See “Adjusting sound settings” on page 34.</li> <li>Make sure that the audio cables are connected correctly and securely to your TV.</li> </ul>
After images appear	<ul style="list-style-type: none"> <li>Do not display a still image, such as a logo, game, or computer image, for an extended period of time. This can cause a permanent after-image to be burned into the screen. This type of damage is not covered by your warranty.</li> </ul>

## Remote control

Problem	Solution
Remote control does not work.	<ul style="list-style-type: none"> <li>Make sure that the power cord is correctly connected to your TV and a power outlet.</li> <li>Make sure that there are no obstructions between the remote control and the remote control sensor on the front of the TV.</li> <li>Point the remote control directly at the remote control sensor on your TV. For the location of the remote control sensor, see “Front” on page 8.</li> <li>The supplied batteries are wrapped tightly in clear plastic. Make sure that you have removed this plastic from the batteries.</li> <li>Make sure that the batteries are installed correctly. See “Installing remote control batteries” on page 27.</li> <li>Replace dead batteries with new batteries. See “Installing remote control batteries” on page 27.</li> </ul>
Trouble programming your existing universal remote control.	<ul style="list-style-type: none"> <li>See instructions and a table of common codes in “Programming a different universal remote control” on page 63.</li> <li>Codes are subject to change. For up-to-date codes, go to <a href="http://www.insigniaproducts.com/remotecodes">www.insigniaproducts.com/remotecodes</a></li> <li>Replace dead batteries with new batteries. See “Installing remote control batteries” on page 27.</li> <li>Refer to the User Guide that accompanied your universal remote control and contact the manufacturer if problems persist.</li> </ul>

## General

Problem	Solution
No power	<ul style="list-style-type: none"> <li>Make sure that the power cord is correctly connected to your TV and a power outlet.</li> <li>Unplug the power cord, wait 60 seconds, then plug the cord back in and turn on your TV.</li> <li>Other devices (for example, a surround sound receiver, external speakers, fans, or hair dryers) may be interfering with your TV. Try turning off one device at a time to determine which device is causing interference. Once you have determined which device is causing interference, move it further from the TV to eliminate the interference.</li> </ul>
“No signal” error message is displayed	<ul style="list-style-type: none"> <li>Press <b>INPUT</b> and make sure that you have selected the correct input for the device or service you are trying to use.</li> <li>If you are using a cable or satellite box, use the remote that came with that box to change channels.</li> <li>Make sure that you have the correct input selected to view channels from the cable or satellite box.</li> </ul>



Problem	Solution
After Auto Channel Search, there are no channels	<ul style="list-style-type: none"> <li>Reception can vary by channel depending on the broadcast power level of a given station. Contact your cable or satellite TV provider.</li> <li>Make sure the antenna or cable/satellite TV is connected securely to your TV.</li> <li>Try replacing the cable between the antenna/cable or cable/satellite box and your TV.</li> </ul>
One or more channels do not display.	<ul style="list-style-type: none"> <li>Make sure that the channels are not blocked. See "Setting parental control levels" on page 42.</li> <li>Make sure that the channels are not hidden. The channel may have been deleted from the channel list. You can tune to the channel by pressing the number buttons or you can add the channel back to the channel list. See "Hiding channels" on page 36.</li> <li>If you are using a cable or satellite box, use the remote that came with that box to change channels.</li> <li>Make sure that you have the correct input selected to view channels from the cable or satellite box.</li> <li>If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see "Checking the digital signal strength" on page 38.</li> </ul>
Password is lost.	<ul style="list-style-type: none"> <li>Enter <b>9999</b> to access parental controls, then set a new password. See "Setting or changing the password" on page 39.</li> </ul>
Some settings cannot be accessed.	<ul style="list-style-type: none"> <li>If a setting is grayed, the setting is not available in the current video input mode.</li> </ul>
TV cabinet creaks.	<ul style="list-style-type: none"> <li>When the TV is in use, the temperature rises naturally and may cause the cabinet to expand or contract which can cause a creaking noise. This is not a malfunction.</li> </ul>
Control buttons do not work	<ul style="list-style-type: none"> <li>Make sure that the <b>Button Lock</b> option is set to <b>Off</b>. See "Locking control buttons" on page 40.</li> <li>Unplug the power cord, wait a few seconds, then plug the cord back in and turn on your TV.</li> </ul>
TV keeps turning off	<ul style="list-style-type: none"> <li>Make sure that the sleep timer is not turned on. See "Setting the sleep timer" on page 47.</li> </ul>

**Note:** If the problem is not solved by using these troubleshooting instructions, turn off your TV, then turn it on again.

## Specifications

Specifications are subject to change without notice.

### Warranty

NS-15E720A12	NS-19E720A12	NS-22E730A12	NS-24E730A12
<b>Parts:</b> 2 years	<b>Parts:</b> 2 years	<b>Parts:</b> 2 years	<b>Parts:</b> 2 years
<b>Labor:</b> 2 years	<b>Labor:</b> 2 years	<b>Labor:</b> 2 years	<b>Labor:</b> 2 years

### Dimensions and weight

	Without stand:	With stand:
<b>NS-15E720A12</b>	15.16 × 10.39 × 1.69 in. (385 × 255 × 43 mm) 3.31 lbs. (1.5 kg)	15.16 × 11.34 × 5.43 in. (385 × 288 × 138 mm) 3.75 lbs (1.7 kg)
<b>NS-19E720A12</b>	17.95 × 11.69 × 1.73 in. (456 × 297 × 44 mm) 5.95 lbs. (2.7 kg)	17.95 × 12.99 × 5.43 in. (456 × 330 × 138 mm) 6.39 lbs (2.9 kg)
<b>NS-22E730A12</b>	20.51 × 13.31 × 1.89 in. (521 × 338 × 48 mm) 7.5 lbs (3.4 kg)	20.51 × 14.72 × 6.3 in. (521 × 374 × 160 mm) 8.2 lbs (3.7 kg)
<b>NS-24E730A12</b>	22.95 × 15.04 × 1.77 in. (583 × 382 × 45 mm) 9.92 lbs (4.5 kg)	22.95 × 16.5 × 6.3 in. (583 × 419 × 160 mm) 10.58 lbs (4.8 kg)

### Screen

<b>Screen size measured diagonally</b>	<b>NS-15E720A12:</b> 15.6 in. <b>NS-19E720A12:</b> 18.5 in. <b>NS-22E730A12:</b> 21.5 in. <b>NS-24E730A12:</b> 23.6 in.
<b>Display type</b>	LCD (all models)
<b>Panel 60 Hz vs.120 Hz</b>	60Hz (all models)
<b>Display resolution</b>	<b>NS-15E720A12:</b> 720p <b>NS-19E720A12:</b> 720p <b>NS-22E730A12:</b> 1080p <b>NS-24E730A12:</b> 1080p
<b>Panel resolution</b>	<b>NS-15E720A12:</b> 1366 (H) × 768 (V) <b>NS-19E720A12:</b> 1366 (H) × 768 (V) <b>NS-22E730A12:</b> 1920 (H) × 1080 (V) <b>NS-24E730A12:</b> 1920 (H) × 1080 (V)
<b>Aspect ratio</b>	16:9 (all models)
<b>Contrast ratio (typical)–panel</b>	<b>NS-15E720A12:</b> 600:1 <b>NS-19E720A12:</b> 1000:1 <b>NS-22E730A12:</b> 1000:1 <b>NS-24E730A12:</b> 1000:1
<b>Dynamic contrast ratio–list value</b>	5000:1 (all models)
<b>Brightness (center typical) cd/m2</b>	<b>NS-15E720A12:</b> 220 <b>NS-19E720A12:</b> 250 <b>NS-22E730A12:</b> 250 <b>NS-24E730A12:</b> 280
<b>Comb filter</b>	3d y/c digital (all models)
<b>Response time</b>	<b>NS-15E720A12:</b> 8 ms <b>NS-19E720A12:</b> 5 ms <b>NS-22E730A12:</b> 5 ms <b>NS-24E730A12:</b> 5 ms

<b>Horizontal viewing angle</b>	<b>NS-15E720A12:</b> 80 <b>NS-19E720A12:</b> 170 <b>NS-22E730A12:</b> 170 <b>NS-24E730A12:</b> 170
<b>Vertical viewing angle</b>	<b>NS-15E720A12:</b> 45 <b>NS-19E720A12:</b> 160 <b>NS-22E730A12:</b> 160 <b>NS-24E730A12:</b> 160

### Display resolutions/VGA scan rates

<b>HDMI 1.4</b> Suggested Resolutions (all models)	1080p, 1080i, 720p, 480p, 480i
<b>HDMI 1.3</b> Suggested Resolutions (all models)	1080p, 1080i, 720p, 480p, 480i
<b>Component video</b> Suggested Resolutions (all models)	1080i, 720p, 480p, 480i
<b>PC/VGA</b> Suggested scan rates:	<b>NS-15E720A12:</b> 640 × 480/60Hz, 800 × 600/60Hz, 1024 × 768/60Hz, 1366 × 768/60Hz <b>NS-19E720A12:</b> 640 × 480/60Hz, 800 × 600/60Hz, 1024 × 768/60Hz, 1366 × 768/60Hz <b>NS-22E730A12:</b> 640 × 480/60Hz, 800 × 600/60Hz, 1024 × 768/60Hz, 1280 × 1024/60Hz, 1920 × 1080/60Hz <b>NS-24E730A12:</b> 640 × 480/60Hz, 800 × 600/60Hz, 1024 × 768/60Hz, 1280 × 1024/60Hz, 1920 × 1080/60Hz

### Tuner

<b>Analog</b>	NTSC (all models)
<b>Digital</b>	ATSC, 8-VSB, Clear-QAM (all models)

### Inputs

<b>HDMI/DVI</b>	<b>NS-15E720A12:</b> 2 (side) <b>NS-19E720A12:</b> 2 (side) <b>NS-22E730A12:</b> 1 (side) 1 (back) <b>NS-24E730A12:</b> 1 (side) 1 (back) (HDMI 2 with ARC for all models)
<b>Component video</b>	1 (back) (all models)
<b>Composite video</b>	<b>NS-15E720A12:</b> 1 (back) <b>NS-19E720A12:</b> 1 (back) <b>NS-22E730A12:</b> 1 (side) <b>NS-24E730A12:</b> 1 (side)
<b>Shared audio (component and composite)</b>	<b>NS-15E720A12:</b> yes <b>NS-19E720A12:</b> yes <b>NS-22E730A12:</b> no <b>NS-24E730A12:</b> no
<b>S-Video</b>	No (all models)
<b>PC/VGA</b>	<b>NS-15E720A12:</b> 1 (side) <b>NS-19E720A12:</b> 1 (side) <b>NS-22E730A12:</b> 1 (back) <b>NS-24E730A12:</b> 1 (back)
<b>3.5mm PC audio input</b>	<b>NS-15E720A12:</b> 1 (side) <b>NS-19E720A12:</b> 1 (side) <b>NS-22E730A12:</b> 1 (back) <b>NS-24E730A12:</b> 1 (back)

<b>USB</b>	1 (side) (all models) Support JPEG and firmware upgrade
<b>Headphone</b>	1 (side) (all models)

### Outputs

<b>Video</b>	No (all models)
<b>Analog audio</b>	1 (side) all models
<b>Digital audio</b>	<b>NS-15E720A12:</b> no <b>NS-19E720A12:</b> no <b>NS-22E730A12:</b> 1 (back) <b>NS-24E730A12:</b> 1 (back)
<b>WiFi</b>	No (all models)
<b>Ethernet</b>	No (all models)

### Audio

<b>Number of speakers</b>	2
<b>Watts per channel</b>	3W
<b>Simulated Surround Sound</b>	Yes - SRS TruSurround HD (all models)
<b>Sound Leveler</b>	Yes (all models)

### Power

<b>Power consumption</b>	<b>NS-15E720A12:</b> On: 20 W Standby: <1 W <b>NS-19E720A12:</b> On: 26 W Standby: <1 W <b>NS-22E730A12:</b> On: 34 W Standby: <1 W <b>NS-24E730A12:</b> On: 33 W Standby: <1W
<b>Power input</b>	120V/60Hz (all models)

### Miscellaneous

<b>OSD languages</b>	English, French, Spanish (all models)
<b>INlink</b>	Yes (all models)
<b>ENERGY STAR qualified</b>	Yes (all models)
<b>Internet connectable</b>	No (all models)
<b>TV base screws</b>	M4 type 14 mm length (4) (all models)
<b>V-Chip (version 2.0)</b>	Yes (all models)
<b>Sleep timer</b>	Yes (all models)
<b>Channel labeling</b>	Yes (all models)
<b>VESA mount (mm) (horizontal × vertical)</b>	100 × 100 (all models)

#### Note

The length of the wall-mount screws vary depending on the wall-mount bracket you purchased. See the instructions that came with the wall-mount bracket for screw lengths.



# Programming universal remote controls

## Programming a different universal remote control

You can operate your Insignia TV with a new or existing universal remote control.

### To program a different universal remote control:

- 1 See the table below for common codes. If you have problems programming your remote or need a different remote control code, visit [www.insigniaproducts.com/remotecodes](http://www.insigniaproducts.com/remotecodes) for the latest remote control code information.
- 2 Follow your universal remote control's instructions to enter the TV code you found in Step 1.

#### Tips

- If your universal remote control has a code search feature, run a code search to identify a code that matches your TV. See your universal remote control's instructions for details.
- If your universal remote control has a "Learn" feature, you can manually program it using the Insignia TV remote to "teach" the commands one at a time. See your universal remote control's instructions for details.

For additional help and information:

- Visit: <http://www.insigniaproducts.com/remotecodes>
- Call technical support for the universal remote control or cable/satellite company of the remote/set-top box you are trying to program.
- Call the Insignia Customer Care Center 1-877-467-4289.

## Common universal remote control codes

The following is a list of the most common remote control codes. Codes for other remote controls are available online at: <http://www.insigniaproducts.com/remotecodes> or check with your cable or satellite TV provide for the remote control code.

### Insignia TV codes for universal remote controls (for all Insignia TVs manufactured after Jan. 1, 2007)

Universal remote control makes and models	
One for All	0054
Phillips	0198, 0490
RCA	135
Sony	068, 069, 078, 096, 100, 164, 168, 229, 026

Set-top box makes and models	
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002
Cox	1326, 1463
DirectTV	10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002
Dish Network	720
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
TiVo	0091
Verizon	0198, 0490

#### Tips

- The brand name is often visible on the front of the universal remote control, and the model number is often visible on the back.
- If your universal remote control isn't listed on the chart, refer to your universal remote control's instructions and try codes for the brands Orion, Emerson, Memorex, Sansui, Sylvania, or Zenith. You may need to try several codes before finding a match.

## Legal notices

### FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

### Cables

Connections to this device must be made with shielded cables with metallic RF/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

### Canada ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003. Standard Television Receiving Apparatus — Appareil de réception télévision ordinaire, Canada BETS-7 / NTMR-7

### Dolby License Notice and Trade Mark Acknowledgement



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

### HDMI



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

### Energy Star



To meet Energy Star requirements, keep TV settings at the factory default settings.

### SRS TruSurround HD



is a trademark of SRS Labs, Inc. TruSurround HD technology is incorporated under license from SRS Labs, Inc.

# Two-year limited warranty - Insignia Televisions

## US and Canada Markets

### Definitions:

Insignia Products ("Insignia") warrants to you, the original purchaser of this new Insignia-branded television ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of two (2) years from the date of your purchase of the Product ("Warranty Period"). For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy or Future Shop authorized dealer of Insignia brand products only that are packaged with this warranty statement.

### How long does the coverage last?

The Warranty Period lasts for 2 years (730 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

### What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

### How to obtain warranty service?

If you purchased the Product at a Best Buy or Future Shop retail store location and your television Product has a screen size of less than 37 inches, please take your original receipt and the Product to any Best Buy or Future Shop store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy or Future Shop online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain in-home warranty service for a television with a screen 37 inches or larger, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY for Future Shop call 1-800-663-2275. Call agents will diagnose and correct the issue over the phone or will have an Insignia-approved repair technician dispatched to your home.

### Where is the warranty valid?

This warranty is valid only to the original purchaser of the product in the United States and Canada at Best Buy or Future Shop branded retail stores or websites.

### What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as power surges
- Accident(s)
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

[www.insigniaproducts.com](http://www.insigniaproducts.com)

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, Minnesota, U.S.A.  
55423-3645

© 2011 BBY Solutions, Inc.

All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.



[www.insigniaproducts.com](http://www.insigniaproducts.com)  
US & Canada: 1 (877) 467-4289

Distributed by Best Buy Purchasing, LLC  
7601 Penn Avenue South, Richfield, MN USA 55423-3645  
© 2011 BBY Solutions, Inc.

All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries.  
All other products and brand names are trademarks of their respective owners.



ENGLISH  
10-1338