DryTunes



Mobile Device Pairing Instructions

Pair to **DryTunes-PB** in your mobile device settings. The speaker must be in Single Listener or DJ Broadcast modes to pair to a mobile device. The blue LED will blink when a mobile device is not paired and will be solid after successfully pairing.

Party Button: Click-Press cycles through the modes listed below..

Blue: Single Listener Mode (Standalone)

Purple: DJ Broadcast Mode

Red: DJ Listening Mode (rejoins previous "Party" if available).

Volume Decrease (Hold Press)/Rewind (Click Press)

▼ Volume Increase (Hold Press)/Forward (Click Press)

▼ Play/Puase

Power On/Off (Hold press and release. The speaker has a delayed On/Off)

SETTING UP A PARTY:

- 1 Decide who will DJ the Party and who will listen.
- 2 DJ: Click the Party Button on your speaker until @ Party Button turns purple "DJ Broadcast Mode". Press and hold Party Button to enter "Broadcast Pairing". The Party Button will blink while in Broadcast Pairing mode. Multiple listeners can join simultaneously during this time. Broadcast Pairing mode will timeout after 5 minutes or you can press and hold the Party Button to end Broadcast Pairing mode.
- 3 Listeners: Click the Party Button on your speaker until Party Button turns red "DJ Listening Mode". Press and hold Party Button to enter "Broadcast Pairing". Listeners will get an audible confirmation when pairing completes. Listeners may leave the Party by using the Party Button to switch to Single Listener Mode and rejoin at any time by simply entering DJ Listening Mode again.

Volume controls while in DJ Listener Mode:

Listeners can control the local volume on their system by using the volume decrease/increase buttons. However, anytime the DJ adjusts the DJ "master volume" it will reset all listeners to the new DJ volume level.

Charging Unit: Indicator LED will turn red when unit is charging. Indicator LED will turn green when unit is fully charged. Unit can take up to 3 hrs to charge.

