



## INSTRUCTION MANUAL



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



### **ENERGY STAR® Qualification.**

Enabling certain features and functionality in this product (e.g. Picture Mode, Volume) may increase its energy consumption, possibly beyond the limits required for ENERGY STAR® qualification.

This product has earned the ENERGY STAR® qualification meeting US Federal Energy Efficiency guidelines as established by the Department of Energy and Environmental Protection Agency. The ENERGY STAR® program exists to provide energy saving guidelines and help promote energy efficient products and practices.

**Power Saving Mode** is the mode in which the product qualifies for ENERGY STAR®.

### IMPORTANT

Please read this manual carefully before installing and operating the TV

Keep this manual handy for further reference

GQTVOMVG01

# Content

---

<b>Safety Information</b> .....	1
<b>Important Safety Precautions</b> .....	2
<b>TV Buttons And Connections</b> .....	3
<b>External Device Connection Diagram</b> .....	3
<b>TV Install And Connect.</b> .....	4
<b>TV Stand Installation Instructions</b> .....	4
<b>OSD</b> .....	5
1、 Initial Setup .....	5
2、 HOME .....	9
3、 Settings .....	10
4、 TV Source Setting .....	12
5、 Accounts & sign-in .....	13
<b>Help.</b> .....	14
<b>Specifications</b> .....	15
<b>Remote Controller.</b> .....	16
<b>Warranty</b> .....	17

# Safety Information

	<b>CAUTION / ATTENTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN RISQUE D'ELECTROCUTION. NE PAS OUVRIR.	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

<b>WARNING:</b> TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.
<b>CAUTION:</b> TO PREVENT ELECTRIC SHOCK. DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

**WARNING:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

<p><b>FCC Declaration or Conformity Compliance statement (Part 15):</b></p> <p>This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The party responsible for compliance to these rules is:</p> <p>GLOBAL Q INTERNATIONAL Ltd. 2700 E. Imperial Hwy Lynwood CA 90262 Ph:1-618-392-3456</p>
---

## Important Safety Precautions

- 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions.
- 5) Do not use this apparatus near water. 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety, If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments /accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over. 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.

### Caution:

- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) The AC receptacle shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 21)  Never place the TV, remote control or batteries near open flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 22) The USB terminal should be loaded with 0.5 A under normal operation.  
To reduce the risk of electric shock do not perform any servicing.
- 23)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 24) This apparatus should not be used at temperatures exceeding 113 degrees.


# TV Buttons And Connections

## TV Buttons

Note: The following is a representative example.

The position and arrangement of button may differ by model.

### One Key:

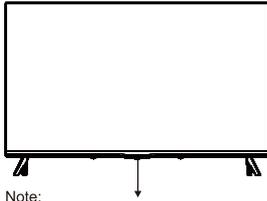

Note:  
Press this button to turn on / off the TV.

### Seven keys:

	Turn ON/OFF Power.
SOURCE	External Signal Input Selection.
MENU	Display Main MENU And Confirm MENU Item Selection.
CH+/-	Selecting Channel.
VOL+/-	Adjusting Volume.

Note:  
Picture for reference purposes only.

## Connections


Note: The following are the various connections available. The position and arrangement of connections differ by model.

	<b>AV input</b> External AV Signal Input		<b>ANT 75</b> Connect the antennal/cable tv input (75VHF/UHF)
	<b>RJ45</b> Connect the Internet.		<b>USB input</b> Connect a USB device here to play its media files or to record programs via the PVR function.
	<b>HDMI input</b> Digital signal input from HDMI video connector.		<b>OPTICAL output</b> Connect the SPDIF receiver.
	<b>HEADPHONE JACK</b> Plug earphones into jack for private listening. Overrides speakers.		





\* Please discontinue use of any device using the USB mode before connecting, disconnecting or adjusting the HDMI or USB terminal ports.  
Failure to do so can result in an electrostatic discharge that could cause damage to the TV and/or its operation.

## External device connection diagram

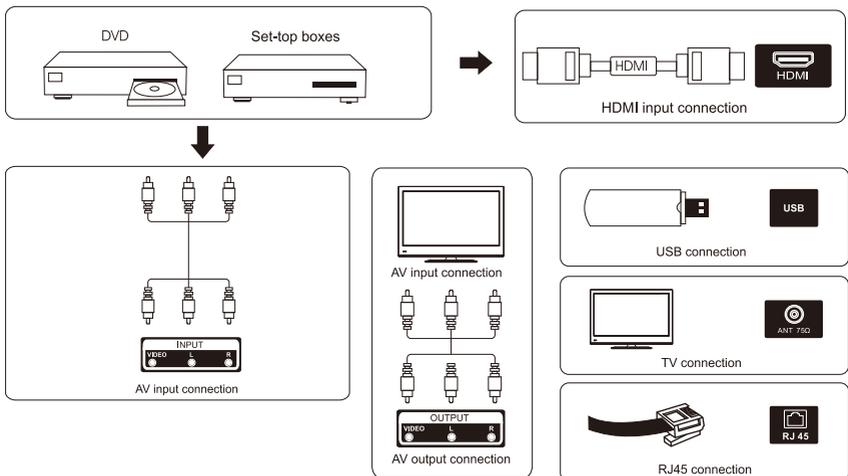

# TV Install And Connect

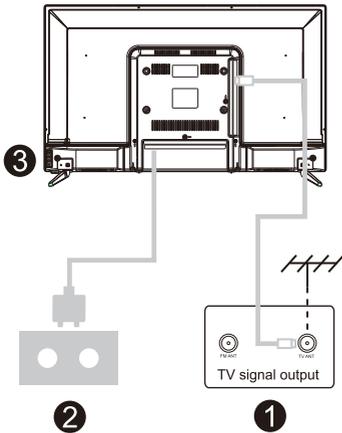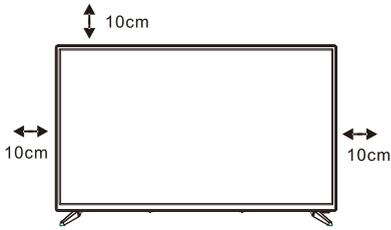

### Setup your TV

1. Put your TV in a place that can support the weight of the TV.

To avoid danger, please do not assemble the TV near water or extreme heat (such as a furnace, light source, or candle.)

Do not block the ventilation on the back of the TV.

### Connect signal source and power

2. Connect the antenna cable to the RF connection on the back or side of the TV, and/or the signal source HDMI cable to the HDMI input(s) on the rear or side of TV. Plug the TV into the wall power outlet (AC 100-240V~ 50/60Hz).

### Turn on the TV

3. Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV.

### Note:

Picture for reference purposes only.

## TV Stand Installation Instructions

### Stand Installation Guide

The TV is packaged with the TV stand separated from the cabinet. To setup the TV table stand, please carry out the installation according to the instructions below.


1. The panel can be scratched easily, so please: Place a soft cloth on the table and place the TV face down on the cloth.

Note: Always unplug the AC cord first when installing/removing the stand.

2. Take the base. Please align the screw holes of the base and the TV, and then insert the screws into the holes on the base and tighten them.

Note: To ensure that the TV is stable, please tighten all screws.

The stand of some TV models is designed with snap-in type, easily installed by snapping into stand groove, instead of screw.

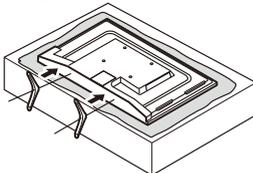

Please take note of the base direction:




The bottom view of the TV  
(Front cabinet faces down)

(The illustration is for reference only. Please prevail in kind)

### Suggestion:

To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

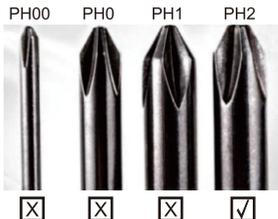


# Initial Setup

## 1. Initial Setup

For the first initial setup, on-screen setup wizard will guide you through setting up your TV. Please follow the guide to setup your TV correctly.


### 1.1 Language select

Use **▲/▼** buttons to select system languages, then press **[OK]** to confirm.

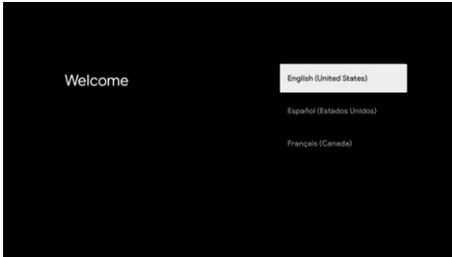


### 1.2 Region or Country select

Use **▲/▼** buttons to select your region or country, then press **[OK]** to confirm.

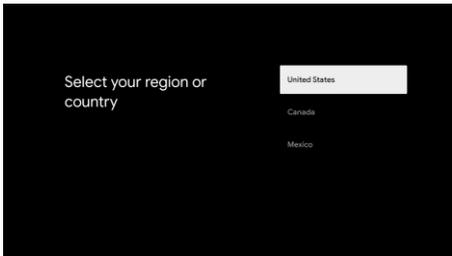

### 1.3 TV set-up select

Use **▲/▼** buttons to select your TV setup, then press **[OK]** to confirm.

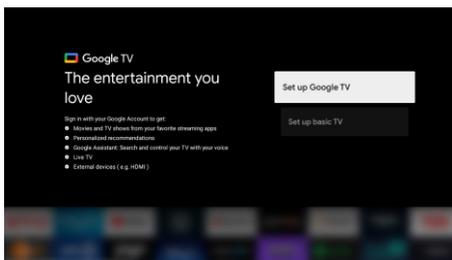


#### 1.3.1 Set up Google TV

1. Use your Android™ Smart phone to download and open the Google Home app on your phone.
2. Use the Google Home to scan the QR code on the TV device.
3. Follow the instructions in the Google Home app.

Note: Press "BACK" to cancel

If you just want to use your TV normally, please select "Set up basic TV"

# Initial Setup

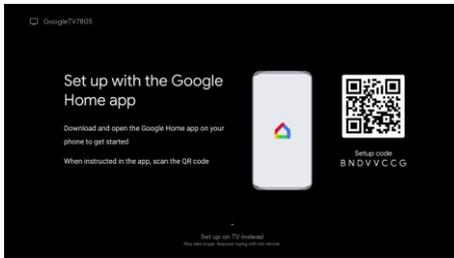


## 1.3.2 Set up basic TV

Press “OK” button enter to the next page to Select your wifi network.


### 1.3.2.1 Configure the wifi network

Press **^**/**v** buttons to select Wi-Fi you wish to connect to, enter the password and then confirm to connect. If you select “Skip”, it could be performed in homepage or settings menu.

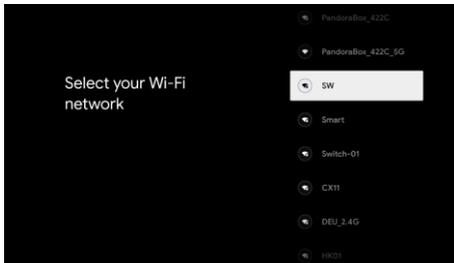

## 1.4 Terms of Service


By accepting the Google Terms of Service to improve the product experience, Select “Accept” to proceed with this condition.

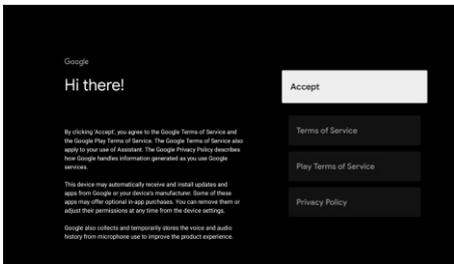

## 1.5 Google Services


Select “Accept” to confirm if you want your location identified on your Google TV™ and agree to automatically send diagnostic information to Google to help improve your Google experience.

# Initial Setup

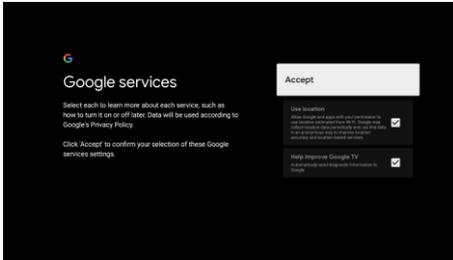


## 1.6 Pairing Bluetooth Remote

1. Press 'BACK ←' and 'Home 🏠' simultaneously on remote control to enter the Bluetooth pairing mode.
- The Indicator light on remote control will flash when starting the pairing mode.
2. Select the 'Skip' icon to skip the pairing mode.

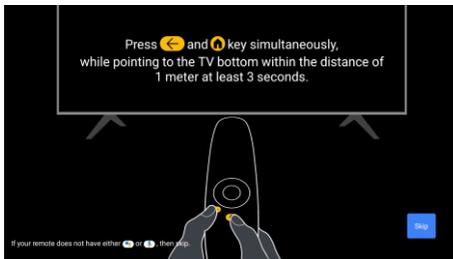


## 1.7 Time zone

Press "OK" button to set up the time zone.

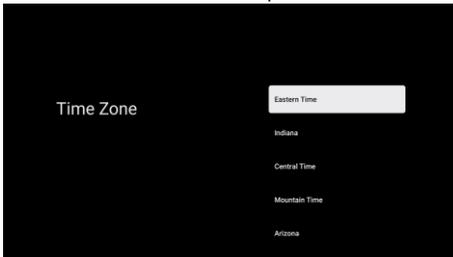

## 1.8 Select TV mode (Home/Retail)


Please be sure in this step, select "Home" if you are using this TV for use at home. Make sure to confirm once you have selected "Home".

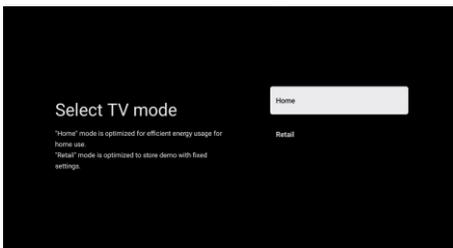

# Initial Setup

## 1.9 Chromecast built-in™



Select On/Off to make Chromecast built-in always available.

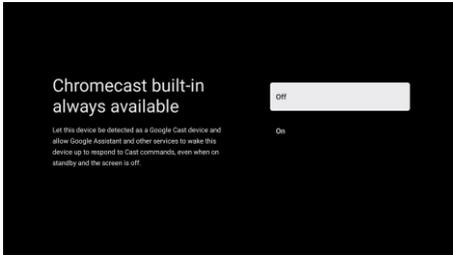


## 1.10 Tuner mode Setting

Select Antenna/Cable/Satellite to scan TV channel.

If you select "Skip", the channel scan could be performed in menu.

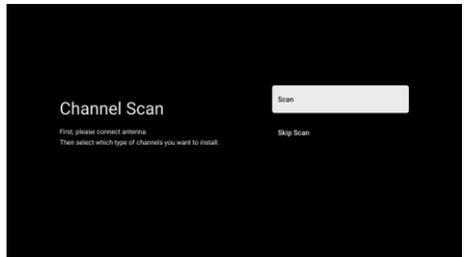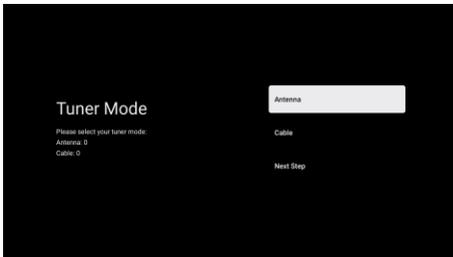



## 1.11 Setup completed and Disclaimer Terms

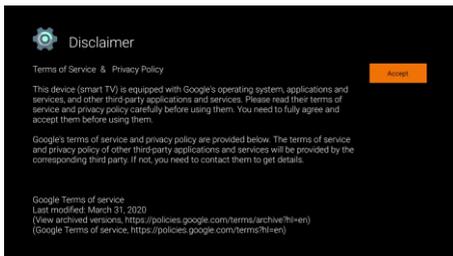

## 1.12 Play Auto Installs

Select install or un-install the recommended apps and Google apps by using this process.


Select "Start exploring" to the next page.

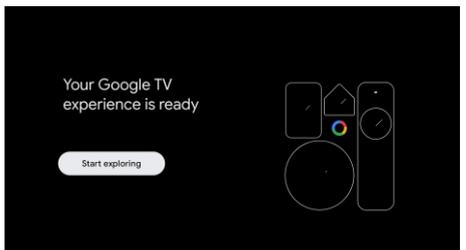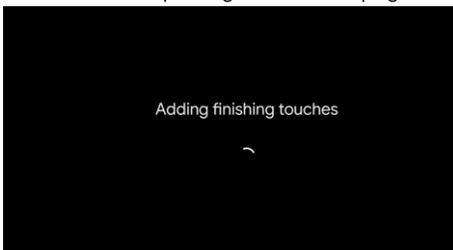

# HOME

## 2. HOME

Once you have completed initial setup, you will now enter the home by screen or press **Home** button to display the homepage.

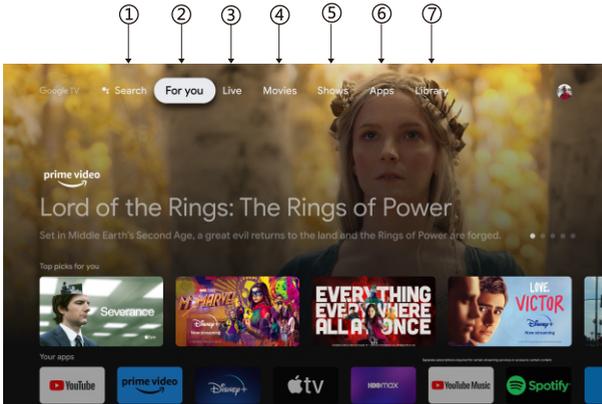

\*Some countries home screen UI may display different as above image, please refer to the product for details.

### 1. Search

Use your voice to jump to shows, control devices, and more—just ask Google.

### 2. For you

Selected the “For you” to browse content from across your apps, intelligently organized just for you.

### 3. Live TV (US Only)

Live TV is just a click away with its own dedicated tab.

### 4. Movies & 5. Shows

Discover new movies and shows from across your subscriptions. Suggestions based on what you’ve watched and what interests you make it easier to find your next favorite.

### 6. Apps

Selected the “Apps” to have access to all your applications. Pre-installed applications are available for you in this row.

### 7. Library


One list for all your discoveries. When you see an interesting show or movie, add it to your Watchlist to keep track of your new discoveries.

# Settings

## 3.Settings

Allows to set various performance of your TV .


- 1.Press </> button to select “Settings” which is in the upper right corner of the screen.
- 2.Press  $\Delta/\nabla$  button to select the option which you want to adjust in the Settings menu.
- 3.Press [OK] to enter.

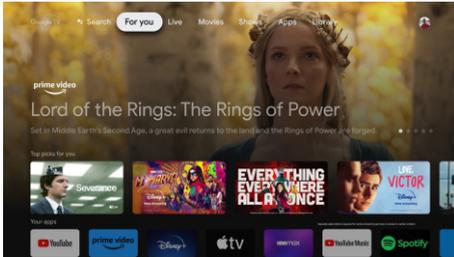

### Channel and inputs

Display the scan sub-menu based on different channel installation modes.


- 1.Press  $\Delta/\nabla$  button to select “Channel Source” & Inputs”.
- 2.Press [OK] to enter “Channels”, then press  $\Delta/\nabla$  choose Analog, Antenna, Cable etc to scan the channels.
- 3.Press  $\Delta/\nabla$  button to select “Inputs”, press [OK] to enter “Inputs”, then press  $\Delta/\nabla$  choose HDMI1, HDMI2, HDM3, HDMI4, Composite etc.

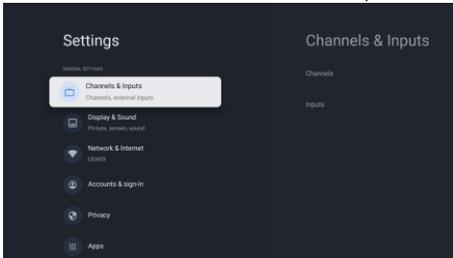

### Network & Internet

Adjust all network setting and check connection if you have connection problems.

- 1.Press  $\Delta/\nabla$  button to select “Network & Internet” in the settings menu.
- 2.Press  $\Delta/\nabla$  button to select: Wi-Fi/Add new network/Scanning always available/Proxy settings/IP settings.

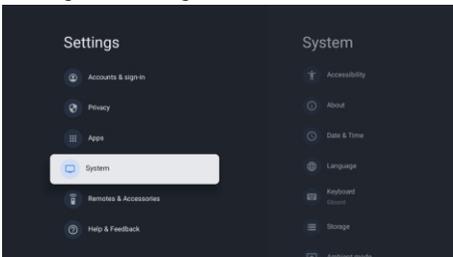


### System

- 1.Press  $\Delta/\nabla$  button select the options of About, Date & Time, Timer, Language, Inputs, Picture, Sound, Google Assistant, Reset and others.
- 2.Press [OK] to jump to the corresponding sub-option.

# Settings

## About


1. Press **^/V** button to check additional information such as System update, Device name, Restart, Status, and more.
2. Press **←** button to return to the previous menu.  
Press **←** button to exit the menu.

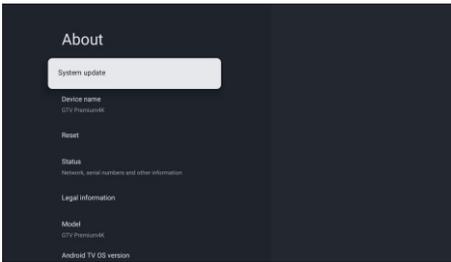

\* The above pictures are for reference only, please refer to the product for details.

## Factory reset

If Factory reset is selected, it will erase all data from your device's internal storage, including: your Google Account, system and app data and settings, and downloaded apps.

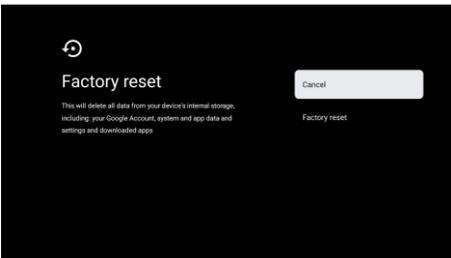


## Tv Source setting

### 4. Tv Source setting

---

To enter TV source in Homepage:


1. Press  button to select input source.
2. Press , then select "Channels" and select "New Channels Available" to enter.

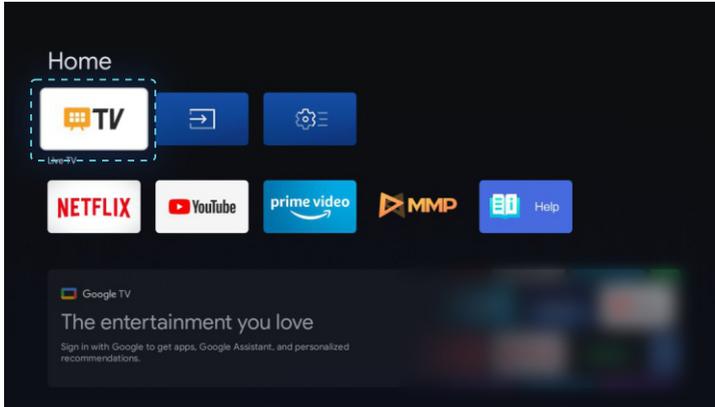


# Accounts & sign-in

## 5. Accounts & sign-in


To have access and to download applications, you must sign in with a Google Account.

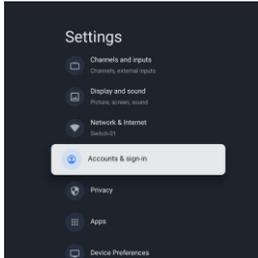

Once you open Google Play, you will be prompted to sign in or create a new account.

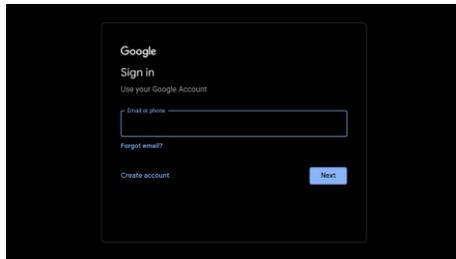

Once you have signed in, you will be brought to the below page, scroll through the list of applications available for download or go to the search button, and search via entering text or by asking Google on your voice remote.

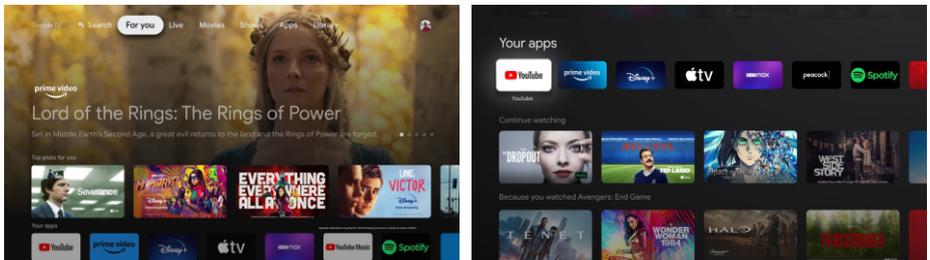

\* The above pictures are for reference only, please refer to the product for details.

# Help

No power	<ul style="list-style-type: none"> <li>● Check if the AC cord of TV is plugged in or not. If there's still no power, please disconnect the plug, and reconnect to the outlet after 60 seconds. Turn the power back on.</li> </ul>
Signal not received properly	<ul style="list-style-type: none"> <li>● Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult antenna instruction manual adjust the direction of the external antenna.</li> <li>● If you use an indoor antenna, signal reception may be more difficult under certain circumstances. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>● Check if the antenna at the back of the TV is connected properly.</li> <li>● View other channels to see if the problem still occurs.</li> </ul>
Video appears with no audio	<ul style="list-style-type: none"> <li>● Try increasing the volume.</li> <li>● Check if the TV's sound is on mute or not.</li> </ul>
Audio is present, but video does not appear or is discolored	<ul style="list-style-type: none"> <li>● Try adjusting the contrast and brightness.</li> </ul>
Static noise affects video and audio quality	<ul style="list-style-type: none"> <li>● Check if the antenna at the back of the TV is connected properly.</li> </ul>
Broken lines on screen	<ul style="list-style-type: none"> <li>● Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV set. Switch these appliances off.</li> </ul>
Remote doesn't work	<ul style="list-style-type: none"> <li>● Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct, or try using new batteries with the remote control.</li> <li>● The TV will go into Standby mode if it receives no response in a few minutes.</li> </ul>
No video (PC mode)	<ul style="list-style-type: none"> <li>● Please check if the cable is connected to the HDMI port correctly, or if the cable is bent or damaged.</li> </ul>
Vertical line blinking (PC Mode)	<ul style="list-style-type: none"> <li>● Enter the main menu, and adjust the vertical placement to eliminate the vertical line.</li> </ul>
Horizontal tearing (PC Mode)	<ul style="list-style-type: none"> <li>● Adjust the horizontal placement of the screen to clear any horizontal lines.</li> </ul>
Screen is too bright or dark (PC Mode)	<ul style="list-style-type: none"> <li>● Adjust the brightness or contrast in the main menu.</li> </ul>
No response from the PC	<ul style="list-style-type: none"> <li>● Check if the PC's display resolution is set to a compatible resolution for the TV.</li> </ul>
Lines appearing when a device is connected to the RCA port	<ul style="list-style-type: none"> <li>● Make sure you are using a cable which is not bent or damaged.</li> </ul>
Problems are unresolved	<ul style="list-style-type: none"> <li>● Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the TV by yourself. Kindly contact <b>customer service 618-392-3456</b>.</li> </ul>

Do not leave your TV displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.

# Specifications

Screen Size	power Consumption	Main accessories
24"	30W/36W	User's manual x1 Remote controller x1 Power cord x1 AAA Batteries x2 (Optional)
28"	31W/36W	
32"	40W/56W	
39"/40"	60W/70W/90W	
42"	65W/70W/90W	
43"	70W/80W/90W	
50"	100W/108W/120W	
55"	110W/118W/135W	
58"/60"	120W/135W/160W	
65"	160W/165W/190W	
75"	185W/230W/250W/260W	

★ LIFE TIME : 60,000 Hrs

	Operation Frequency	Transmitting Power
WiFi	2400~2483.5	Less Than 100mW

### WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

1. Using cabinets or stands recommended by the manufacturer of the television set.
2. Only use furniture that can safely support the television set.
3. Ensure the television set is not overhanging the edge of the supporting furniture.
4. Do not place the television set on tall furniture (for example, cupboards or bookcases), without anchoring both the furniture and the television set to a suitable support.
5. Do not place the television set on cloth or other materials that may be located between the television set and supporting furniture.
6. Educate children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.


Wall-mounted screw: 22-24inch M4, 28-70inch M6, 75inch M8

Note: don't hang at an angle to avoid the risk of falling off.

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, Chromecast built-in and YouTube Music are trademarks of Google LLC. Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

This user manual for reference only

# Remote control

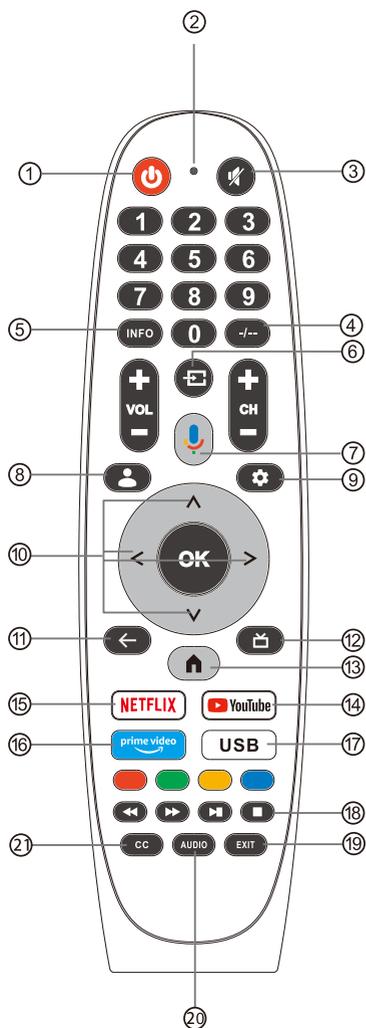

- ① Switches the TV between on and standby mode.
- ② Indicator light.
- ③ Mute or restore your TV sound.
- ④ Enter "-" for Sub-channel symbol (Ex:11-1)
- ⑤ **INFO**: Displays the present channel information such as the current time and channel name.
- ⑥ **Inputs**: Display/Select signal source options.
- ⑦ **Google Assistant**: Talk to Google to control your TV using your voice.
- ⑧ **Kids**: Switch to Kids mode.
- ⑨ **Setting**: In the HOME page, this button is "Dashboard" function. On the Live TV, this button is "Menu" function.
- ⑩ **Navigation buttons**: Cursor UP/LEFT/RIGHT/DOWN.
- ⑪ **Back**: Press to move back through menus.
- ⑫ **Live Guide**: Open the Live TV EPG.
- ⑬ **HOME**: Displays the home screen.
- ⑭ **YouTube**: Connects to YouTube (internet connection required).
- ⑮ **NETFLIX**: Connects to NETFLIX for viewing online TV shows and films (internet connection required).
- ⑯ **Prime video**: Connects to Prime video (internet connection required).
- ⑰ **USB**: Press to enter Multimedia Player.
- ⑱ **Exit**: Exit the OSD menu.  
**PVR**: Record Live TV programme.  
**Play**: Play the last/next program  
**Play/Pause/Stop**: Play/Pause/Stop program
- ⑲ **EXIT**: Press to exit the OSD menu.
- ⑳ **Audio**: Displays the Audio Language list and select an audio language or audio format if available (only applicable when the TV programme has this feature).
- ㉑ **CC**: Closed Caption

\*Google Assistant is not available in certain languages and countries. Availability of services varies by country and language

Serial # \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Place of Purchase \_\_\_\_\_

Your receipt is required to verify your proof of purchase, please attach a copy of your receipt here for your records.



# *limited* **WARRANTY**

Elitelux Technologies warrants this product to be free from manufacturing defects in material and workmanship under normal use and conditions for a period of 1 year from date of original purchase.

Should service be necessary under this warranty for any reason due to a manufacturing defect or malfunction during the first 12 months from date of original purchase, Elitelux will provide carry-in service for units with a screen size of 49 inches or below, and in-home service for units 50 inches or greater in screen size by a Elitelux authorized Independent Service Center at no charge. Also, if an original part fails due to manufacturing defect in material and workmanship within one year from date of original purchase we will replace the defective part, provided the defect or malfunction is verified along with dated proof of purchase.

There are Elitelux authorized Independent Service Centers located throughout the country. For the one nearest you, DIAL: 1-618-392-3456. Elitelux will not be liable for damages incurred in shipment of the unit. If there are no Elitelux authorized Independent Service Centers in your area please call for assistance.

Note: This warranty is void if the product is:

- (a) Damaged through negligence, misuse, abuse, or accident.
- (b) Used in a commercial application or rentals.
- (c) Modified or repaired by anyone other than an Independent Service Center authorized by Elitelux to effect warranty repairs to the class of product.
- (d) Damaged because it is improperly connected to the equipment of other manufacturers.

This warranty does not cover:

- (a) Damage to equipment not properly connected to the product.
- (b) Costs incurred in the shipping of the product to a Elitelux authorized Independent Service Center.
- (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence, or failure to follow operating instructions provided with the product.
- (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- (e) Signal reception problems caused by external antenna or cable systems.

THIS WARRANTY IS NON TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESS WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED SHALL APPLY TO THIS PRODUCT THEREAFTER. ELITELUX MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE AND USE.

UNDER NO CIRCUMSTANCES SHALL ELITELUX BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

IN THE UNITED STATES OF AMERICA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATION ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

## **ELITELUX TECHNOLOGIES, INC.**

3471 N. Union Drive  
Olney, IL 62450  
618-392-3456