 


VIVOLUXE

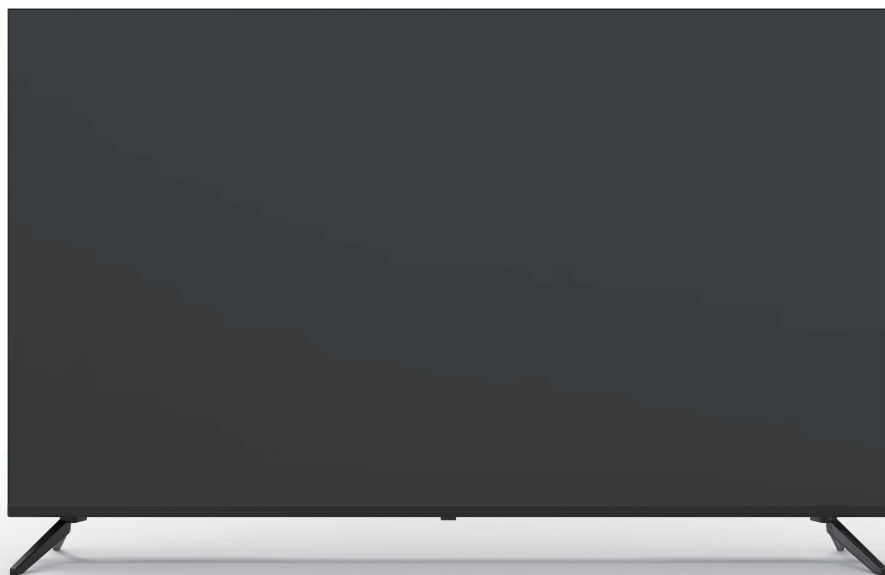

USER MANUAL

Model Size:VL-50VUHGE

TABLE OF CONTENTS

LED TELEVISION STANDINSTALLATION GUIDE

LED TV WALL MOUNT INSTALLATION GUIDE

IMPORTANT SAFETY INSTRUCTIONS

PRECAUTIONS AND REMINDERS

BUTTON CONTROL AND PERIPHERAL CONNECTION

OPERATING INSTRUCTIONS

 
SPECIFICATIONS

TROUBLE SHOOTING


LED TELEVISION STANDINSTALLATION GUIDE

- 1** Please find the following parts that are included in the box.

Stands 2 pcs




Screws 4 pcs


 


- 2** Place the TV face down on a soft and flat surface (blanket, foam, cloth, etc.) to prevent any damage to the TV.

 - 3** Attach the stands to the bottom of the TV, and secure them by using the supplied screws (4pcs)

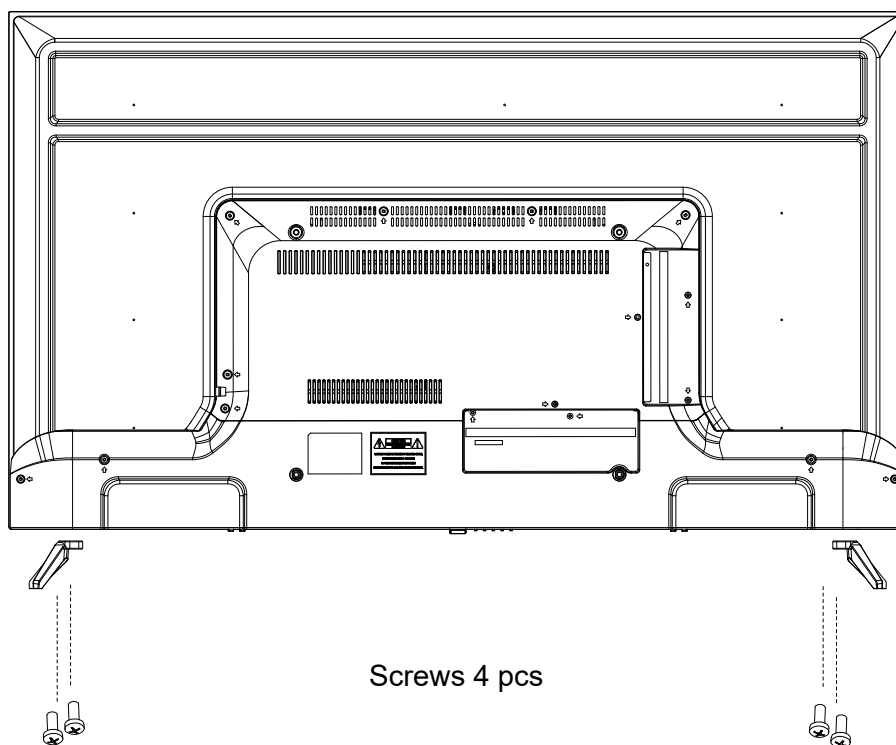

(Bottom view)

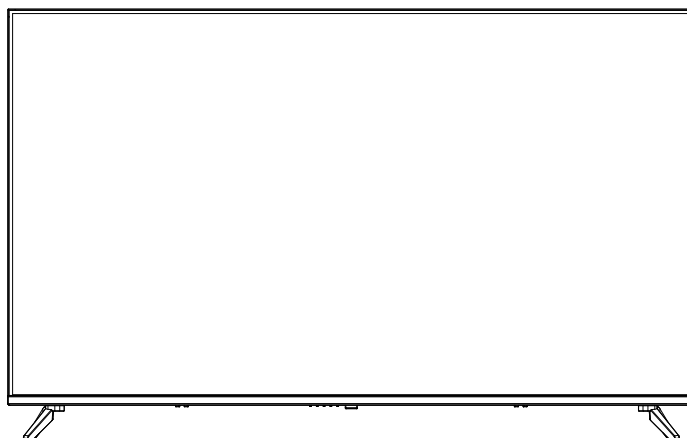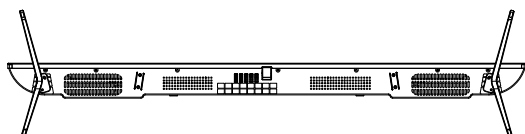  

LED TV WALL MOUNT INSTALLATION GUIDE

 
 
Use of a TV wall mounting

Warning

- Please purchase a suitable TV wall mount when mounting your TV on the wall.
- Ensure that the bearing capacity of the wall for mount installation is no less than 4 times the weight of the TV set and the wall mount so as to avoid falling.
- Please refer to the instructions provided with the TV set and wall mount for installation.
- Make sure there is no cable or conduit in the wall section where a wall mount will be installed.
- Please entrust a professional technician to complete installation. The company shall not be liable for accidents, personal injury or damage caused by improper installation of TV set.

Note:


- If any screws are found in the screw hole for wall mount behind the TV set before installing the wall mount, the screws shall be removed and put in place for later use.
- Please buy the wall screws according to the actual situation.

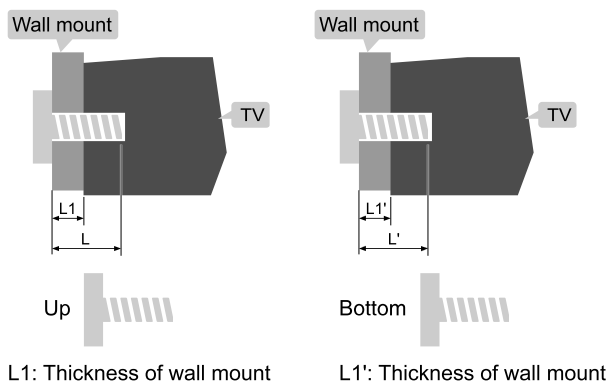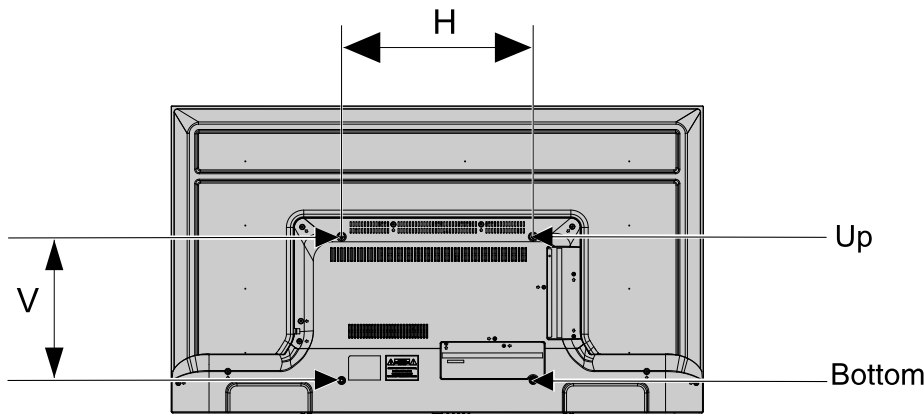

Distance between holes on the wall(H×V)(mm)	Required screws (recommended bolt length)(mm)
400x300	Up: CM6(2pcs)(L= 10 +L 1), Machine screws Bottom: CM6(2pcs)(L= 10 +L 1), Machine screws

IMPORTANT SAFETY INSTRUCTIONS

 - 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when unused for long periods of time
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

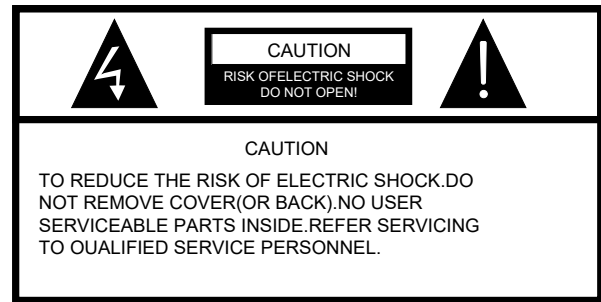

The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING:

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING:

- replacement of a battery with an incorrect type may defeat a safeguard;
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, may result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

CAUTION

Risk of fire or explosion if the battery is replaced by an incorrect type!



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

IMPORTANT SAFETY INSTRUCTIONS

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

Note: Don't hang at an angle to avoid the risk of falling off. Stability Hazard, The television set may fall, causing serious personal injury or death.

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

- 1) Lire les instructions.
- 2) Gardez les instructions.
- 3) Considérez tous les avertissements.
- 4) Suivez toutes les instructions.
- 5) N'utilisez pas cet appareil près de l'eau.
- 6) Nettoyez uniquement avec du linge sec.
- 7) Ne bloquez pas les ouvertures de ventilation, installez conformément aux instructions.
- 8) N'installez pas près de sources de chaleur telles que les rayonnements, les registres de chaleur, les poêles ou tout autre appareil (y compris les amplificateurs) qui produisent chaleur.
- 9) N'endommagez pas le but de sécurité de la prise polarisée. Si la prise fournie ne rentre pas dans votre prise, consultez un électricien pour le remplacement.
- 10) Protégez le cordon d'alimentation contre le fait d'être marchait ou pincé. Particulièrement aux prises, réceptacles de commodité, et le point où ils sortent de l'appareil.
- 11) N'utilisez que les pièces jointes/accessoires spécifiés par le fabricant.
- 12) Débranchez cet appareil pendant les orages ou ne pas faire usage de pendant une longue période de temps.
- 13) Contact pour l'entretien avec le personnel de service qualifié. Entretien est nécessaire lorsque l'appareil a été endommagé de quelque façon que ce soit, comme le cordon d'alimentation ou le bouchon est endommagé, le liquide a été renversé ou des objets sont tombés dans l'appareil, l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement, ou a été chuté.
- 14) La prise principale est utilisée comme to déconnecter l'appareil, il doit encore rester électrifié.
- 15) Les ouvertures de ventilation ne doivent pas être recouvertes d'articles, tels que journaux, nappes, rideaux, etc.
- 16) Évitez les sources de chaleur directes, telles que les bougies allumées, doivent être placées sur l'appareil.
- 17) La procédure de l'élimination des batteries doit être exercée dans une méthode respectueuse de l'environnement.
- 18) L'utilisation d'appareils dans un climat modéré.
- 19) L'appareil ne doit pas être exposé à des gouttes ou des éclaboussures et qu'aucun objet rempli de liquides, comme des vases, ne doit être placé sur l'appareil.



PRUDENCE
RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR



ATTENTION: POUR ÉVITER LE RISQUE DE CHOC ÉLECTRIQUE N'ENLEVEZ PAS LA COUVERTURE (OU ARRIÈRE). PAS D'UTILISATEURS-PARTIES UTILISABLES À L'INTÉRIEUR. SE RÉFÉRER AU PERSONNEL DE SERVICE QUALIFIÉ



Ce symbole est pour alerter l'utilisateur d'éviter le risque de choc électrique. Cet équipement peut être seulement désassemblé par un personnel de service qualifié.



Ce symbole est pour alerter l'utilisateur de la présence d'une opération importante et des instructions de maintenance dans la littérature accompagnant l'équipement.

ALERTE:

Pour réduire le risque d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ou à la l'humidité.

ALERTE:

Les piles ne doivent pas être exposées à une chaleur excessive comme le soleil, le feu ou autres.

AVERTISSEMENT:

- le remplacement d'une batterie par un type incorrect peut faire échouer un safeguard ;
- mise au rebut d'une batterie dans un four chaud ou broyage mécanique ou la coupure d'une batterie, peut entraîner une explosion ;
- laisser une batterie dans un environnement à température extrêmement élevée, comme le soleil, le feu ou une surface chaude peut entraîner une explosion ou fuite de liquide ou de gaz inflammable ;
- une batterie soumise à une pression d'air extrêmement basse peut entraîner un l'explosion ou la fuite d'un liquide ou d'un gaz inflammable.

PRUDENCE

Risque d'incendie ou d'explosion si la batterie est remplacée par un type incorrect !



Ce symbole a beaucoup de indique que ce produit intègre une double isolation entre la tension du réseau dangereux et parties accessibles. L'entretien doit seulement être avec pièces de rechange identiques.



Ce logo apposé sur le produit signifie qu'il s'agit d'un appareil dont le traitement en tant que déchet rentre dans le cadre de la directive européenne 2012/19/UE relative aux Déchets d'Équipements Électriques et Électroniques (DEEE), qui impose que les appareils ménagers usagés soient collectés séparément afin d'optimiser le taux de récupération et le recyclage des matériaux qui les composent, et réduire l'impact sur l'environnement et la santé humaine.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

Les termes HDMI, interface multimédia haute définition HDMI et habillage commercial HDMI, et les logos HDMI sont des marques commerciales et des marques déposées de HDMI Licensing Administrator, Inc.

Dolby Audio

Fabrigué sous licence de Dolby Laboratories, Dolby, Dolby Audio et le symbole double-D sont des marques de commerce déposées de Dolby Laboratories Licensing Corporation.

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

 
Le téléviseur peut tomber, causant des blessures graves ou la mort. De nombreuses blessures, en particulier chez les enfants, peuvent être évitées en prenant des précautions simples, telles que:

- utilisez toujours une armoire ou un support ou une méthode de montage recommandée par le fabricant du téléviseur.
- utilisez toujours des meubles qui peuvent soutenir votre téléviseur en toute sécurité.
- assurez - vous toujours que le téléviseur ne surplombe pas les bords qui soutiennent les meubles.
- toujours éduquer les enfants sur les dangers de l'escalade des meubles pour atteindre le téléviseur ou ses commandes.
- assurez - vous de câbler les fils et les câbles connectés à votre téléviseur afin qu'ils ne puissent pas trébucher, tirer ou attraper.
- Ne placez jamais votre téléviseur dans un endroit instable.
- Ne placez jamais votre téléviseur sur un meuble surélevé (par exemple, une armoire ou une bibliothèque) sans fixer les meubles et le téléviseur sur un support approprié.
- Ne placez jamais votre téléviseur sur un chiffon ou un autre matériau qui pourrait se trouver entre le téléviseur et le meuble correspondant.
- Ne placez jamais d'objets tels que des jouets et des télécommandes qui pourraient inciter les enfants à grimper sur le téléviseur ou les meubles sur lesquels le téléviseur est placé.


Si un téléviseur existant doit être conservé et déplacé, les mêmes considérations que ci - dessus doivent être appliquées.

Remarque: ne pas incliner la suspension pour éviter le risque de chute. Stabilité dangereuse, le téléviseur peut tomber, causant des blessures graves ou la mort.


PRECAUTIONS AND REMINDERS

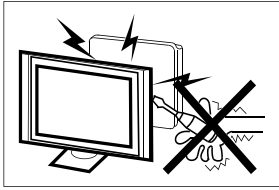

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

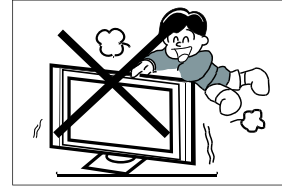

 Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

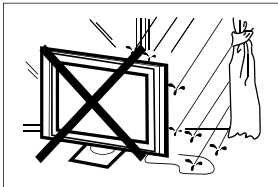

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

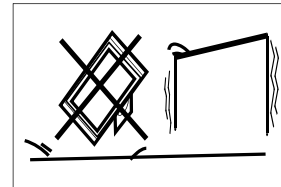


Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.



 
Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

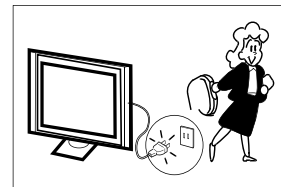

 
When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

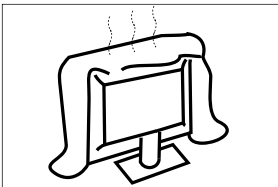

 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

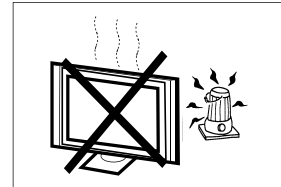

 Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

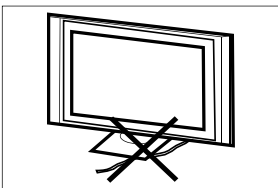

 Do not trap the power supply cord under the television receiver.

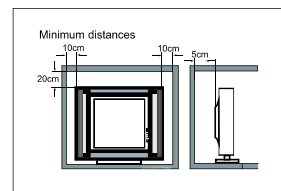


If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.




If you are going to clean the product, Unplug the TV, use soft fabric, no water, never chemicals.

Note: the use of apparatus in moderate climates.

 
PRÉCAUTIONS ET RAPPELS

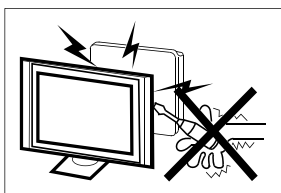

 
De hautes tensions sont utilisées dans le fonctionnement de ce téléviseur. N'enlevez pas le cabinet en arrière de votre ensemble. Renvoyez l'entretien au personnel de service qualifié.

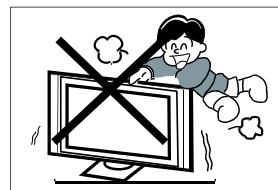

 
Ne jamais lever, pencher, ou soudainement pousser la télévision ou un support. Vous devriez prêter une attention particulière aux enfants.

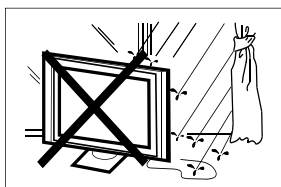

 
Pour empêcher un danger incendiaire ou de choc électrique, n'exposez pas l'unité principale à l'humidité. Ne placez pas les objets remplis avec des liquides, tels les vases, sur l'appareil.

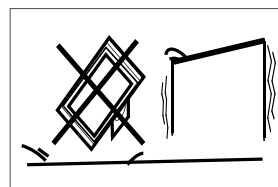

 
Ne placez pas votre télévision sur un chariot instable, la position, l'étagère ou la table. La blessure grave à un individu et des dégâts à la télévision, peut résulter s'il doit tomber.

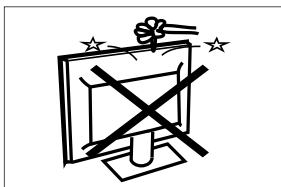

 
Ne baissez pas ou poussez des objets dans les fentes de cabinet de télévision ou les ouvertures.
Ne renversez jamais aucune sorte de liquide sur le téléviseur.

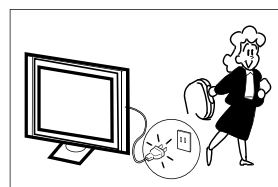

 
Quand le téléviseur n'est pas utilisé pendant une période prolongée, il est recommandé de débrancher la corde de courant secteur formant la sortie AC.

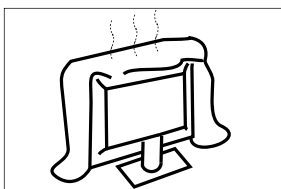

 
Ne bloquez pas les trous de la ventilation sur la couverture arrière. La ventilation est essentielle pour empêcher une défaillance des composants électriques.

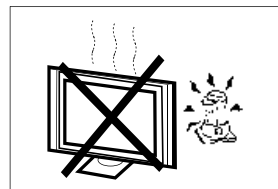

 Évitez d'exposer l'unité principale à une lumière du soleil direct et d'autres sources de chaleur. Ne laissez pas le récepteur de la télévision directement sur d'autres produits qui donnent de la chaleur: i.e des lecteurs de cassettes vidéos ou des amplificateurs audios.

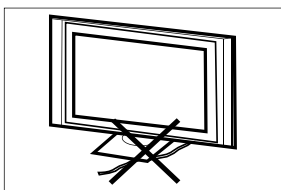

 N'écrasez pas le fil de fourniture électrique sous l'unité centrale ou d'autres objets lourds.

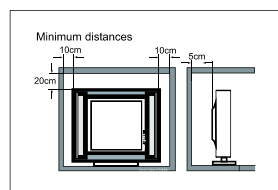

Si le téléviseur doit être intégré dans un compartiment ou un boîtier similaire, les distances minimales doivent être prises en compte. L'accumulation de chaleur peut réduire la facilité d'utilisation de votre téléviseur. Néanmoins, il peut être dangereux.



Si vous avez l'intention de nettoyer le produit. Débrancher la télévision, utilisation tissu mou.
Jamais utilisation l'eau ou produits chimiques.

BUTTON CONTROL AND PERIPHERAL CONNECTION

BUTTON CONTROL

⏻/OK

In the standby mode, press to turn on the TV.

In the boot state, long press to shut down.

Under the menu page, function equivalent to the OK key.

CH- / CH+

 
In the non-menu page, you can adjust the TV channel under the program addition and subtraction;

Under the menu page, you can move the cursor up and down.

VOL- / VOL+

In the non-menu page, under the menu page, press the left and right keys to adjust the volume addition and subtraction.

PERIPHERAL CONNECTION

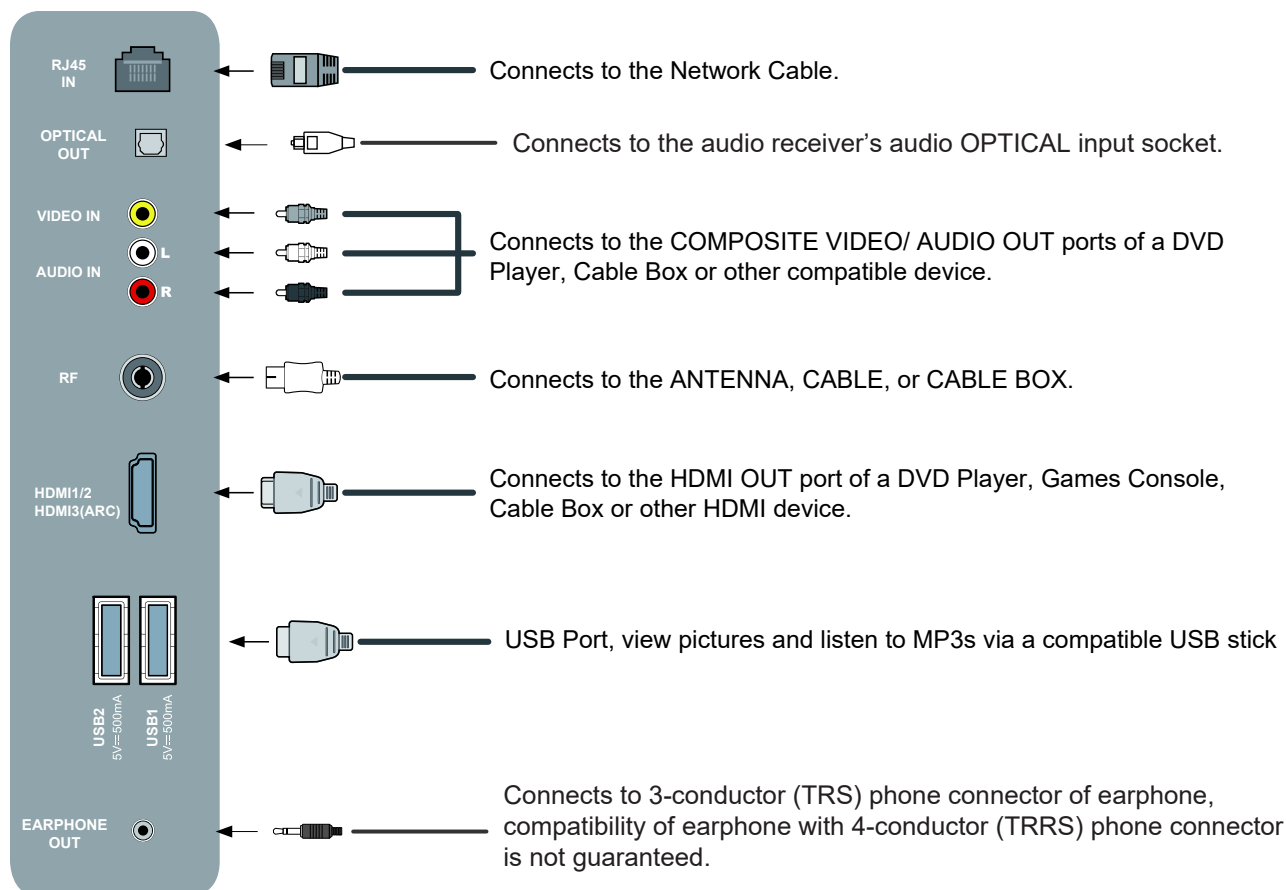

****Please note that the configuration of the button and connection ports may vary from model to model. Please check the button and connection port of the purchased model.***

OPERATING INSTRUCTIONS

USING THE REMOTE CONTROL

 


Item	Descriptions
Power	Press to turn the TV on or off. When your TV is off, power still flows through it. To completely disconnect power, unplug the power cord.
	Press to open the input source list.
	Google account login status.
	Press to open the google assistant or start a voice search.
	Press to open or close the on-screen in Live TV. Press to open Setting in Home Launcher.
	Press to navigate the on-screen menu.
	Enter the selected option or perform the selected operation.
	Return to the previous menu.
	Press to open the Live TV.
	Press to open the Home Page.
	Press VOL+ or VOL- to adjust volume level.
	Press CH+ or CH- to change TV channels.
	Press to switch the sound on or off.
	Press to open or close the on-screen menu.
NETFLIX	Press to open the NETFLIX.
YouTube	Press to open the YouTube.
USB	Press to open the USB.
Prime video	Press to open the prime video.

INITIAL SETUP


Please according to the Text Tip to First Time Setup.

This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV. press and hold "HOME" button and "Left" button Simultaneously for 5 seconds. Then press OK button When the "TV BLE Remote" displays in the lower right corner of the screen.

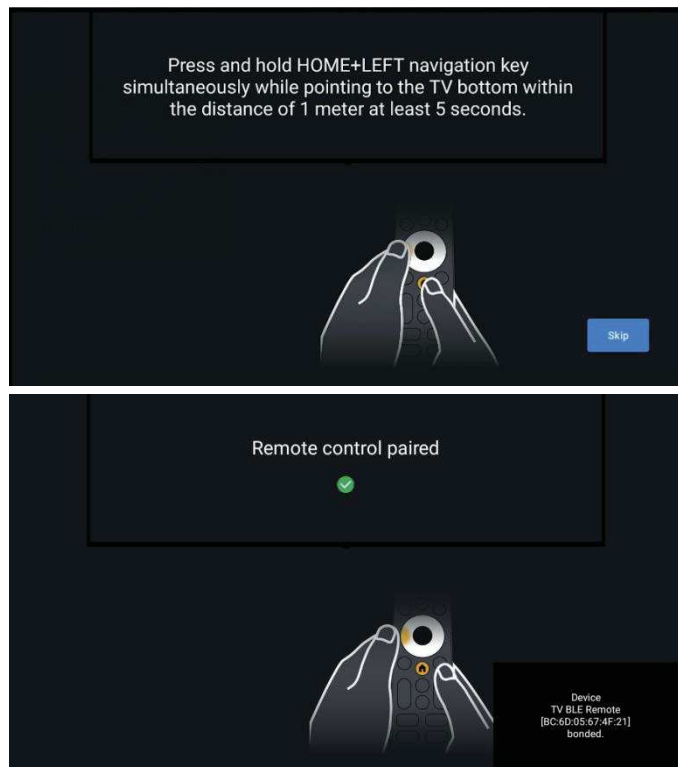

HOME SCREEN

 During initial setup, press **HOME** to enter the HOME screen.

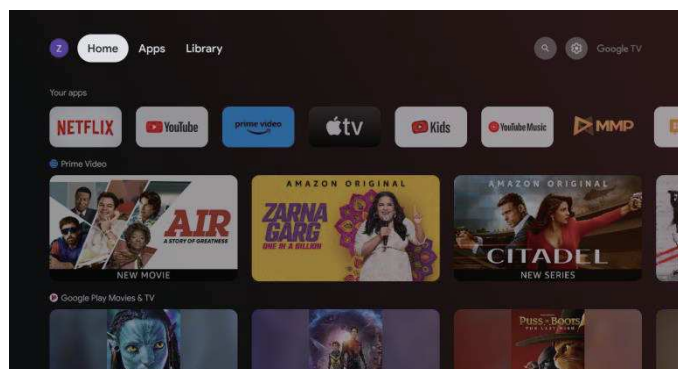

Home: This is your TV home screen.

 
Apps: Click to jump to Apps screen where all the installed applications are listed.

Library: Find your purchases, rentals, and watch listed content across TV, mobile, and web here.

Settings: Various settings can be configured here. For details on the settings, see the next explanation.

INPUT SOURCE



1. In the HOME interface, press **Settings** button then select the "Inputs" icon, press **OK** to open the input source list, then press up to highlight an input and press **OK** to switch.

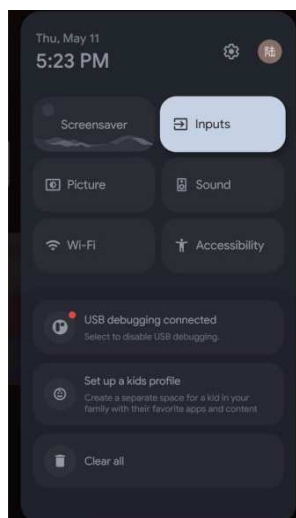

2. Under live TV, press **Inputs** button to display the list of input sources. You can select the desired source.


NAVIGATING THE ON-SCREEN MENU

  1. There are two ways to enter. First, in live TV, press the **MENU** button to display TV options, press **Up/Down/Left/Right** to select the settings menu and press **OK** to confirm. Second, in the HOME interface, press **Settings** to select the icon of the circular settings menu, press OK to confirm.

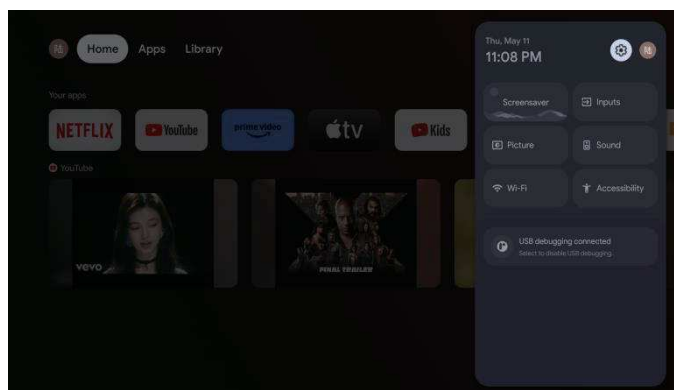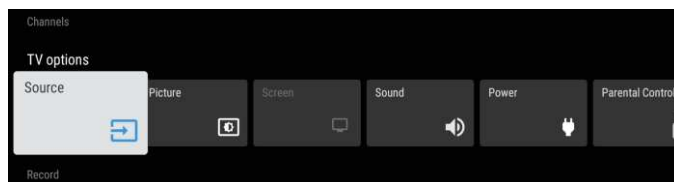

2. Press **Up/Down/Left/Right** button to select what you want set.

 
3. Press **OK** to enter setting.

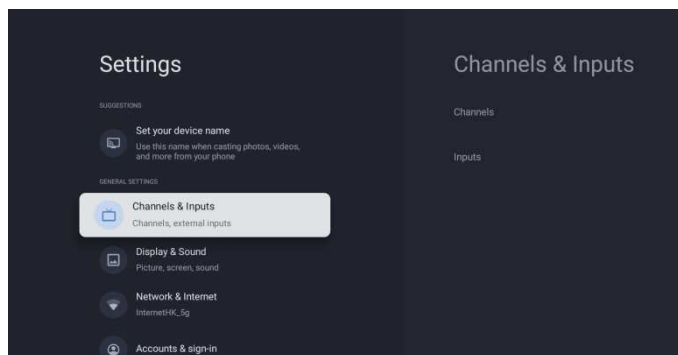

Press **BACK** to return to the previous menu. If the main menu is displayed, pressing **BACK** will close the onscreen menu.


Network

 1. Press **▲/▼** button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, press **OK** button to save and return to the previous menu.

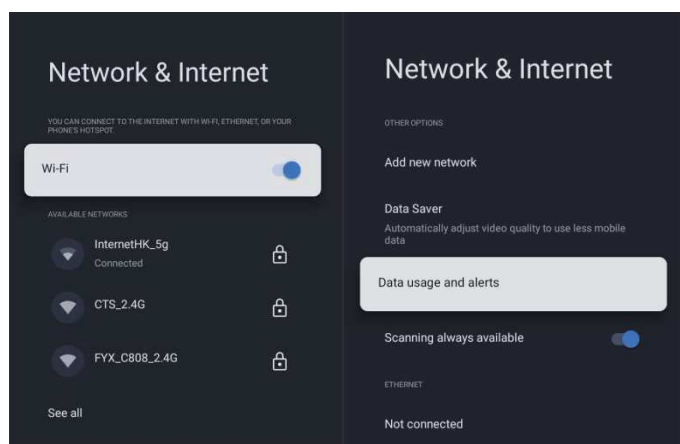

DEVICE PREFERENCES

 
HDMI---Press Menu---Settings---Device Preferences

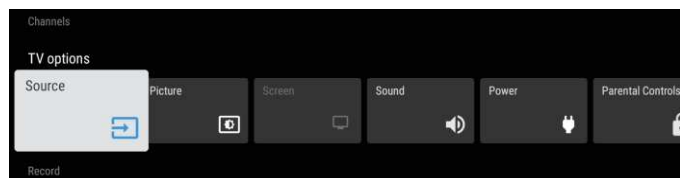


ABOUT

In this menu, you can read the information and settings of TV.

 1. Press **▲/▼** button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **BACK** button to return to the previous menu.

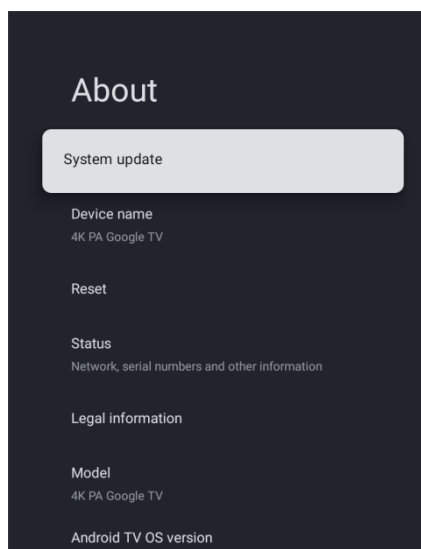

DATE&TIME

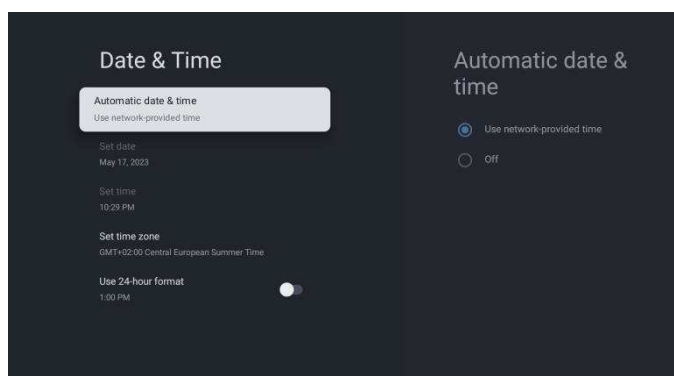 

Automatic date & time - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu. (Optional: Use network-provided time, Off)

NOTE

Manually adjusting date & time settings will automatically change the **Automatic date & time** to **OFF**.


Set date - Press the **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

Set time - Press the **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

Set time zone - Press the **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

Use 24-hour format - Press **▲/▼** button to select the option then press **OK** button to choose ON/OFF.

 TIMER

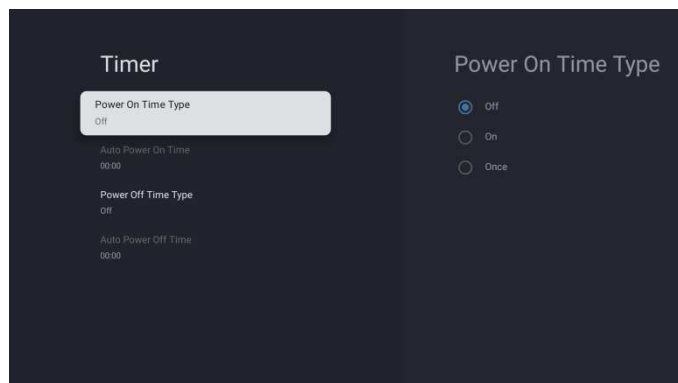


Power On Time Type - Press ▲/▼ button to select the option then press **OK** to choose ON/OFF/ONCE.

Auto Power On Time - Press ▲/▼ button to select the option then press **OK** to enter the sub-menu.

Power Off Time Type - Press ▲/▼ button to select the option then press **OK** to choose ON/OFF/ ONCE.


Auto Power Off Time - Press ▲/▼ button to select the option then press **OK** to enter the sub-menu.

 LANGUAGE

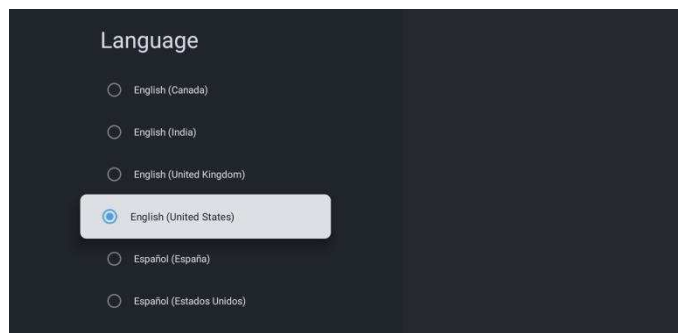

Language - Press ▲/▼ button to select the option then press **OK** button to enter the select language.

 KEYBOARD

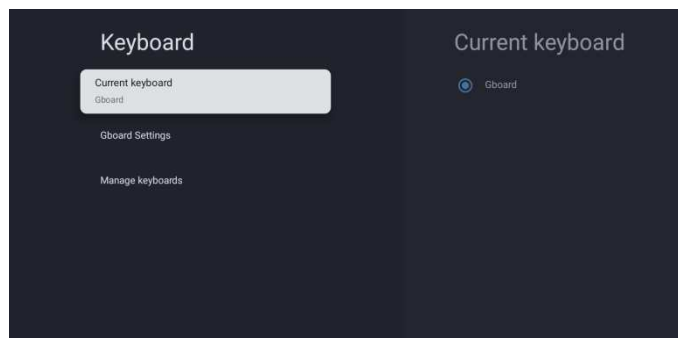


Current keyboard - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Gboard Settings - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.


Manage keyboards - Press ▲/▼ button to select the option then press **OK** to enter the sub-menu.

 INPUTS

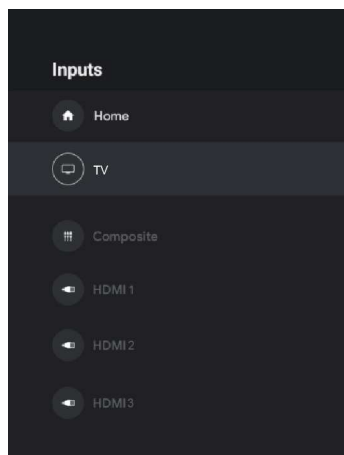

Inputs - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

 POWER

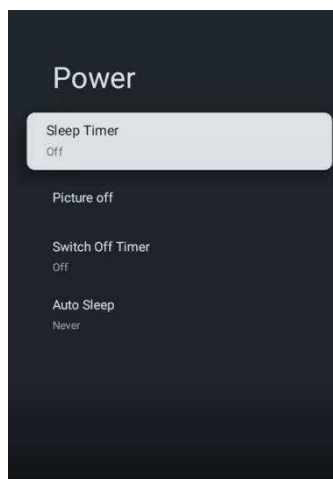

Sleep Timer - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional : off, 10 minutes, 20 minutes, 30 minutes, 40 minutes, 50 minutes, 60 minutes, 90 minutes, 120 minutes).

 
Picture off - Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

Switch off timer - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional : off, 30 minutes, 60 minutes, 90 minutes, 120 minutes, 150 minutes, 180 minutes, 210 minutes, 240 minutes).

Auto Sleep - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

(Optional : Never, 4hours, 6hours, 8hours).

PICTURE

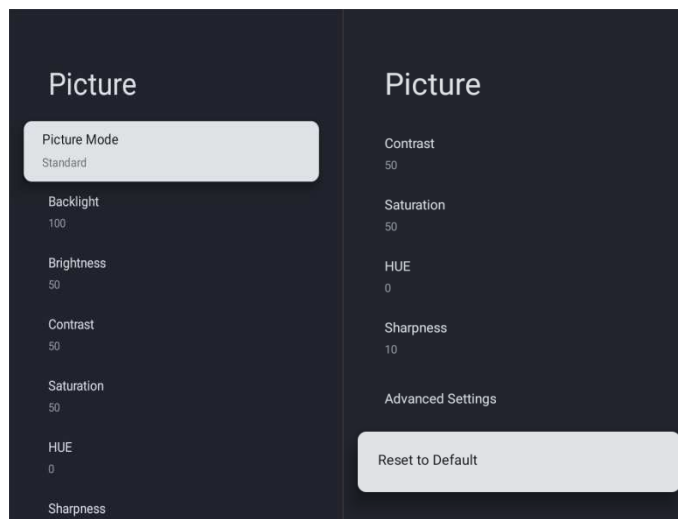

Picture Mode - Press ▲/▼ button to select the option button to enter the sub-menu.

(Optional: user, Standard, Vivid, Sport, Movie, Game, Energy saving).

 
Backlight/Brightness/Contrast/Saturation/HUE/Sharpness - Press ▲/▼ button to select the option.

Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

Advanced Settings - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Reset to Default - Reset all settings to the factory defaults.

SOUND

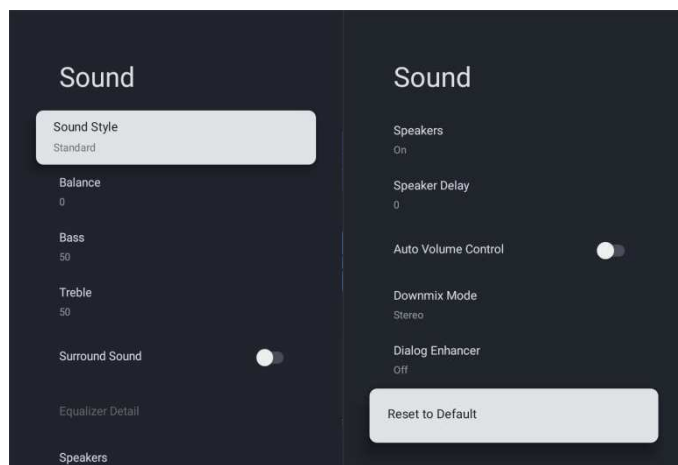

Sound style - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: user, Standard, Vivid, Sports, Movie, Music, News).

Balance/Bass/Treble - Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

Surround Sound - Press the **OK** button to choose ON/OFF.

Speakers - Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

Speaker Delay - Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

 
Auto Volume Control - Press the **OK** button to choose ON/OFF.

Downmix Mode - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Stereo, Surround).

Dialog Enhancer - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Off, Low, Medium, High).

Reset to Default - Reset all settings to the factory defaults.

STORAGE

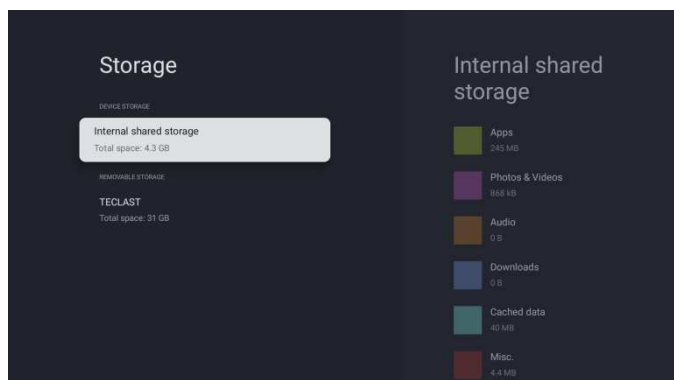


Internal shared storage - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Removable Storage - Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.




Show external devices if available.

 RETAIL MODE

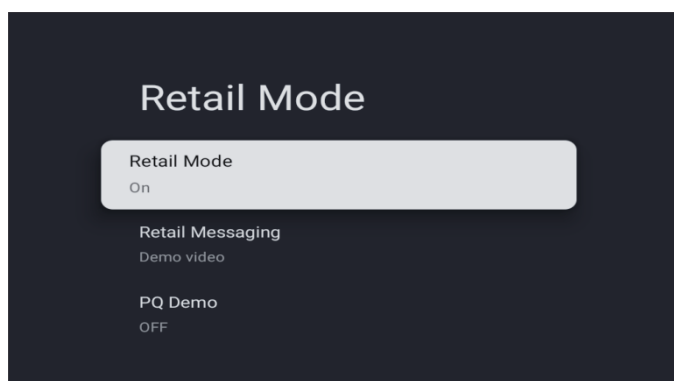

Retail mode - Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

 
GOOGLE Assistant

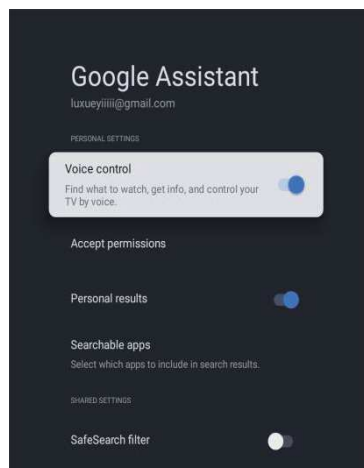

In this menu, you can set searchable apps, safe search filter, block offensive words, open source licenses.

1. Press **▲/▼** button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, press **BACK** button return to the previous menu.

 
LOCATION

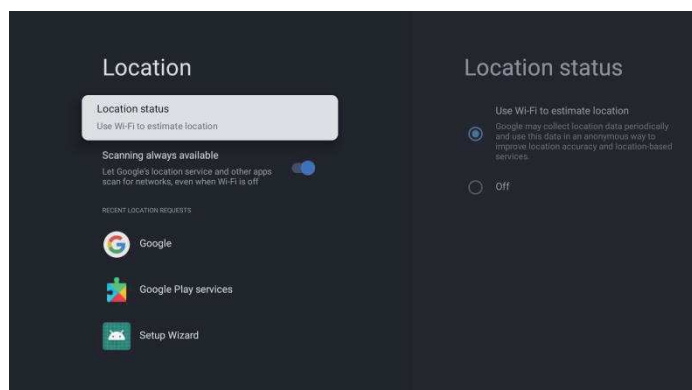

Location status - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu. (Optional: Use Wi-Fi to estimate location, Off)


Scanning always available - Press **▲/▼** button to select the option then press **OK** button to choose ON/OFF.

 USAGE & DIAGNOSTICS

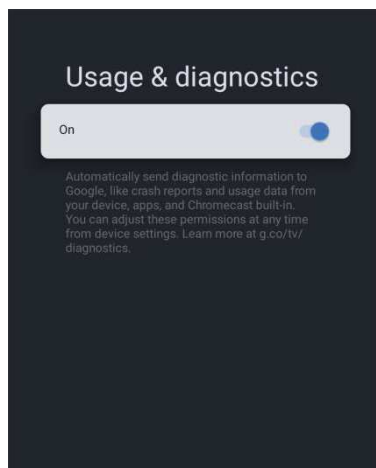

Usage & diagnostics - Press **▲/▼** button to select the option then press **OK** button to choose ON/OFF.

 ACCESSIBILITY

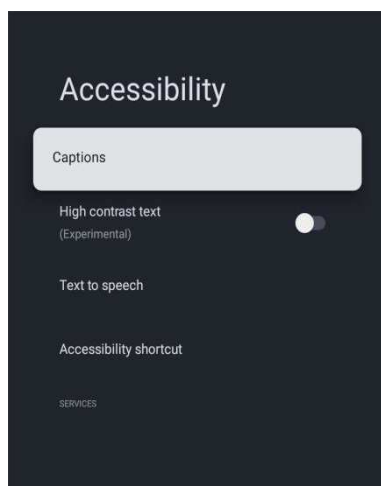

Captions - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

High contrast text - Press **▲/▼** button to select the option then press **OK** button to choose ON/OFF.

Text to speech/Accessibility shortcut - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

RESTART

Press **OK** button to enter the sub-menu.

Restart everything.

REMOTE&ACCESSORIES

In this menu, you can pair Bluetooth devices.

1. Press the **"HOME"** and **"LEFT"** buttons at the bottom of the remote control for 5 seconds.
2. When the LED starts to flash, release it. The remote controller will send the pairing signal to the TV and display the information of the remote control on the right side of the screen.

3. Press the **OK** button to display the pairing. If remote control is paired shows up, the connection is successful.
4. If fails, please wait for 30 seconds then repeat previous steps from 1-3 again.
5. Press **BACK** button return to the previous menu.

ADD AND USE OF MULTI MEDIA PLAYER

1. In the HOME interface, select the **+** icon in the APP column to add the application, and click **OK**. Press the **◀ / ▶** button to select the MultiMedia Player application, and click **OK** to add it to the HOME interface.
2. Select **OK** button to enter MultiMedia Player and display Video, Photo, Music, Text. After inserting the USB flash drive, you can view the corresponding files in the USB flash drive.



NOTE

The menu may be different depending on when you purchased the TV.

SPECIFICATIONS

HDMI INPUT

Mode	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)
480i	720x480i	15.73	59.94/60
576i	720x576i	15.63	50
480p	720x480p	31.47	59.94/60
576p	720x576p	31.26	50
720p	1280x720p	37.50 44.96	50 59.94/60
1080i	1920x1080i	28.13 33.75	50 59.94/60
1080p	1920x1080p	56.25 67.5	50 59.94/60
2160p	3840x2160p	56.25 67.5	50 59.94/60

Due to continuous product development, specifications are subject to change without prior notice.

MODEL:	VL-50VUHGSE
INPUT:	100-240V~ 50/60Hz
POWER :	120W
USB Each:	5V = 500mA
TV Size:	1111.84x269.4x699.8 mm
Packing Size:	1183x120x709 mm
Net Weight:	9.1 KG
Gross Weight:	11.5 KG
Wall Mounting Screws	CM6x10 mm (4pcs)
Wall Mounting Screw Holes	M6X12 mm (4pcs)
Pixel Resolution	3840x2160
Screen brightness	220nit
Inputs	RJ45x1,AVx1,RFx1,HDMI1, HDMI2,HDMI3(ARC),USBx2
Outputs	OPTICALx1,EARPHONEx1
TV speakers	6Ω 10W SM-2 410Hz 180x57x46mm hole spacing 166mm length 250mm
Bluetooth Spec	MT7663 BT5.1
Wi-Fi Spec	MT7663 2.4GHz&5GHZ
Google Software Version	Google3.0
HDMI/ HDCP Version	HDMI 2.0 & HDCP Version 1.4/2.2
Chromecast	YES

System Operating:	0~45°C
Altitude:	Operating /Storage: Less than 5000m

PACKING LISTS

- Please make sure that the following items are included in the LED LCD TV box.
- If any item is missing, check with your dealer and the color and shape of the item may vary depending on the model.

• Full Function Remote Control (1pcs)

• User Guide (1pcs)

• Warranty Card (1pcs)

• Household Battery No. 7 40AAA 1.5V (2pcs)

• Screws BB4x25 (4pcs)

• Base Left (1pcs)

• Base Right (1pcs)

TROUBLESHOOTING

Please make these simple checks before calling service. These tips may save you time and money since charges for receiver installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions to Follow
"Ghost" or double image	• This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	• Check if the TV's AC power cord is plugged into the outlet. • Unplug the TV, wait for 60 seconds. Then reinsert plug into the outlet and turn on the TV again.
No picture	• Check antenna connections at the rear of the TV to see if it is properly connected to the TV. • Possible broadcast station trouble. Try another channel. • Adjust the contrast and brightness settings. • Check the Closed Captions control. Some TEXT modes could block the screen.
Good picture but no sound	• Increase the volume level by pressing the VOL+ button on the remote control or on the TV side control panel. • Press the MUTE button on the remote control to ensure mute is off.
Good sound but poor color	• Adjust the contrast, color and brightness settings.
Poor picture	• Poor picture quality may occur when an activated S-VHS camera or camcorder is connected to your TV and other peripherals at the same time. Switch off one of the peripherals.
Snowy picture and noise	• Check the antenna connection.
Horizontal dotted line	• This may be caused by electrical interference (e.g. hair dryer, nearby neon lights, etc.) Turn off the equipment.
Television not responding to remote control	• Check whether the batteries are working. Replace if necessary. • Clean the remote control sensor lens on the TV. • You can still use the buttons on the side of your TV.
Pixels(dots) that are always dark or always lit	• Your TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. • These types of occurrences are inherent to this type of product and do not constitute a defective product.