



DESIGNED TO MOVE [YOU]®

# JWM6A

## QUICK REFERENCE GUIDE

### Basic Operation

**POWER:** Push to turn ON or OFF.

**MODE/DISPLAY:** Press to cycle through sources. Press & hold to switch between displaying clock or function.

**VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease volume.



**AUDIO/MENU:** Press to bring up AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), & FADE (front to back), LOUD (on/off), EQ: User, Flat, Pop, Classic, Rock. Press & hold to bring up MENU options: BEEP, ADJUST LCD BRIGHTNESS, TUNING REGION, LOW BATTERY ALERT, BLUETOOTH (ON/OFF), PRESET VOLUME, RESET. VOLUME KNOB will adjust each MENU option *except* for 'RESET'.

**SPEAKER OUTPUT:** Press any speaker button (A, B or C) to control corresponding speaker output from the stereo. SPK A, SPK B, SPK C will appear on the display.

**AUX A/V IN:** Insert 3.5mm cable from your portable media device.

### App Control



**App download and operation:** jControl app controls all of the primary functions of the JWM6A directly from your phone or tablet.

It can be downloaded from the App Store on iTunes for Apple devices, or the Google Play Store for Android devices, and found by searching for "jControl".

After downloading and installing app, pair your device to the JWM6A as instructed in "Bluetooth Operation" section in this guide. Once your device is paired, open the app and use as instructed. (Device *must* be paired to JWM6A *before* opening and using app).

Entire owner's manual for jControl app can be found at <http://asaelectronics.com/manuals-guides>.

Tablet Interface



Mode Menu

Audio Menu

Power

App Info

Back Play/Pause/Mute Forward Volume Control

### AM/FM Tuner Controls

**MUTE:** Press to MUTE volume. Press again to resume volume.

**MODE:** Press repeatedly until you reach TUNER mode displayed as a frequency.

**STATION STORE PRESETS:** Press & hold to store current station. Press once to recall stored channel. NOTE: Up to 18 FM & 12 AM channels can be stored.

**BAND:** Press to select between two AM BANDS (AM1, AM2) & three FM BANDS (FM1, FM2, FM3).



**TUNE/SEEK/TRACK:** Press >>| button to tune frequency higher. Press <<| button to tune frequency lower. Press and hold to scan to next strongest station.

**AS/PS:** Press to SCAN through currently stored presets. Press & hold to STORE strongest broadcast stations in your area.

**VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease volume.

### CD/DVD Player Controls

**PLAY/PAUSE:** Press to PLAY or PAUSE current audio or video.

**MODE/DISPLAY:** Press repeatedly until you reach DISC mode.

- 1: Press to hear brief 10 sec. intro of every song. Press again to disable.
- 2: Press to SHUFFLE songs. Press again for SEQUENTIAL play.
- 3: Press to REPEAT CD track(s) once, continuously, ALL tracks, or to release function. Press to REPEAT a DVD chapter, title, ALL, or to release function.
- 4: Press once to SUSPEND disc play and twice to RESET disc back to first track.
- 5: Press to go to next folder.
- 6: Press to go to previous folder.



**TUNE/SEEK/TRACK:** Press >>| button to advance to NEXT TRACK or CHAPTER/TITLE. Press <<| button to go back to PREVIOUS TRACK or CHAPTER/TITLE. In CD mode, press & hold to FAST FORWARD or REVERSE current play. In DVD mode, press & hold to enter FAST FORWARD/RW. Press & hold additional times to step through x2, x4, x8, x20. Press PLAY (>||) to resume.

**ENTER/SEARCH:** Press to confirm menu selection.

**EJECT:** Press to EJECT CD or DVD.

**DVD MENU:** Press to enter DVD menu.

**VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease volume.



## Bluetooth Operation

**MODE/DISPLAY:** Press repeatedly until you reach BLUETOOTH mode.

**ANSWERING PHONE:** BT audio will automatically pause when a call is answered. It will then resume once call has ended. In some cases, it may be necessary to press the play button to resume the BT audio.



**AUDIO/MENU:** Press & hold to navigate through menu options, until BT menu options is reached. Press ENTER to select DEVICE LIST or PAIR.

**TUNE/SEEK/TRACK:** Advance or reverse tracks on your device.

**ENTER/SEARCH:** Press & hold to have unit start searching for a Bluetooth-enabled device to pair with. The device will display 'JWM6A' when BT function on unit has found device. Select 'JWM6A' on your device, enter pairing password 0000, if requested, and the unit will display "PAIR OK" followed by "CONN OK".

## USB/iPod/iPhone Playback

**PLAY/PAUSE:** Press to PLAY or PAUSE current audio or video.

**MODE/DISPLAY:** Press repeatedly until you reach USB/iPod/iPhone mode.

1: Press to hear brief 10 sec. intro of every song. Press again to disable.

2: Press to SHUFFLE tracks. Press again for SEQUENTIAL play.

3: Press to REPEAT USB track(s) (one, DIR, all, or release function) or iPod/iPhone track(s) (one, all, or release function).

4: Press once to SUSPEND playback and twice to RESET device back to first track.

5: Press to go to next folder (USB only).

6: Press to go to previous folder (USB only).



**AS/PS:** In iPod/iPhone mode, reverse through playlist selection.

**TUNE/SEEK/TRACK:** Press >>| button to advance to NEXT TRACK. Press <<| button to advance to PREVIOUS TRACK. Press & hold additional times to step through x2, x4, x8, x20. Press PLAY (>||) to resume.

**ENTER/SEARCH:** Press to confirm menu selection. Press & hold to navigate through playlists (iPod/iPhone only).

**USB:** Connect a USB flash/thumb drive or iPod/iPhone for audio playback and/or charging.

## Clock with Alarm

**MODE/DISPLAY:** Press & hold to access CLOCK VIEW mode.



**TIME SET:** Press <<< to adjust hours and >>>| to adjust minutes when setting either CLOCK or ALARM time.

**ALARM ON/OFF:** Press to turn ALARM ON or OFF. While in CLOCK VIEW mode, press & hold to set CLOCK time.

**ALARM SET:** Press to enter sleep timer: 15, 30, 45, 60, 0 minutes. Press & hold to enter ALARM SET mode.

For owner's manual, please visit <http://www.asaelectronics.com/manuals-guides> or scan this QR code.

