

QUICK START GUIDE—HEATING THE COACH

Note: The wall control for the Atwood 15k air conditioner is designed to control both the integrated heat pump and auxiliary furnace.

1. Turn the unit ON by pressing the **ON/OFF** button.
2. To heat the coach, press the **MODE** button until **HEAT** mode is highlighted. The heat pump will automatically be selected with exterior temperatures above ~45°F. The auxiliary furnace will automatically be selected with temperatures below ~45°F.
3. Press the **TEMP** Δ/∇ buttons as needed to set desired temperature.
4. To select the auxiliary furnace as the primary heating source press **FURNACE** button

