

Manual Instruction

The electric push rod is powered on DC12V, the motor drives the gearbox, and the gear drives the screw rod to make inner tube extend or retract. The limit switch restricts movement of screw rod.

Electric actuators can be extended or retracted by handle manually. There is access port of a hexagonal type handle at the bottom of electric actuators. By shaking the handle, the screw rod in the inner pipe is driven to extend or retract, and the electric actuators can be adjusted to a proper position.