 


TITMAN™ FLAME

Full Recessed Electric Fireplace

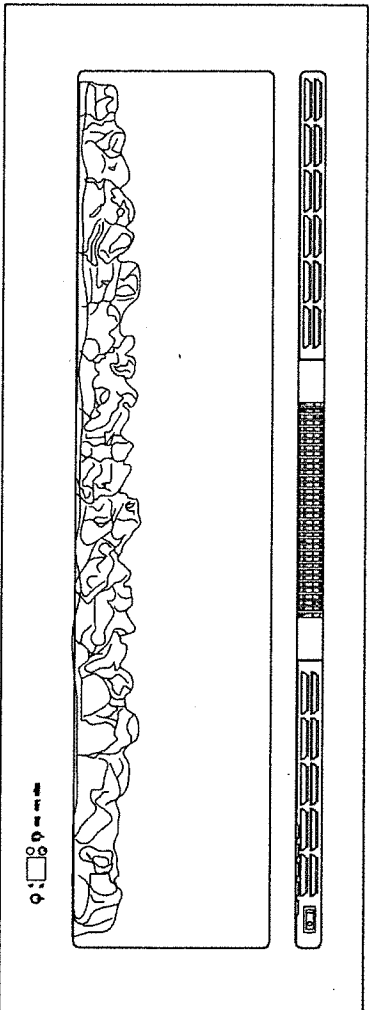

WF Series

This electric fireplace is intended to provide supplemental/comfort heat only and is not meant to be used as a primary heat source when the ambient temperature is lower than 5C/41F.

 
 


Getting Started

- Remove the appliance from the box.
- Remove any packaging from the product.
- Place the packaging inside the box and either store or dispose of safely.

Contents of Carton

- Heater
- Remote control
- 6pcs 6x25mm fixed screws
- 1 Instruction Manual

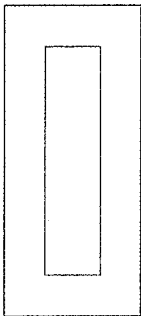

Helpful Advice before Fitting

- Please retain all packaging until you have checked and counted all the parts and the content hardware pack against the parts list.
- The hardware pack contains small items which should be kept away from young children.
- We suggest that you open the hardware pack and place all the contents into a container, reducing the risk of losing any small pieces.

- Do not connect the appliance until properly fixed to the wall and the instructions are fully read.
- The minimum distances must be observed in the diagrams.
- For installation of the appliance, care must be taken not to damage concealed cables.
- Please be careful while drilling the holes.

Wall Insert Instructions

- Take the glass from the appliance first, then gently put the appliance to the cut hole by two persons.
Please see Fig. 1

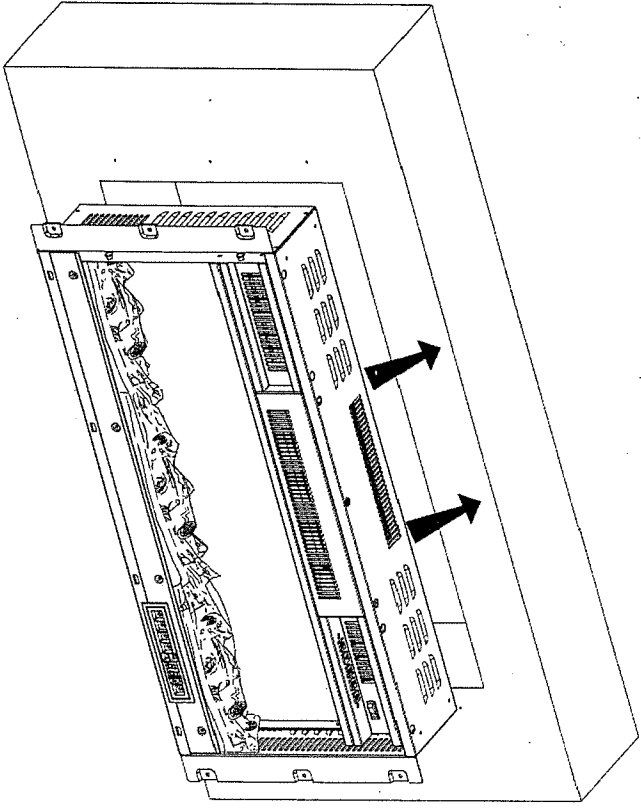 


Fig. 1

- For optimum viewing, mark the left and right screws (fixing positions on the wall in accordance with the appliance's holes; See Fig. 2

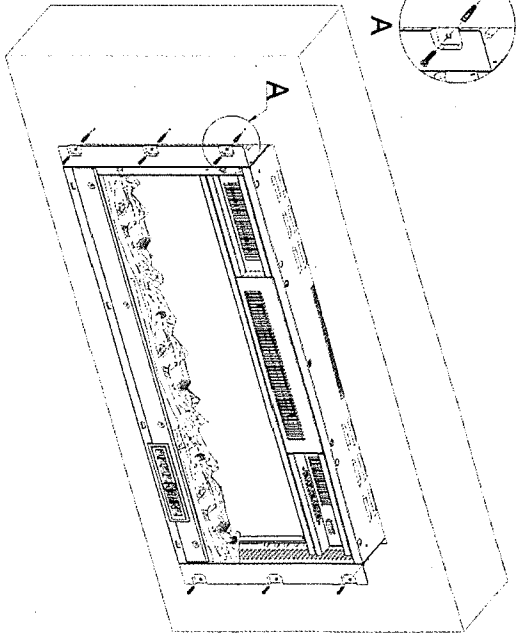 
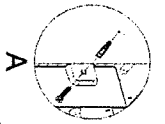 


Fig. 2

- Place the front glass surround over the front of the fire aligning the slots in the bra at each side of the glass panel with the lugs on the sides of the fire; See Fig. 3
- Again, two people will be required for this operation.

 
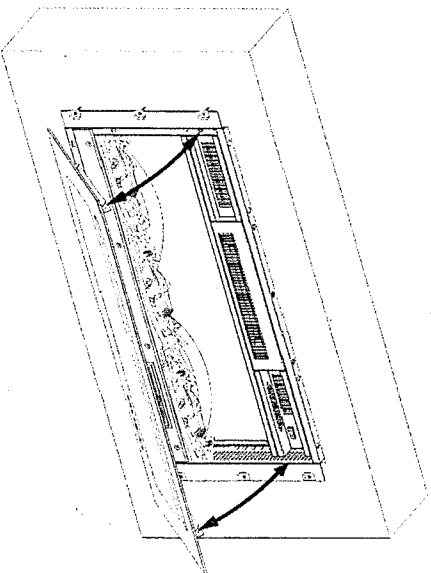 


 
Fig. 3



Display panel

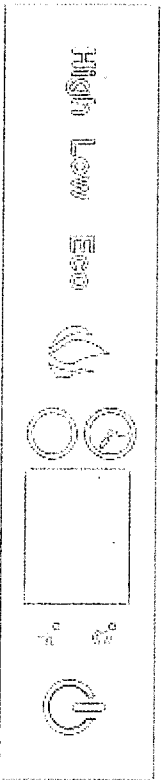

On the WF series fireplaces the display panel will be visible behind the glass in the lower right corner of the fire unit.

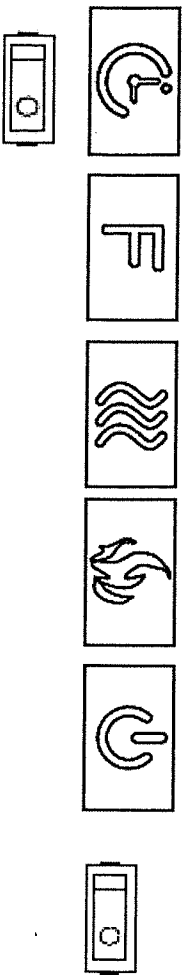Control panel



- The standby switch located at the center right hand side of the fire must be first switch on.
- It takes some time for the receiver to respond to the transmitter. Do not PRESS the buttons more than once within two seconds for correct operation.
- -----Power
- Press once the button ON/OFF on the remote control this turns ON/OFF the appliance and fire effect.
- -----Flame
- Press the DIMMER button for operates the dimmer mode. Each time the dimmer button is Pressed, the intensity of the flame decrease. There are 5 brightness levels you can cycle through and the OFF setting.



- Press once the HEAT button for the low heat setting(750W); press twice for the heat setting(1500W); press third time to for eco setting; press again to turn off heating. Press the heat button for three seconds, it will show centigrade degree

 


 
- Temperature setting. The highest temperature of the thermostat is 82F. There are several thermostat levels can cycle through between 62F to 82F, and the " - " means OFF settings, the temperature function off. Then you can run the heating all the time.



- Timer setting. Press the TIMER button to cycle through the timer settings (1H, 2H, 3H, 4H, 5H, 6H, 7H, and 8H) and the OFF setting.

Infrared Remote control

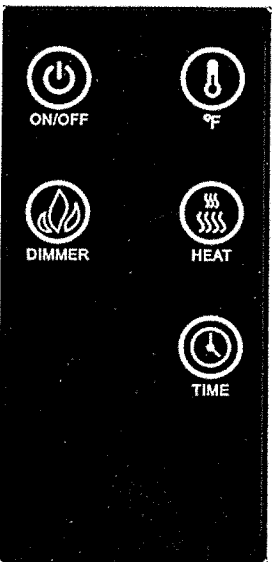

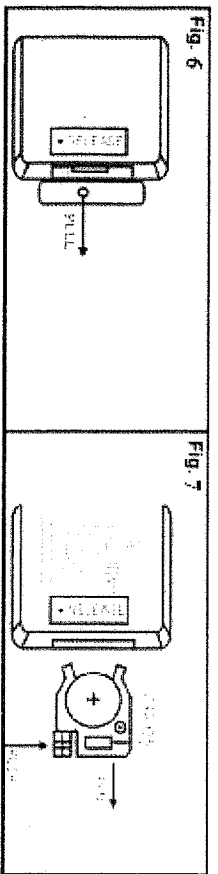

Remote control requires one 3V CR2025 Lithium Cell Battery (included). Remove the protective sheet between the battery and the contacts in order to operate (see Fig.6. and Fig.7).

REPLACE THE REMOTE CONTROL BATTERY

When the remote control stops operating or its range seems reduced. It is time to replace the battery with a new one.

1. The battery compartment is located on the back end of the remote.
 2. Press and slide the battery door open and remove the old battery.
 3. Insert a CR2025 battery, checking that the "+" and "-" terminals of the battery matches the inside of the battery compartment.
 4. Replace the battery compartment door.
- DO NOT** mix old and new batteries.
- DO NOT** use rechargeable silver oxide cell batteries with remote control unit.
- DO NOT** mix alkaline. Standard (Carbon-zinc). Or rechargeable (Nickle - Cadmium) batteries.
- DO NOT** dispose of batteries in fire. Improper disposal may cause batteries to leak or explode.

Important Safety Instructions

When using this electrical appliance, basic precautions should be followed to reduce risk of fire, electric shock, and injury to person, including the following :

- This heater must be used on an AC supply only and the voltage marked on the plate must correspond to the supply voltage.
- Do not switch the appliance on until it properly installed and described in this manual.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Keep out of reach of children and do not allow them to operate this appliance.
- From time to time, check the cord for damage. Never use the appliance if the cord or any part of the appliance shows signs of damage.
- Do not operate this appliance with a damaged plug or cord, after a malfunction if being dropped or damaged in any way.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not run the cable under carpets, rugs etc.
- Do not allow the mains cable to hang over sharp edges or come into contact with surfaces.
- **WARNING:** In order to avoid overheating, do not cover or obstruct the heater in any way.
- Overheating will result if it is accidentally covered.
- Never immerse the product in water or any other liquids.

LED Bulb Replacement

Note: The flame effect on this electric fireplace insert is created by LED Bulbs.

The life of these LED bulbs will be 100,000 hours. The users are not recommended to Replace the LED Bulbs. For any reason should the bulbs stop working properly, contact a Qualified technician.

Cleaning:

- Turn heater OFF and unplugging from electrical outlet before any cleaning or maintenance is performed. Wait at least 10 minutes to allow all components to cool properly.
- Use a vacuum or duster to keep heater and vent area clean from dust and dirt.
- The exterior of the fireplace should be cleaned with a damp cloth or duster.
- Do not use abrasive cleaners or liquid sprays.

⚠ WARNINGS AND CAUTIONS

WARNING To avoid electrical shock not open the back panel of the insert unless the power has been turned off. And the insert has been unplugged.

WARNING Any electrical repairs to this electric fireplace. Should only be Performed by a qualified technician.

WARNING Any electrical wiring repairs should only be performed by a qualified Technician. And also must comply with local buildings codes.

WARNING Discontinue use of this electric fireplace if any of the follow has Occurred: Water damage. If insert has been or dented. If power cord has Become broken. If power cord becomes hot to touch, if unit smokes or Smells like smoke.

WARNING This electric fireplace is intended to provide supplemental/comfort heat only and is not meant to be used as a primary heat source when the ambient temperature is lower than 5C/41F.

Note: When the heat functions is used for the first time. A slight odor may be Present. This is normal and should be occur again unless heater is not u For extended periods of time and dust is allowed to accumulate on heat Element.

Technical Specification

- Supply: 120V/60Hz
- Rated power: 750W/1500W

Meaning of crossed - out wheeled dustbin:
Do not dispose of electrical appliances as unsorted municipal waste, use separate colle facilities.

Safety Cut-Off

- This appliance is fitted with a safety cut-off which will operate if the fire overheal (e.g. due to blocked air vents) .For safety reasons, the fire will NOT automatically reset.
- To reset the appliance, disconnect the appliance from the mains supply for at least minutes. Reconnect the supply to the mains and switch on the appliance.
- This unit has been tested to zero clearance, to prevent possible fires, do not to part or fully cover or obstruct

Troubleshooting

Symptom	Solution
No operation/no fan,	Check fuse by replacement,
No fire effect light,	Check for safety cut-off operation, Check the LED light with technician.