

connexx Entertainment TV QUICK START GUIDE

Press Power button (1) on the front panel or remote control to power on your new **Connexx ETV**.

Follow the Setup Wizard instructions on your TV.

Press the Source button (2) repeatedly to select your desired audio and/or video source.

Control audio Zones A and B status and Volume levels from the ETV front panel.


- Press the Virtual Sound button (6) to toggle through *Zone A: ON/OFF ~ Zone A Volume ~ Zone B: ON/OFF ~ Zone B Volume*.
- Use the Arrow buttons (3) to select Zone ON/OFF and Volume levels.

Control audio Zones A and B status and Volume levels with remote control.

- Press the red Volume control (7) to adjust level for Zone A.
- Switch Zone A ON and OFF with the red A button (8).
- Switch Zone B ON and OFF with the green B button (10) and adjust its volume level with the green Volume control (9).

Bluetooth®

- Press Source button (2) to select Bluetooth®.
- Press the Pairing button (4) to connect to a Bluetooth® compatible audio device. Follow pairing instructions on your device.
- Navigate your selections with Next/Previous buttons (12).
- Play/Pause selections with Play button (5).

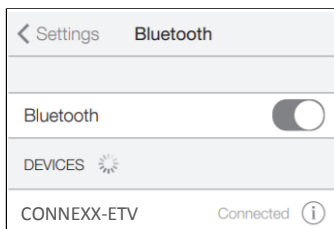

FM Radio


- Press Source button (2) to select FM Radio.
- Press Arrow buttons (3) or TUNE+ and TUNE- buttons (13) to seek up and down radio stations. Press the Arrow buttons (14) on the remote control for fine tuning.
- Press the SET button (15) and one of the 0-9 numeric buttons (16) to preset your radio station. Then press just one of the 0-9 buttons (16) to recall your desired radio station preset.

Zone B Source Menu

- Use this Menu to select Zone B Source – TV All (same as Zone A), Bluetooth® or FM.
- Press and briefly hold the green B button (10) or Virtual Sound button (6) to access the Zone B Source menu.
- Press the Up and Down buttons (11) or the Arrow buttons (3) to choose the active source for Zone B.



Front Panel

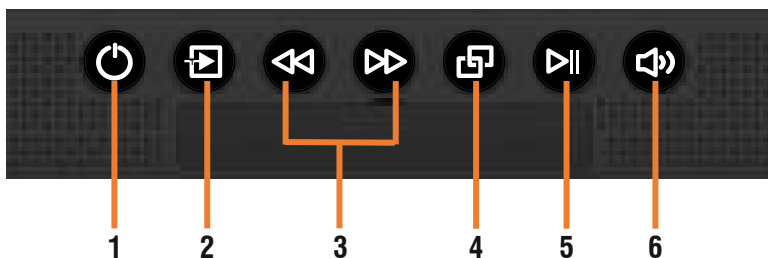

Remote Control

