

Microwave Oven

User manual

MC17T8000C*



SAMSUNG

Contents

| | |
|--------------------------------------|----------|
| Important safety instructions | 4 |
|--------------------------------------|----------|

| | |
|---|-----------|
| Setting up your new microwave oven | 17 |
|---|-----------|

| | |
|--------------------------------|----|
| Checking the parts | 17 |
| Setting up your microwave oven | 18 |
| Checking the control panel | 19 |
| Clock Settings | 20 |
| Child Lock | 20 |
| Eco mode | 20 |
| Smart Control | 21 |
| Voice Control | 22 |
| Auto Connectivity | 26 |
| My settings | 27 |

| | |
|----------------------------------|-----------|
| Using your microwave oven | 29 |
|----------------------------------|-----------|

| | |
|--|----|
| Kitchen Timer | 29 |
| Vent Fan (High/Mid/Low/Off) | 29 |
| Cooktop Lamp (High/Low/Off) | 30 |
| Turntable (On/Off) | 30 |
| STOP/CLEAR Eco button | 30 |
| +30sec button | 31 |
| Accessory Combination Guide | 31 |
| Popcorn | 32 |
| Cookie | 33 |
| Slim Fry | 34 |
| Example for Slim Fry operation | 35 |
| Auto Cook | 37 |
| Example for Auto Cook operation | 38 |
| Defrost | 48 |
| Microwave | 50 |
| Convection Bake/Roast | 51 |
| Speed Bake/Roast | 52 |
| Cookware for cooking with speed bake/roast | 53 |
| Food suitable for speed bake/roast | 53 |
| Speed Bake/Roast Cooking Guide | 54 |
| Grill | 55 |
| Keep Warm | 56 |
| Steam Clean | 57 |

| | |
|---|-----------|
| Cookware guide | 58 |
| Recommended cooking utensils | 58 |
| Limited use items | 58 |
| Not recommended | 58 |
| Testing utensils | 59 |
| | |
| Cooking guide | 60 |
| Cooking techniques | 60 |
| Recommended cooking utensils | 61 |
| Guide for cooking eggs in your microwave | 61 |
| Guide for cooking vegetables in your microwave | 62 |
| | |
| Cleaning and maintaining your microwave oven | 63 |
| Cleaning the exterior | 63 |
| Cleaning under your microwave oven | 63 |
| Cleaning the control panel | 63 |
| Cleaning the door and door seals | 63 |
| Cleaning the interior | 64 |
| Cleaning the turntable and roller rings | 64 |
| Storing and repairing your microwave oven | 64 |
| Replacing the cooktop/night light | 65 |
| Replacing the oven light | 65 |
| Cleaning the grease filter | 66 |
| Replacing the charcoal filter | 67 |
| | |
| Troubleshooting | 68 |
| Check points | 68 |
| Information codes | 75 |
| | |
| Appendix | 76 |
| Specifications | 76 |
| | |
| Warranty | 77 |
| Samsung over-the-range (otr) microwave oven | 77 |

Important safety instructions

Congratulations on your new Samsung microwave oven. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your microwave oven's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your microwave oven.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- A.** Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- B.** Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on the sealing surface.
- C.** Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - 1.** Door (bent),
 - 2.** Hinges and latches, (broken or loosened),
 - 3.** Door seals and sealing surface.
- D.** Only properly qualified service personnel should adjust or repair the oven. Do not attempt to adjust or repair the oven yourself.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ WARNING

Hazards or unsafe practices that may result in **severe personal injury or death.**

⚠ CAUTION

Hazards or unsafe practices that may result in **minor personal injury or property damage.**

📖 NOTE

To reduce the risk of fire, explosion, electric shock, or personal injury when using your microwave oven, follow these basic safety precautions.

- | | |
|---|--|
|  Do NOT attempt. |  Unplug the power plug from the wall socket. |
|  Do NOT disassemble. |  Make sure the machine is grounded to prevent electric shock. |
|  Do NOT touch. |  Call the service center for help. |
|  Follow directions explicitly. |  Note |

These warning signs are here to prevent injury to you and others. Please follow them explicitly. After reading this section, keep it in a safe place for future reference.

STATE OF CALIFORNIA PROPOSITION 65 WARNING

WARNING : This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

SAVE THESE INSTRUCTIONS

Important safety instructions

When using any electrical appliance, basic safety precautions should be followed, including the following:

Warning

To reduce risk of burns, electric shock, fire, personal injury or exposure to excessive microwave energy:

1. Read all safety instructions before using the appliance.
2. Read and follow the specific “Precautions to avoid possible exposure to excessive microwave energy” on page 4.
3. This appliance must be grounded. Connect only to properly grounded outlets. See Important “Grounding instructions” on page 8 of this manual.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers (for example, closed glass jars) can explode if heated rapidly. Never heat them in a microwave oven.
6. Use this appliance only for its intended use as described in the manual. Do not put corrosive chemicals or vapors in or on this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
7. As with any appliance, close supervision is necessary when it is used by children. Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be repaired or serviced only by qualified service personnel. Contact the nearest authorized service facility for examination, repair, or adjustment.
10. Do not cover or block any openings on the appliance.
11. Do not tamper with or make any adjustments or repairs to the door.
12. Do not store this appliance outdoors. Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
13. Do not immerse the cord or plug in water.
14. Keep the cord away from heated surfaces. (including the back of the oven).
15. Do not let the cord hang over edge of table or counter.

SAVE THESE INSTRUCTIONS

-
- 16.** When cleaning surfaces of the door and oven that come together when the door closes, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth. Unplug the plug before cleaning.
 - 17.** To reduce the risk of fire in the oven cavity:
 - a.** Do not overcook food. Carefully watch appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b.** Remove wire twist-ties from paper or plastic bags before placing the bags in the oven.
 - c.** If materials inside the oven ignite, keep the oven door closed, turn the oven off, and disconnect the power cord, or shut off the power at the fuse or circuit breaker panel. If the door is opened, the fire may spread.
 - d.** Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
 - 18.** Liquids, such as water, milk, coffee, or tea can be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.** To reduce the risk of injury:
 - a.** Do not overheat liquid.
 - b.** Stir liquid both before and halfway through heating it.
 - c.** Do not use straight-sided containers with narrow necks.
 - d.** After heating, allow the container to stand in the microwave oven for a short time before removing the container.
 - e.** Use extreme care when inserting a spoon or other utensil into the container.
 - 19.** Oversized foods or oversized metal utensils should not be inserted in microwave / toaster oven as they may create a fire or electric shock.
 - 20.** Do not clean with metal scouring pads. Piece can burn off the pad and touch electrical parts involving a risk of electric shock.
 - 21.** Do not use paper products when appliance is operated in toaster mode.
 - 22.** Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
 - 23.** Do not cover racks or any other part of the oven with metal foil . This will cause overheating of the oven.

SAVE THESE INSTRUCTIONS

Important safety instructions

CAUTION

1. Clean Ventilating Hoods Frequently - Grease should not be allowed to accumulate on the hood of the filter.
2. When flaming foods under the hood, turn the fan on.
3. Use care when cleaning the vent-hood filter. Corrosive cleaning agents, such as lye-based oven cleaner, may damage the filter.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electrical current. This appliance is equipped with a cord that includes a grounding wire and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING

Improper use of the grounding plug can result in a risk of electric shock.

- Plug into a grounded, 3 pronged outlet. Do not remove the third (grounding) prong. Do not use an adaptor or otherwise thwart the safety function of the grounding plug.
- Consult a qualified electrician or service person if you do not understand the grounding instructions or if you are not sure if the appliance is properly grounded.
- We do not recommend using an extension cord with this appliance. If the power-supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance. However, if it is necessary to use an extension cord, read and follow the "Use of Extension Cords" section on the next page.

SAVE THESE INSTRUCTIONS

USE OF EXTENSION CORDS

A short power-supply cord is provided to reduce the risk of your becoming entangled in or tripping over a longer cord. Longer cord sets or extension cords are available and you can use them if you exercise care. If you use a long cord or extension cord:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
2. The extension cord must be a grounding-type 3-wire cord and it must be plugged into a 3-slot outlet.
3. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over accidentally. If you use an extension cord, the interior light may flicker and the speed of the blower may vary when the microwave oven is on. Cooking times may be longer too.

SAVE THESE INSTRUCTIONS

Important safety instructions

CRITICAL INSTALLATION WARNINGS



This appliance must be installed by a qualified technician or service company.

- Failing to have a qualified technician install the oven may result in electric shock, fire, an explosion, problems with the product, or injury.

Unpack the oven, remove all packaging material and examine the oven for any damage such as dents on the interior or exterior of the oven, broken door latches, cracks in the door, or a door that is not lined up correctly. If there is any damage, do not operate the oven and notify your dealer immediately.

Make sure to install your oven in a location with adequate space.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failing to do so may result in electric shock or fire.

Plug the power cord into a properly grounded 3 pronged outlet. Your oven should be the only appliance connected to this circuit.

- Sharing a wall socket with other appliances, using a power strip, or extending the power cord may result in electric shock or fire.
- Do not use an electric transformer. It may result in electric shock or fire.
- Ensure that the voltage, frequency and current provided match the product's specifications. Failing to do so may result in electric shock or fire.

Keep all packaging materials out of the reach of children. Children may use them for play.



This appliance must be properly grounded. Read and follow the specific "Grounding instructions" found in the beginning of this section. Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is grounded in accordance with local and national codes.

Do not cut or remove the third (ground) prong from the power cord under any circumstances.

The microwave requires a separate branch circuit single grounded outlet of at least 15A and max of 20A.

SAVE THESE INSTRUCTIONS

-
- ❑ Do not install this appliance in a humid, oily, or dusty location, or in a location exposed to direct sunlight or water (rain drops).
 - This may result in electric shock or fire.Plug the power plug into the wall socket firmly. Do not use a damaged power plug, damaged power cord, or loose wall socket.
 - This may result in electric shock or fire.Do not mount over a sink.
Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.
Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.
 - This may result in electric shock or fire.Do not pull the power cord when you unplug the oven.
 - Unplug the oven by pulling the plug only.
 - Failing to unplug may result in electric shock or fire.
 - ✎ When the power plug or power cord is damaged, contact your nearest service center for a replacement or repair.

INSTALLATION CAUTIONS

- ★ Position the oven so that the plug is easily accessible.
 - Failing to do so may result in electric shock or fire due to electric leakage.
-  Unplug the oven when it is not being used for long periods of time or during a thunder/lightning storm.
 - Failing to do so may result in electric shock or fire.

SAVE THESE INSTRUCTIONS

Important safety instructions

CRITICAL USAGE WARNINGS

-  If the microwave appliance is flooded, please contact your nearest service center. Failing to do so may result in electric shock or fire.
Read and follow the specific “Precautions to Avoid Possible Exposure to Excessive Microwave Energy”, found in the beginning of this Safety Information Section.
If the microwave generates a strange noise, a burning smell or smoke, unplug it immediately and contact your nearest service center.
 - Failing to do so may result in electric shock or fire.In the event of a gas leak (propane gas, LP gas, etc.), ventilate the room immediately. Do not touch the microwave, power cord, or plug.
 - Do not use a ventilating fan.
 - A spark may result in an explosion or fire.Take care that the door or any of the other parts do not come into contact with your body while cooking or just after cooking.
 - Failing to do so may result in burns.In the event of a grease fire on the surface units below the oven, smother the flaming pan on the surface unit by covering the pan completely with a lid, a cookie sheet, or a flat tray.
Never leave surface units beneath your oven unattended at high heat settings. Boil overs cause smoking and greasy spillovers that may ignite and spread if the vent fan is operating. To minimize automatic fan operation, use adequate sized cookware and use high heat on surface units only when necessary.
If materials inside the oven should ignite, keep the oven door closed, turn the oven off and disconnect the power cord, or shut off power at the fuse or circuit breaker panel. If the door is opened, the fire may spread.
 - Always observe safety precautions when using your oven. Never try to repair the oven on your own. There is dangerous voltage inside. If the oven needs to be repaired, contact an authorized service center near you.
-  Do not attempt to repair, disassemble, or modify the appliance yourself.
 - Because a high voltage current enters the product chassis during operation, opening the chassis can result in electric shock or fire.
 - You may be exposed to electromagnetic waves.
 - When the oven requires repair, contact your nearest service center.

SAVE THESE INSTRUCTIONS

-
-  If any foreign substance such as water enters the microwave, unplug it, and then contact your nearest service center.
- Failing to do so may result in electric shock or fire.
-  Do not touch the power plug with wet hands.
- This may result in electric shock.
- Do not turn the appliance off by unplugging the power plug while the appliance is in operation.
- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.
- Keep all packaging materials well out of the reach of children. Packaging materials can be dangerous to children.
- If a child places a bag over its head, the child can suffocate.
- Do not let children or any person with reduced physical, sensory or mental capabilities use this appliance unsupervised. Make sure that the appliance is out of the reach of children.
- Failing to do so may result in electric shock, burns, or injury.
- Do not touch the inside of the appliance immediately after cooking. The inside of the appliance will be hot.
- The heat on the inside of the oven can cause burns.
- Do not put aluminum foil (except as specifically directed in this manual), metal objects (such as containers, forks, etc.), or containers with golden or silver rims into the microwave.
- These objects can cause sparks or a fire.
- Do not use or place flammable sprays or objects near the oven.
- Heat from the microwave can cause flammable sprays to explode or burn.
 - Failing to do so may result in electric shock or injury.
- Do not tamper with or make any adjustments or repairs to the door. Under no circumstances should you remove the outer cabinet.
- Do not store or use the oven outdoors.

SAVE THESE INSTRUCTIONS

Important safety instructions

USAGE CAUTIONS

- ★ If the surface of the microwave is cracked, turn it off.
 - Failing to do so may result in electric shock.
- Dishes and containers can become hot. Handle with care.
- Hot foods and steam can cause burns. Carefully remove container coverings, directing steam away from your hands and face.
- Remove lids from baby food before heating. After heating baby food, stir well to distribute the heat evenly. Always test the temperature by tasting before feeding the baby. The glass jar or surface of the food may appear to be cooler than the food in the interior, which can be so hot that it will burn the infant's mouth.
- Make sure all cookware used in the oven is suitable for microwaving.
- Use microwavable cookware in strict compliance with such manufacturer's recommendations.

SAVE THESE INSTRUCTIONS

Do not stand on top of the microwave or place objects (such as laundry, oven covers, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- Items, such as a cloth, may get caught in the door.
- This may result in electric shock, fire, problems with the product, or injury.

Do not operate the appliance with wet hands.

- This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place the appliance over a fragile object such as a sink or glass object.

- This may result in damage to the sink or glass object.

Do not put your face or body close to the appliance while cooking or when opening the door just after cooking.

- Take care that children do not come too close to the appliance.
- Failing to do so may result in children burning themselves.

Do not place food or heavy objects over the door when opening the door.

- The food or object may fall and this may result in burns or injury.

Do not abruptly cool the door, the inside of the appliance, or the dish by pouring water over it during or just after cooking.

- This may result in damage to the appliance. The steam or water spray may result in burns or injury.

Do not cook without the glass tray in place on the oven floor. Food will not cook properly without the tray.

Do not defrost frozen beverages in narrow-necked bottles. The containers can break. Do not scratch the glass of the oven door with a sharp object.

- This may result in the glass being damaged or broken.

Do not store anything directly on top of the appliance when it is in operation.

Do not use sealed containers. Remove seals and lids before use. Sealed containers can explode due to buildup of pressure even after the oven has been turned off.

SAVE THESE INSTRUCTIONS

Important safety instructions

⚠ CRITICAL CLEANING INSTRUCTIONS

Do not clean the appliance by spraying water directly onto it.

Do not use benzene, thinner, or alcohol to clean the appliance.

- This may result in discoloration, deformation, damage, electric shock, or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket and remove food waste from the door and cooking compartment.

- Failing to do so may result in electric shock or fire.

Take care not to hurt yourself when cleaning the appliance.

(external/internal)

- You may hurt yourself on the sharp edges of the appliance.

Do not clean the appliance with a steam cleaner.

- This may result in corrosion.

Keep the inside of the oven clean. Food particles or spattered oils stuck to the oven walls or floor can cause paint damage and reduce the efficiency of the oven.


SAVE THESE INSTRUCTIONS

Setting up your new microwave oven

Be sure to follow these instructions closely so that your new microwave oven works properly.

Checking the parts


Carefully unpack your microwave oven, and make sure you've received all the parts shown below. If your microwave oven was damaged during shipping, or if you do not have all the parts, contact the Samsung Call Center. (Refer to the "Warranty" on page 77.)

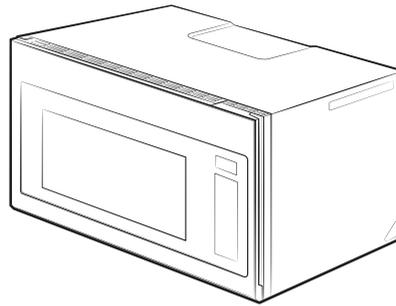

Microwave oven



* Ceramic Enamel Tray

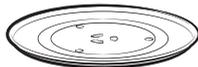


* Glass Tray



* Roller Guide Ring



* Grease Filters (2 ea)

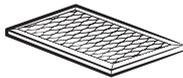

* Charcoal Filter



* Exhaust Adaptor




* Hardware Kit (Screws & Brackets)



Manuals (User & Installation)



Cooking Guide Manual

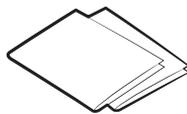

Templates (Top & Wall)



* Low Rack






* High Rack

NOTE

If you need an accessory marked with an * (asterisk), please contact the Samsung Call Center using the phone number listed on the last page of this manual or visit our on-line parts web site at www.samsungparts.com.


Setting up your new microwave oven

Setting up your microwave oven

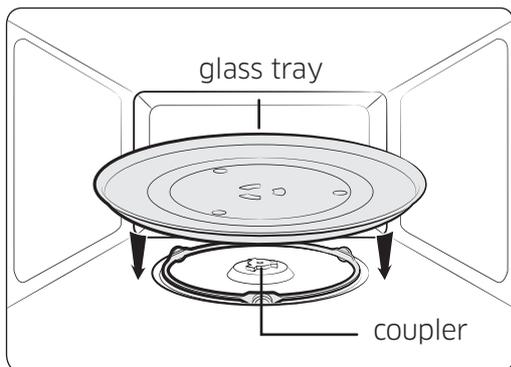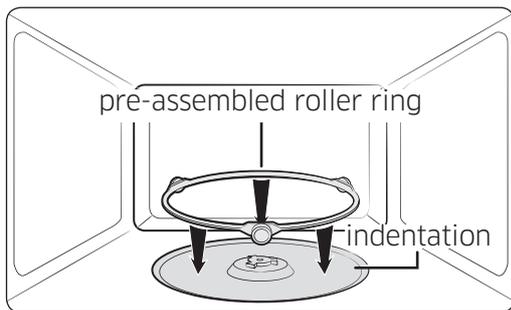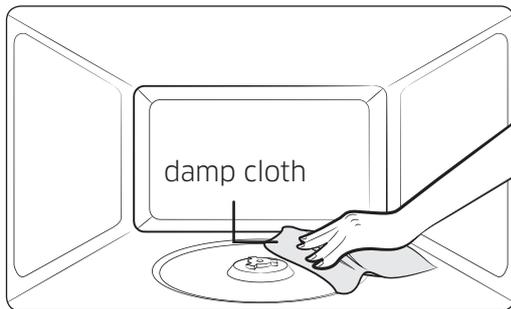

1. Open the door by pulling the handle on the right side of the door.
2. Wipe the inside of the oven with a damp cloth.
3. Install the pre-assembled ring into the indentation at the center of the microwave oven.
4. Fit the center of the glass tray to the coupler.

Checking the control panel

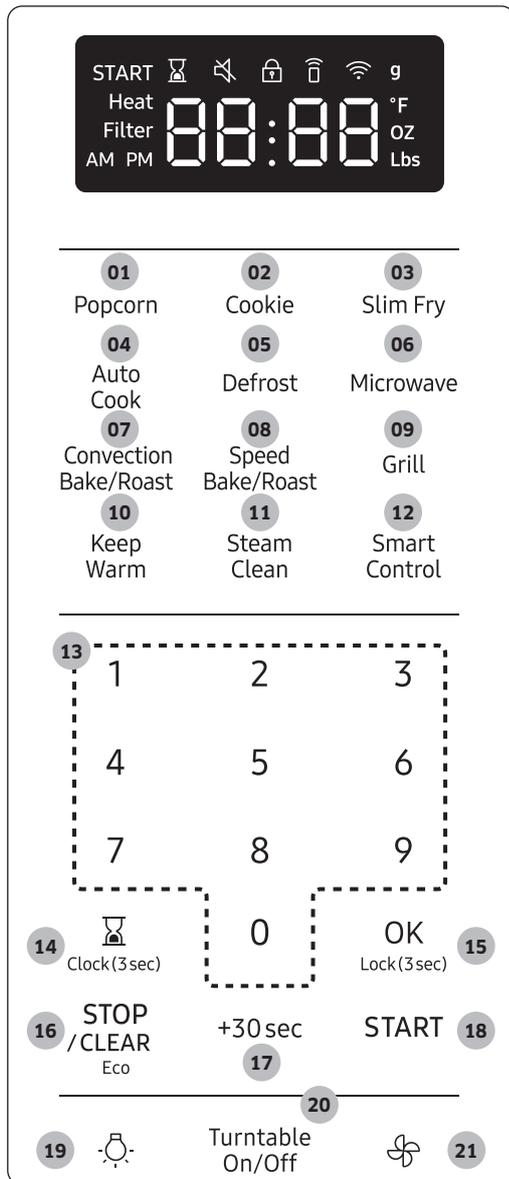


- 01 Popcorn Button
- 02 Cookie Button
- 03 Slim Fry Button
- 04 Auto Cook Button
- 05 Defrost Button
- 06 Microwave Button
- 07 Convection Bake/Roast Button
- 08 Speed Bake/Roast Button
- 09 Grill Button
- 10 Keep Warm Button
- 11 Steam Clean Button
- 12 Smart Control Button
- 13 Number Pad
- 14 Kitchen Timer/Clock Setting Button
- 15 OK/Child Lock Button
- 16 STOP/CLEAR Eco Button
- 17 +30sec Button
- 18 START Button
- 19 Light Button (Hi/Low/Off)
- 20 Turntable On/Off Button
- 21 Vent Button (3 Speed & On/Off)

Setting up your new microwave oven

Clock Settings

Your microwave oven is equipped with a built-in clock. Set the clock when first installing your microwave oven or after a power failure. The time is displayed whenever the microwave oven is not being used.

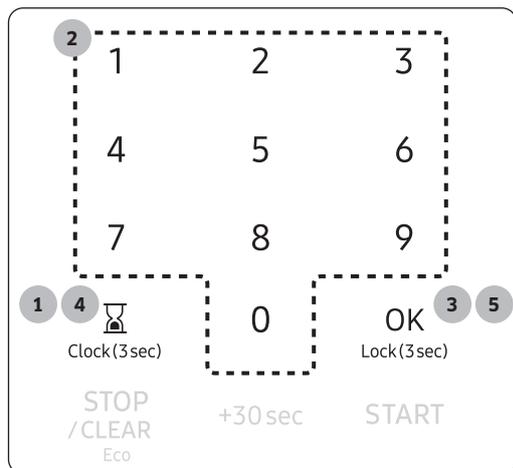

1. Touch the  button for 3 seconds.
2. Use the **number pad** to enter the time.
3. Touch the **OK** button.
4. Touch the  button to change AM to PM. (Only for 12hr mode.)


NOTE

To change the clock display settings (12hr or 24hr mode), refer to **My Settings** on page **24**.

5. Touch the **OK** button.

Child Lock


The **Child Lock** function allows you to lock all buttons so that the microwave oven cannot be operated by children accidentally. The oven can be locked at any time.

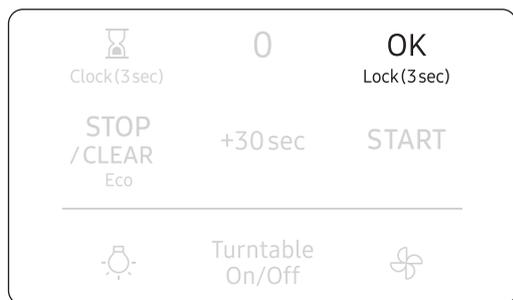

Activating / Deactivating

If you want to activate or deactivate the child lock function, touch the  button for 3 seconds. The display will show '🔒' when the oven is locked.

Eco mode

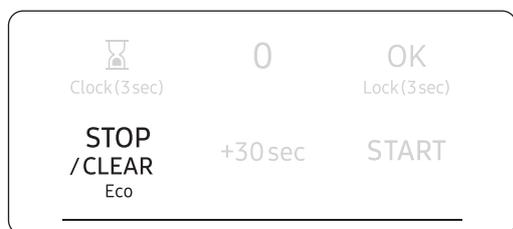

Eco Mode reduces standby power usage. When you touch the **STOP/CLEAR Eco** button once, the display will go out and the microwave shifts to a mode which minimizes power usage. To cancel the Eco Mode, touch any other button.

Smart Control

To use the microwave oven's Smart Control, you must download the SmartThings app to a mobile device.

Functions operated by the SmartThings app may not work smoothly if communication conditions are poor or the microwave oven is installed in a place with a weak Wi-Fi signal.

How to connect the microwave oven

1. Download and open the SmartThings app on your smart device.
2. Follow the app's on-screen instructions to connect your microwave oven.
3. Once the process is complete, the  icon appears on your microwave oven display and the app will confirm you are connected.
4. If the connection icon does not turn on, follow the instruction on the app to reconnect.

To Start the microwave oven remotely

For safety reasons, This function is only available for convection and grill mode but not in microwave mode start.

1. After following the above steps, touch **Smart Control** to use the microwave oven remotely.
2. If  appears on the display, microwave oven can be started and controlled remotely by a connected mobile device.
3. Select the microwave oven icon on the SmartThings app and if the app is connected to the microwave oven, you can perform the following functions through the application:

| Microwave Oven remote control using the SmartThings app | |
|---|---|
| Microwave Oven Monitoring | <ul style="list-style-type: none"> • Check the status of the microwave oven |
| Microwave Oven Remote Control | <ul style="list-style-type: none"> • Control remotely in convection and grill mode but not in microwave mode start • Remotely control vent fan speed/cooktop lamp |

Setting up your new microwave oven

NOTE

- After enabling Smart Control, if you open the door before cooking starts, Smart Control will be disabled.
- Even If  does not show on the display, you can still monitor the microwave oven's status and turn the microwave oven off.
- When oven cooking is finished or cancelled,  will turn off.
- For safety reasons, you cannot turn on the microwave oven remotely and you must specify the cooking time to enable remote control.
- Smart Control will not work properly if the Wi-Fi Connection is unstable.

Voice Control

To use the microwave oven's Voice Control function, you need Bixby / Amazon Alexa App / Google Assistant App on your mobile device.

- **Bixby** : Start conversation with Bixby on SAMSUNG mobile by saying "Hi Bixby" or by pressing the side key.

| Function | OTR Bixby Command | Remarks |
|---------------|--|--|
| Start | <ul style="list-style-type: none"> • Start the microwave in convection bake mode at 350 degrees for 30 minutes • Start the microwave in convection roast mode at 350 degrees for 30 minutes • Start the microwave in keep warm mode for 30 minutes • Start the microwave in grill mode for 30 minutes • Convection bake in the microwave at 350 degrees • Convection roast in the microwave at 350 degrees • Keep warm in the microwave • Grill in the microwave | <ul style="list-style-type: none"> • Convection Bake 100°F(38°C), 200°F(93°C), 225°F(107°C), 250°F(121°C), 275°F(135°C), 300°F(149°C), 325°F(163°C), 350°F(177°C), 375°F(191°C), 400°F(204°C), 425°F(218°C) • Convection Roast 200°F(93°C), 225°F(107°C), 250°F(121°C), 275°F(135°C), 300°F(149°C), 325°F(163°C), 350°F(177°C), 375°F(191°C), 400°F(204°C), 425°F(218°C) |
| Turn Off/Stop | <ul style="list-style-type: none"> • Cancel the microwave • Turn off the microwave | - |
| Check Temp | <ul style="list-style-type: none"> • What is the temperature of the microwave • Check the microwave temperature | - |

| Function | OTR Bixby Command | Remarks |
|-------------------------------|--|---------|
| Check Time | <ul style="list-style-type: none"> Check the remaining time of the microwave How much time is left on the microwave timer? | - |
| Check Status | <ul style="list-style-type: none"> Check the microwave status Check the status of the microwave | - |
| Temp Control | <ul style="list-style-type: none"> Set the temperature of the microwave to 300 Increase the temp of the microwave by 20 Decrease the temp of the microwave by 20 Turn the microwave temperature up to 100 degrees Turn the microwave temperature down to 50 degrees | - |
| MW Hood Control | <ul style="list-style-type: none"> Turn on/off the microwave hood light Trun on/off hood power of microwave Turn on/off hood fan of microwave Set the microwave hood fan speed to high/mid/low | - |
| Oven Timer (Change Cook Time) | <ul style="list-style-type: none"> Set the timer on the microwave to 1 hour | - |

- **Amazon Alexa & Google Assistant** : Samsung smart home appliances are supported by SmartThings skill in Alexa & action in Google Assistant.

Installation Guide

Here’s how to link SmartThings account into Amazon Alexa or Google Assistant. SmartThings App and Alexa App(or Google Assistant App) Should be installed on your phone.

1. Setup the supported devices to SmartThings.
2. After device setup, tap + button on the screen.
3. Tap ‘Voice assistant’ and link your Samsung account to Amazon Alexa. (or Google Assistant)
4. Check the devices are visible on Amazon Alexa app. Then account linking is complete. (Check the devices are visible and set the location(home&room) of devices in Google home app. Then account linking is complete.)

Setting up your new microwave oven

| Function | “Alexa” | “Ok Google” |
|----------|--|---|
| Start | <ul style="list-style-type: none"> • Set the microwave to Microwave • Set the microwave to Grill • Set the microwave to Convection bake • Set the microwave to Convection roast • Set the microwave to Keep warm | <ul style="list-style-type: none"> • Set the microwave to Microwave • Set the microwave to Convection bake • Set the microwave to Convection roast • Set the microwave to Keep warm |
| | <ul style="list-style-type: none"> • Set the microwave to Convection bake for 1 hour[Time] at 350 degrees[Temp] • Set the microwave to Convection roast for 1 hour[Time] at 350 degrees[Temp] • Convection bake for 1hour[Time] at 350degrees[Temp] • Convection roast for 1hour[Time] at 350degrees[Temp] | |
| | <ul style="list-style-type: none"> • Set the microwave to Convection bake at 350 degrees[Temp] • Set the microwave to Convection roast at 350 degrees[Temp] • Convection bake at 350 degrees[Temp] • Convection roast at 350 degrees[Temp] | |
| | <ul style="list-style-type: none"> • Set the microwave to Microwave for 90 seconds[time] • Set the microwave to Grill for 30minutes[time] • Set the microwave to Convection bake for 1hour[time] • Set the microwave to Convection roast for 1hour[time] • Set the microwave to Keep warm for 1hour[time] | |

- If the SmartControl is “ON”, it will start remotely.
- If the SmartControl is “OFF”, only the setting value can be delivered. (Microwave mode can only delivered setting value)

| Function | "Alexa" | "Ok Google" |
|-----------------|--|--|
| Turn Off/Stop | <ul style="list-style-type: none"> Turn off the microwave Stop the microwave | <ul style="list-style-type: none"> Turn off the microwave Stop the microwave |
| Pause | <ul style="list-style-type: none"> Pause the microwave | <ul style="list-style-type: none"> Pause the microwave |
| Resume | <ul style="list-style-type: none"> Resume the microwave | <ul style="list-style-type: none"> Resume the microwave Restart the microwave |
| Check Temp | <ul style="list-style-type: none"> What is the temperature of the microwave? | <ul style="list-style-type: none"> What is the temperature of the microwave? |
| Check Time | - | <ul style="list-style-type: none"> What time is left on the microwave? |
| Check Status | <ul style="list-style-type: none"> Is the microwave running? Is the microwave on? | <ul style="list-style-type: none"> Is the microwave running? Is the microwave on? |
| Set Timer | <ul style="list-style-type: none"> [2 minutes] on the microwave e.g. <ul style="list-style-type: none"> 90 seconds on the microwave (*While running) : Changing cook time (*Ready) : Set requested time with microwave mode as default | <ul style="list-style-type: none"> Set the microwave to [5 minutes] e.g. <ul style="list-style-type: none"> Set the microwave to 2 minutes (*While running) : Changing cook time (*Ready) : Set requested time with microwave mode as default |
| Adjust timer | <ul style="list-style-type: none"> Add [10 minutes] to the microwave [30] more [seconds] to the microwave e.g. <ul style="list-style-type: none"> 2 more minutes to the microwave (*While running) : Adding cook time (*Ready) : Set requested time with microwave mode as default | <ul style="list-style-type: none"> Add [30 seconds] to the microwave e.g. <ul style="list-style-type: none"> Add 30 seconds to the microwave (*While running) : Adding cook time (*Ready) : Set requested time with microwave mode as default |
| Set temperature | <ul style="list-style-type: none"> Set microwave to [200 (degrees, Celsius, Fahrenheit)] Set [device name] to [200 (degrees, Celsius, Fahrenheit)] | <ul style="list-style-type: none"> Set the microwave to [200 degrees, Fahrenheit, Celsius] |

Setting up your new microwave oven

| Function | “Alexa” | “Ok Google” |
|-----------------|---|--|
| MW Hood Control | <ul style="list-style-type: none"> • Turn on/off the (hood light, hood lamp, lamp, light) on microwave • Turn on/off the (hood light, hood lamp) • Set the microwave (brightness, light level, lamp level) to [low, high] • Turn on/off the (hood, fan, hood fan) on microwave[device name] • Turn on/off the (hood, hood fan) • Set the microwave (hood, fan, hood fan) speed to [low, medium, high] | <ul style="list-style-type: none"> • Turn on/off the microwave (light, lamp) • Turn on/off the (hood light, hood lamp) • Set the microwave (brightness, light level, lamp level) to [low, high] • Turn on/off the (hood, fan, hood fan) on microwave • Turn on/off the (hood, hood fan) • Set the microwave (hood, fan, hood fan) speed to [low, medium, high] |

NOTE

- **Bixby** : Only remote start function is possible. It's impossible to deliver only setting value. (Unable to control microwave mode)
- **Amazon Alexa & Google Assistant** : For safety reasons, you cannot turn on the microwave oven remotely, only setting value can be delivered.
- If the time or temperature information is not mentioned, it will operate with default time and temperature setting.
- Smart Control On/Off spec is same as SmartThings app note.

Auto Connectivity

Auto Connectivity function lets you quickly connect the hood via Wi-Fi with a compatible Samsung cooktop after the hood and cooktop have been paired. To turn the function on, press the Auto Connectivity button in SmartThings App. To disconnect the hood and cooktop, press the Auto Connectivity button again. While the hood and cooktop are connected, the hood fan will automatically turn on when you turn on the cooktop. The hood fan will also turn off automatically when you turn off the cooktop.


NOTE

- Auto connectivity function may not work normally when the temperature is set high.

My settings

You can customize your new microwave oven to suit your preferences.

To customize:

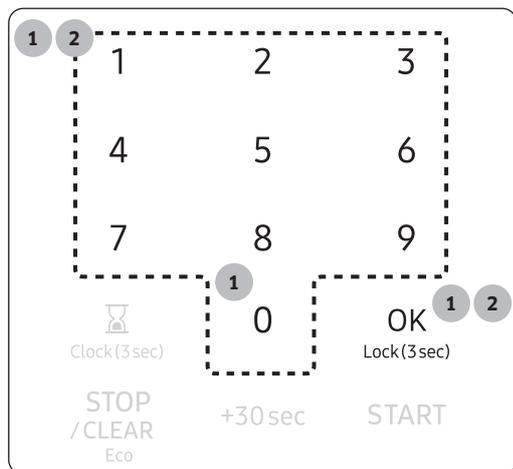

1. Touch the **0** button for 3 seconds. Touch the **number pad** to select a function you want to customize (Refer to the table below.) and then touch **OK** button.
2. Touch number **1** or **2** to change the options and then touch **OK**. (Number of the options are listed on the table below.)

Corresponding number for functions and options are listed in the table below.

| No. | Function | Description | Options | |
|-----|---------------------------------|--|---------|---------------------------|
| 1 | Weight Display | Pounds and grams are able for Weight Display options. | 1 | lbs |
| | | | 2 | g |
| 2 | Clock Display | The clock can display in either the 12 HR or 24 HR time mode. | 1 | 12 Hr |
| | | | 2 | 24 Hr |
| 3 | Sound | Sound can be turned On and Off. | 1 | ON |
| | | | 2 | OFF |
| 4 | Remind End Signal | The Remind End Signal can be turned On and Off. | 1 | ON |
| | | | 2 | OFF |
| 5 | Daylight Saving Time Adjustment | The time can be advanced one hour for DST without resetting the clock. | 1 | ON (to advance one hour) |
| | | | 2 | OFF (to go back one hour) |
| 6 | Demo Mode | Demo Mode can be turned On and Off. | 1 | ON |
| | | | 2 | OFF |
| 7 | Filter Remind | The Filter Remind function can be turned On and Off. | 1 | ON |
| | | | 2 | OFF |

Setting up your new microwave oven

| No. | Function | Description | Options | |
|-----|----------|--|---------|-----|
| 8 | Wi-Fi | The Wi-Fi function can be turned On and Off. | 1 | ON |
| | | | 2 | OFF |

NOTE

- If you change your mind while adjusting a setting, touch the **STOP/CLEAR Eco** button to cancel, and then adjust the setting again.
- If there is a power interruption, you will need to reset '**Demo Mode**' and '**Filter Remind**' options.
- If the clock is set for standard time, the **Daylight Savings Time Adjustment** function allows you to change the time easily without needing to reset the clock. **Daylight Saving Time** begins for most of the United States at 2 a.m. on the first Sunday of April and reverts to Standard time at 2 a.m. on the last Sunday of October.


Filter Reminder

If the **Filter Remind** function is **ON**, the microwave will remind you to clean or replace the grease filter every four months. When it is time to clean or replace the grease filter, the microwave displays the "Filter" message to remind you to clean or replace the grease filter. To remove the message, touch the number 0 when the microwave is in standby mode. If you don't want to receive this message, set the **Filter Remind** function off in **My settings**.

Using your microwave oven

Kitchen Timer

Your microwave has a built-in timer function - the Kitchen Timer. Use the Kitchen Timer for timing up to 99 minutes, 99 seconds.

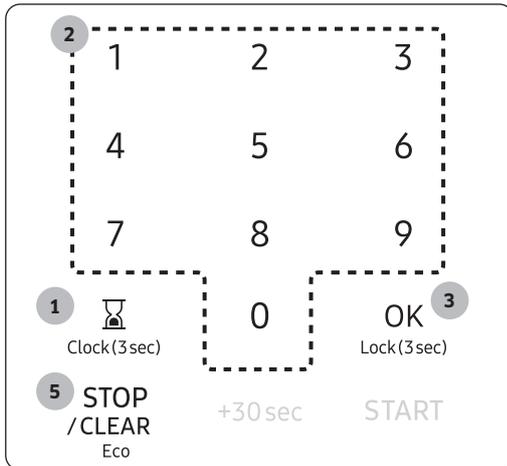

1. Touch the  button.
2. Use the **number pad** to set the time you want the timer to run. (Max time 99 minutes, 99 seconds.)
3. Touch the **OK** button.
4. The display counts down and beeps when the time has elapsed.
5. To cancel the timer setting : Touch the **STOP/CLEAR Eco** button once.

Vent Fan (High/Mid/Low/Off)

The vent fan removes steam and other vapors that result from cooking on the cooktop below.



Touch the  button once for high fan speed, twice for medium fan speed, and three times for low fan speed. Touch the  button four times to turn the fan off. On the display 3, 2, 1, OFF will appear instead of High, Mid, Low, Off.

NOTE

- The exhaust fan's speed will decrease when the oven's cooking function is activated.
- The Vent Fan protects the microwave from excess heat rising from the cooktop below it. It automatically turns on if it senses too much heat. If you have turned the fan on, you may find that you cannot turn it off. The fan will automatically turn off when the internal parts are cool. It may stay on for 30 minutes or more after the cooktop and microwave controls are turned off.

Using your microwave oven

Cooktop Lamp (High/Low/Off)



Touch the  button to turn the cooktop lamp on or off. Touch the button once for high, twice for low, and three times to turn the cooktop lamp off.

On the display Hi, Lo, OFF will appear instead of High, Low, Off.

Turntable (On/Off)



For best cooking results, leave the turntable on. However, for large dishes it can be turned off.

Touch the **Turntable On/Off** button to turn the turntable on or off.

CAUTION

The turntable may become too hot to touch.

Use pot holders to handle the turntable during and after cooking.

STOP/CLEAR Eco button

The **STOP/CLEAR Eco** button allows you to clear instructions you have entered.

It also allows you to pause the oven's cooking cycle, so that you can check the food.

- To pause the oven during cooking, touch the **STOP/CLEAR Eco** button once. To restart, touch the **START** button.
- To stop cooking, erase instructions, and return the oven display to the time of day, touch the **STOP/CLEAR Eco** button twice.
- To clear instructions you have just entered, touch the **STOP/CLEAR Eco** button once, and then re-enter the instructions.
- To cancel a kitchen timer setting, touch the **STOP/CLEAR Eco** button once.


+30sec button

This feature offers a convenient way to increase cooking time. **+30sec** feature is only for manual cooking mode.



1. In standby mode, touching **+30sec** button will add 30 seconds of microwave mode at 100 % power. (Power level can not be changed in this way.)
2. If the oven is in manual cooking mode, touching **+30sec** button will add cooking time by 30 seconds.


Accessory Combination Guide

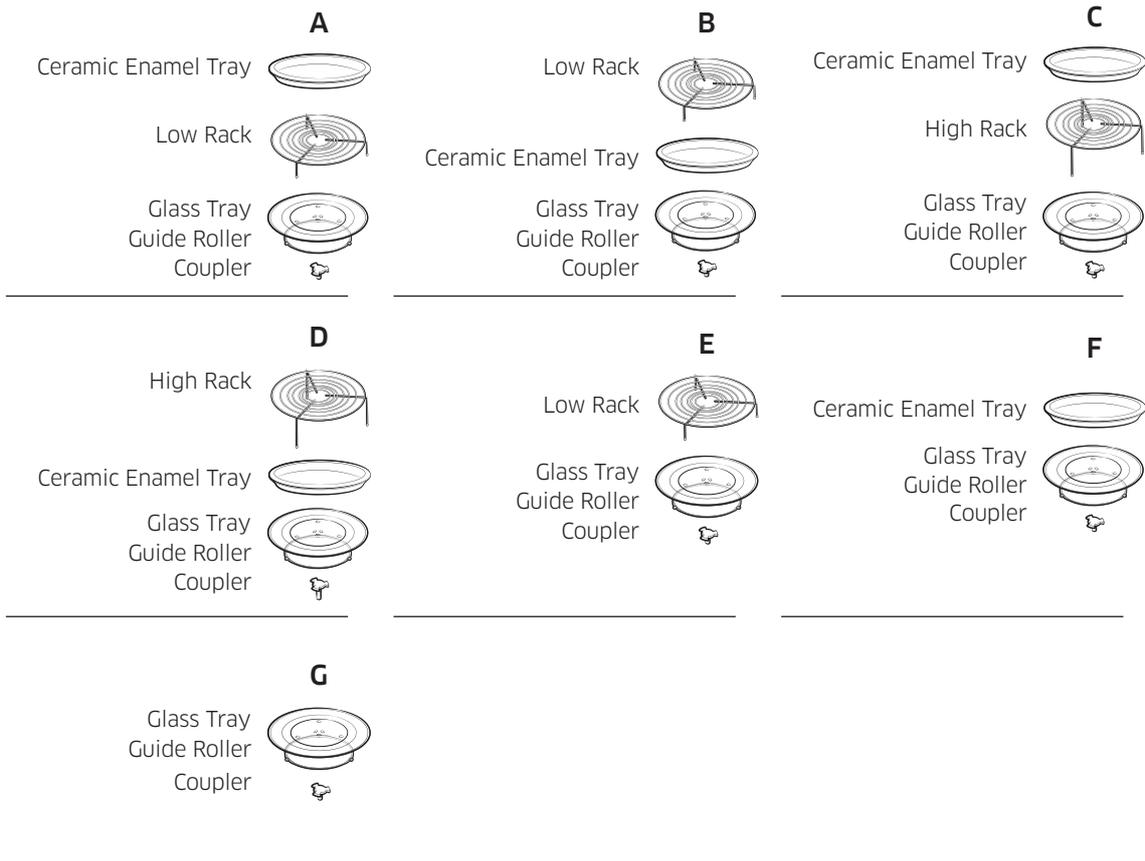

Using your microwave oven

Popcorn

You can cook popcorn easily using the **Popcorn** button. You do not need to set either the cooking time or the power level.

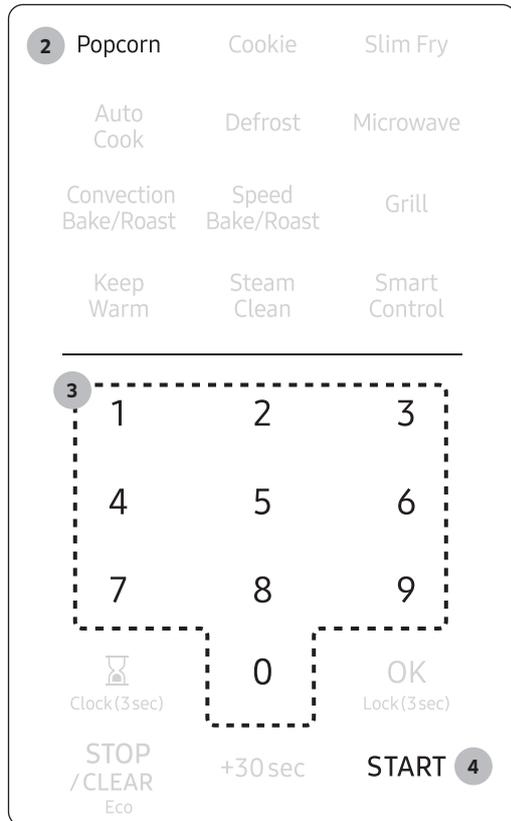


1. Put a bag of unpopped popcorn on the tray.
2. Touch the **Popcorn** button.
3. Enter the size of the bag by touching the **number pad**. (default : 2).

| NO. | 1 | 2 | 3 |
|--------|------------------|------------------|------------------|
| Amount | 3.5 oz (99 g) | 3.0 oz (85 g) | 1.5 oz (43 g) |

4. Touch the **START** button.
Then the microwave oven will automatically be operated for pre-programmed time.

Cookie

You can cook cookies evenly using the **Cookie** button. A high speed fan circulates hot air inside the oven to heat food evenly. For best results, it is recommended to preheat and to grease the ceramic enamel plate and use it on the low rack. The ceramic enamel plate will shorten cooking time and the low rack helps heated air to move around the food. (Use accessory type 'A' refer to page 28)

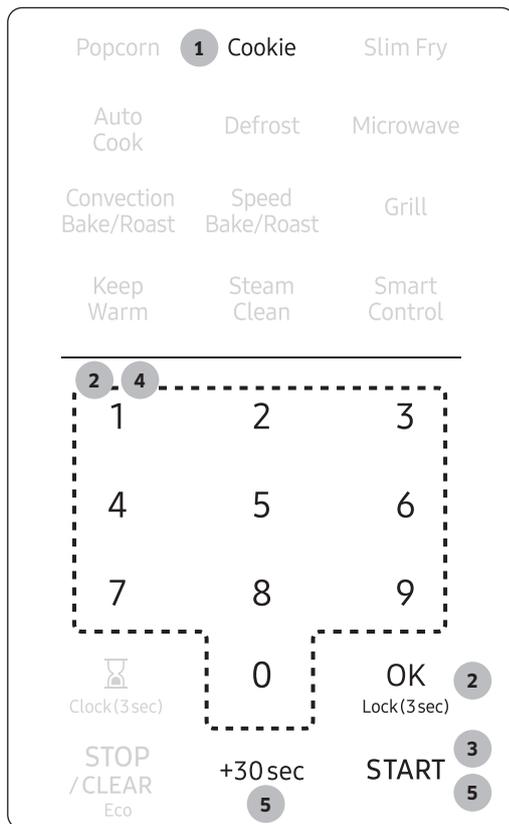

1. Touch the **Cookie** button.
2. Enter the desired temperature using the **number pad** (Refer to the temperature table below.) and then touch the **OK** button.

| Cookie |
|--------|
| 275 °F |
| 300 °F |
| 325 °F |
| 350 °F |
| 375 °F |
| 400 °F |

3. If you want to preheat the oven, touch the **START** button without setting the cook time.

NOTE

If there is no action within 60 minutes after preheating the oven, the oven will turn off automatically.

4. Use the **number pad** to set a cooking time.
5. Touch the **START** button to begin cooking. If you want to add 30 seconds of cooking time, touch **+30sec** button. You can adjust the cooking time while the microwave oven is operating.


NOTE

If the oven reaches the temperature setting, 'Beep' sound will occur in both preheat and cooking mode.

Using your microwave oven

Slim Fry

The Slim Fry menu contains pre-set cooking programs for 9 different items. You do not need to set the cooking times or the power level.

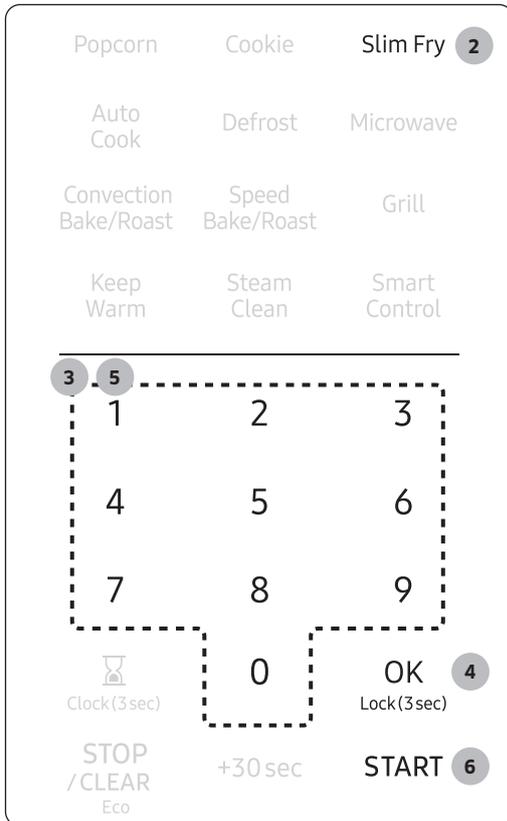

1. Place the food on the tray or the rack. (See **Accessory Combination Guide** on page **31**)
2. Touch the **Slim Fry** button.
3. To select the number that corresponds to the food, touch the **number pad (1-9)**. (Refer to the table on page **36**.)
4. Touch the **OK** button.
5. Enter the amount of food by touching the **number pad (1 or 2)**. (Refer to the table on page **36**.)
6. Touch the **START** button. The microwave oven will automatically operate for the pre-programmed time.

Example for Slim Fry operation

To set **SF-4. Frozen Chicken Nuggets** with **2 servings** for example, follow the instructions below.

| Touch | Display shows |
|--|---|
| <p>Popcorn Cookie Slim Fry 2</p> <p>Auto Cook Defrost Microwave</p> | <p>START </p> <p>Heat 99:99 °F</p> <p>Filter 99:99 OZ</p> <p>AM PM 99:99 Lbs</p> |
| <p>1 2 3</p> <p>3 4 5 6</p> | <p>START </p> <p>Heat 99:99 °F</p> <p>Filter 99:99 OZ</p> <p>AM PM 99:99 Lbs</p> |
| <p> 0 OK 4 Clock(3sec) Lock(3sec)</p> <p>STOP / CLEAR +30sec START</p> <p>Eco</p> | <p>START </p> <p>Heat 00:99 °F</p> <p>Filter 00:99 OZ</p> <p>AM PM 00:99 Lbs</p> |
| <p>1 5 2 3</p> <p>4 5 6</p> | <p>START </p> <p>Heat 00:99 °F</p> <p>Filter 00:99 OZ</p> <p>AM PM 00:99 Lbs</p> |
| <p> 0 OK Clock(3sec) Lock(3sec)</p> <p>STOP / CLEAR +30sec START 6</p> <p>Eco</p> | <p>START </p> <p>Heat 00:00 °F</p> <p>Filter 00:00 OZ</p> <p>AM PM 00:00 Lbs</p> |

Time counting down


Using your microwave oven

Using your microwave oven

| Cook No. | Food | Amount | | Directions | Accessory Type |
|----------|---------------------------|--------|-----------------------------------|---|----------------|
| 1 | Frozen Hash Brown Patties | 1 | 2 servings : 4ea | Place frozen hash brown patties on greased ceramic enamel tray. Put tray on the center of glass tray. | F |
| | | 2 | 4 servings : 8ea | | |
| 2 | Frozen French Fries | 1 | 2 servings : 8 oz, 227 g | Place frozen french fries on greased ceramic enamel tray. Put tray on high rack. | C |
| | | 2 | 4 servings : 16 oz, 454 g | | |
| 3 | Frozen Potato Wedges | 1 | 2 servings : 8 oz, 227 g | Place frozen potato wedges on greased ceramic enamel tray. Put tray on the center of glass tray. | F |
| | | 2 | 4 servings : 16 oz, 454 g | | |
| 4 | Frozen Chicken Nuggets | 1 | 1 serving : 8 oz, 227 g | Place frozen chicken nuggets on greased ceramic enamel tray. Put tray on the center of glass tray. | F |
| | | 2 | 2 servings : 16 oz, 454 g | | |
| 5 | Frozen Shrimp, Breaded | 1 | 2 servings : 8 oz, 227 g | Place frozen shrimp(breaded) on greased ceramic enamel tray. Put tray on high rack. | C |
| | | 2 | 4 servings : 16 oz, 454 g | | |
| 6 | Frozen Mini Spring Rolls | 1 | 1 servings : 10 ea (5 oz, 141 g) | Place frozen mini spring rolls on greased ceramic enamel tray. Put tray on high rack. | C |
| | | 2 | 2 servings : 18 ea (10 oz, 283 g) | | |
| 7 | Drumsticks | 1 | 1 servings : 4 ea (12 oz, 340 g) | Rinse drumsticks and place them directly on low rack. Place the rack on the ceramic enamel tray. | B |
| | | 2 | 2 servings : 8 ea (24 oz, 680 g) | | |
| 8 | Frozen Cheese Sticks | 1 | 2 servings : 4 ea | Place frozen cheese sticks on greased ceramic enamel tray. Put tray on the center of glass tray. | F |
| | | 2 | 4 servings : 8 ea | | |
| 9 | Frozen Onion Rings | 1 | 2 servings : 6 ea | Place frozen onion rings on greased ceramic enamel tray. Put tray on the center of glass tray. | F |
| | | 2 | 4 servings : 12 ea | | |

Auto Cook

The Auto Cook menu contains pre-set cooking programs for 71 different items. You do not need to set the cooking times or the power level.

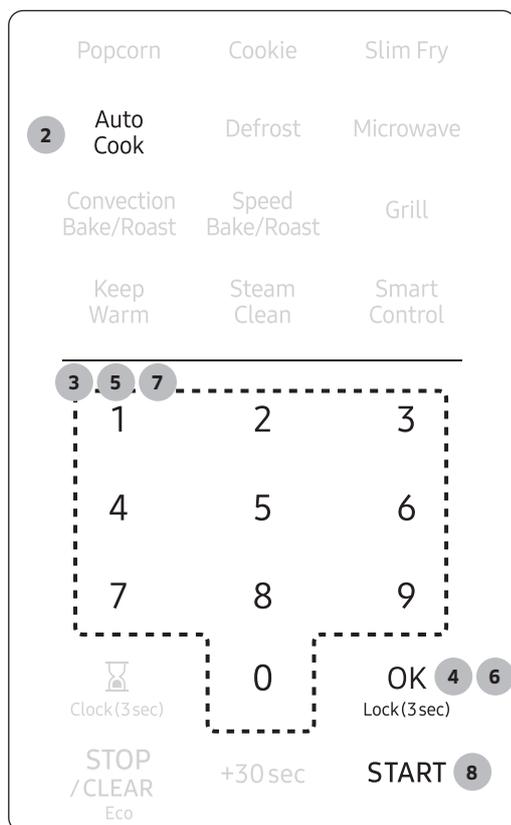

1. Place the food on the tray or the rack. (See **Accessory Combination Guide** on page **31**)
2. Touch the **Auto Cook** button.
3. To select the number that corresponds to the category, touch the **number pad**. (Refer to the table that begins on page **39**.)
4. Touch the **OK** button.
5. To select the number that corresponds to the food, touch the **number pad**. (Refer to the table that begins on page **39**.) After selecting the food, if you do not need to set the amount, touch the **START** button. If you need to set the amount, go to Step 6.
6. Touch the **OK** button.
7. Enter the amount of food by touching the **number pad**. (Refer to the table that begins on page **39**.)
8. Touch the **START** button. The microwave will automatically operate for the pre-programmed time.

Using your microwave oven

Example for Auto Cook operation

To set **A-23. Frozen Waffles** with **3 servings** for example, follow the instructions below.

Using your microwave oven

| Touch | Display shows | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---------------|----------------|-------------|--------------------|---------|------------|---|--------|----------------|-----|---|---|---|-------|---|---|----|--------|------|-------|--|----|-------|--------|--|--|-----|----|-------|--|--|--|-----|
| <table border="1"> <tr> <td>Popcorn</td> <td>Cookie</td> <td>Slim Fry</td> </tr> <tr> <td>2 Auto Cook</td> <td>Defrost</td> <td>Microwave</td> </tr> </table> | Popcorn | Cookie | Slim Fry | 2 Auto Cook | Defrost | Microwave | <table border="1"> <tr> <td>START</td> <td>🕒</td> <td>🔒</td> <td>📶</td> <td>g</td> </tr> <tr> <td>Heat</td> <td colspan="3">88:88</td> <td>°F</td> </tr> <tr> <td>Filter</td> <td colspan="3"></td> <td>OZ</td> </tr> <tr> <td>AM PM</td> <td colspan="3"></td> <td>Lbs</td> </tr> </table> | START | 🕒 | 🔒 | 📶 | g | Heat | 88:88 | | | °F | Filter | | | | OZ | AM PM | | | | Lbs | | | | | | |
| Popcorn | Cookie | Slim Fry | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 Auto Cook | Defrost | Microwave | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| START | 🕒 | 🔒 | 📶 | g | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Heat | 88:88 | | | °F | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Filter | | | | OZ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AM PM | | | | Lbs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <tr> <td>1</td> <td>3 2</td> <td>3</td> </tr> <tr> <td>4</td> <td>5</td> <td>6</td> </tr> </table> | 1 | 3 2 | 3 | 4 | 5 | 6 | <table border="1"> <tr> <td>START</td> <td>🕒</td> <td>🔒</td> <td>📶</td> <td>g</td> </tr> <tr> <td>Heat</td> <td colspan="3">88:88</td> <td>°F</td> </tr> <tr> <td>Filter</td> <td colspan="3"></td> <td>OZ</td> </tr> <tr> <td>AM PM</td> <td colspan="3"></td> <td>Lbs</td> </tr> </table> | START | 🕒 | 🔒 | 📶 | g | Heat | 88:88 | | | °F | Filter | | | | OZ | AM PM | | | | Lbs | | | | | | |
| 1 | 3 2 | 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | 5 | 6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| START | 🕒 | 🔒 | 📶 | g | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Heat | 88:88 | | | °F | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Filter | | | | OZ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AM PM | | | | Lbs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <tr> <td>🕒</td> <td>0</td> <td>OK 4</td> </tr> <tr> <td>Clock(3sec)</td> <td></td> <td>Lock(3sec)</td> </tr> <tr> <td>STOP / CLEAR</td> <td>+30sec</td> <td>START</td> </tr> <tr> <td>Eco</td> <td></td> <td></td> </tr> </table> | 🕒 | 0 | OK 4 | Clock(3sec) | | Lock(3sec) | STOP / CLEAR | +30sec | START | Eco | | | <table border="1"> <tr> <td>START</td> <td>🕒</td> <td>🔒</td> <td>📶</td> <td>g</td> </tr> <tr> <td>Heat</td> <td colspan="3">88:88</td> <td>°F</td> </tr> <tr> <td>Filter</td> <td colspan="3"></td> <td>OZ</td> </tr> <tr> <td>AM PM</td> <td colspan="3"></td> <td>Lbs</td> </tr> </table> | START | 🕒 | 🔒 | 📶 | g | Heat | 88:88 | | | °F | Filter | | | | OZ | AM PM | | | | Lbs |
| 🕒 | 0 | OK 4 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Clock(3sec) | | Lock(3sec) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| STOP / CLEAR | +30sec | START | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Eco | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| START | 🕒 | 🔒 | 📶 | g | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Heat | 88:88 | | | °F | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Filter | | | | OZ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AM PM | | | | Lbs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <tr> <td>1</td> <td>2</td> <td>3 5</td> </tr> <tr> <td>4</td> <td>5</td> <td>6</td> </tr> </table> | 1 | 2 | 3 5 | 4 | 5 | 6 | <table border="1"> <tr> <td>START</td> <td>🕒</td> <td>🔒</td> <td>📶</td> <td>g</td> </tr> <tr> <td>Heat</td> <td colspan="3">88:88</td> <td>°F</td> </tr> <tr> <td>Filter</td> <td colspan="3"></td> <td>OZ</td> </tr> <tr> <td>AM PM</td> <td colspan="3"></td> <td>Lbs</td> </tr> </table> | START | 🕒 | 🔒 | 📶 | g | Heat | 88:88 | | | °F | Filter | | | | OZ | AM PM | | | | Lbs | | | | | | |
| 1 | 2 | 3 5 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | 5 | 6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| START | 🕒 | 🔒 | 📶 | g | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Heat | 88:88 | | | °F | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Filter | | | | OZ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AM PM | | | | Lbs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <tr> <td>🕒</td> <td>0</td> <td>OK 6</td> </tr> <tr> <td>Clock(3sec)</td> <td></td> <td>Lock(3sec)</td> </tr> <tr> <td>STOP / CLEAR</td> <td>+30sec</td> <td>START</td> </tr> <tr> <td>Eco</td> <td></td> <td></td> </tr> </table> | 🕒 | 0 | OK 6 | Clock(3sec) | | Lock(3sec) | STOP / CLEAR | +30sec | START | Eco | | | <table border="1"> <tr> <td>START</td> <td>🕒</td> <td>🔒</td> <td>📶</td> <td>g</td> </tr> <tr> <td>Heat</td> <td colspan="3">88:88</td> <td>°F</td> </tr> <tr> <td>Filter</td> <td colspan="3"></td> <td>OZ</td> </tr> <tr> <td>AM PM</td> <td colspan="3"></td> <td>Lbs</td> </tr> </table> | START | 🕒 | 🔒 | 📶 | g | Heat | 88:88 | | | °F | Filter | | | | OZ | AM PM | | | | Lbs |
| 🕒 | 0 | OK 6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Clock(3sec) | | Lock(3sec) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| STOP / CLEAR | +30sec | START | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Eco | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| START | 🕒 | 🔒 | 📶 | g | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Heat | 88:88 | | | °F | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Filter | | | | OZ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AM PM | | | | Lbs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <tr> <td>1</td> <td>7 2</td> <td>3</td> </tr> <tr> <td>4</td> <td>5</td> <td>6</td> </tr> </table> | 1 | 7 2 | 3 | 4 | 5 | 6 | <table border="1"> <tr> <td>START</td> <td>🕒</td> <td>🔒</td> <td>📶</td> <td>g</td> </tr> <tr> <td>Heat</td> <td colspan="3">88:88</td> <td>°F</td> </tr> <tr> <td>Filter</td> <td colspan="3"></td> <td>OZ</td> </tr> <tr> <td>AM PM</td> <td colspan="3"></td> <td>Lbs</td> </tr> </table> | START | 🕒 | 🔒 | 📶 | g | Heat | 88:88 | | | °F | Filter | | | | OZ | AM PM | | | | Lbs | | | | | | |
| 1 | 7 2 | 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | 5 | 6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| START | 🕒 | 🔒 | 📶 | g | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Heat | 88:88 | | | °F | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Filter | | | | OZ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AM PM | | | | Lbs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <tr> <td>🕒</td> <td>0</td> <td>OK</td> </tr> <tr> <td>Clock(3sec)</td> <td></td> <td>Lock(3sec)</td> </tr> <tr> <td>STOP / CLEAR</td> <td>+30sec</td> <td>START 8</td> </tr> <tr> <td>Eco</td> <td></td> <td></td> </tr> </table> | 🕒 | 0 | OK | Clock(3sec) | | Lock(3sec) | STOP / CLEAR | +30sec | START 8 | Eco | | | <table border="1"> <tr> <td>START</td> <td>🕒</td> <td>🔒</td> <td>📶</td> <td>g</td> </tr> <tr> <td>Heat</td> <td colspan="3">88:88</td> <td>°F</td> </tr> <tr> <td>Filter</td> <td colspan="3"></td> <td>OZ</td> </tr> <tr> <td>AM PM</td> <td colspan="3"></td> <td>Lbs</td> </tr> </table> | START | 🕒 | 🔒 | 📶 | g | Heat | 88:88 | | | °F | Filter | | | | OZ | AM PM | | | | Lbs |
| 🕒 | 0 | OK | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Clock(3sec) | | Lock(3sec) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| STOP / CLEAR | +30sec | START 8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Eco | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| START | 🕒 | 🔒 | 📶 | g | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Heat | 88:88 | | | °F | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Filter | | | | OZ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AM PM | | | | Lbs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Time counting down

| Category | Cook No. | Food | Amount | | Directions | Accessory type |
|-----------|----------|---------------------|--------|---|--|----------------|
| 1. Reheat | 1 | Reheat Pizza Slices | 1 | 2 Slices (3-4 oz, 85-113 g/ each) | Put the pizza on a microwave-safe plate with wide end of slices towards the outside edge of the plate. Do not let slices overlap. Do not cover. Before serving, let stand 1-2 minutes. | G |
| | | | 2 | 4 Slices (3-4 oz, 85-113 g/ each) | | |
| | 2 | Reheat Dinner Plate | - | 1 serving | Use only pre-cooked, refrigerated food. Put meal on a ceramic plate. Cover plate with vented plastic wrap or wax paper. | G |
| | 3 | Reheat Casserole | 1 | 1 serving : 8 oz, 227 g | Use only refrigerated food. Pour into a deep ceramic plate or bowl. Cover with lid or vented plastic wrap. Stir well before serving. | G |
| | | | 2 | 2 servings : 16 oz, 454 g | | |
| | | | 3 | 3 servings : 24 oz, 680 g | | |
| | | | 4 | 4 servings : 32 oz, 907 g | | |
| | 4 | Reheat Pasta | 1 | 1 serving : 8 oz, 227 g | Use only refrigerated food. Pour into a deep ceramic plate or bowl. Cover with lid or vented plastic wrap. Stir well before serving. | G |
| | | | 2 | 2 servings : 16 oz, 454 g | | |
| | | | 3 | 3 servings : 24 oz, 680 g | | |
| | | | 4 | 4 servings : 32 oz, 907 g | | |
| | 5 | Reheat Soup, Cream | 1 | 1 serving : 8 oz, 227 g | Use only refrigerated food. Pour into a deep ceramic plate or bowl. Cover with lid or vented plastic wrap. Stir well before serving. | G |
| | | | 2 | 2 servings : 16 oz, 454 g | | |
| | | | 3 | 3 servings : 24 oz, 680 g | | |
| | | | 4 | 4 servings : 32 oz, 907 g | | |

Using your microwave oven

| Category | Cook No. | Food | Amount | | Directions | Accessory type |
|-----------|----------|-----------------------------|--------|------------------------------|--|----------------|
| 1. Reheat | 6 | Reheat Soup, broth | 1 | 1 serving : 8 oz, 227 g | Use only refrigerated food. Pour into a deep ceramic plate or bowl. Cover with lid or vented plastic wrap. Stir well before serving. | G |
| | | | 2 | 2 servings : 16 oz, 454 g | | |
| | | | 3 | 3 servings : 24 oz, 680 g | | |
| | | | 4 | 4 servings : 32 oz, 907 g | | |
| | 7 | Reheat Beverage | 1 | 1/2 cup | Use measuring cup : do not cover. Place the beverage in the oven. After heating, stir well. | G |
| | | | 2 | 1 cup | | |
| 3 | | | 2 cups | | | |
| 2. Snack | 1 | Frozen Potato Bites | 1 | 2 servings : 10 ea | Place frozen potato bites on greased ceramic enamel tray. Put tray on the center of glass tray. | F |
| | | | 2 | 4 servings : 20 ea | | |
| | 2 | Instant Macaroni and Cheese | 1 | 1 serving : 1/2 cup flake | Follow package preparation directions. | G |
| | | | 2 | 2 servings : 1 cup flake | | |
| | 3 | Frozen Waffle | 1 | 2 servings : 4 ea | Place waffles on low rack. Place the rack on ceramic enamel tray. Flip when the oven beeps, and re-start the oven. | B |
| | | | 2 | 3 servings : 6 ea | | |
| | 4 | Fish Sticks | 1 | 2 servings : 8 oz, 227 g | Place sticks on low rack. Place the rack on ceramic enamel tray. Flip when the oven beeps, and re-start the oven. | B |
| | | | 2 | 4 servings : 16 oz, 454 g | | |
| | 5 | Snack Pocket | 1 | 1 serving : 1 ea | Follow package preparation directions. Let stand for 1-2 minutes after heating | G |
| | | | 2 | 2 servings : 2 ea | | |
| | 6 | Quesadilla | 1 | 1 serving : 1 ea | Follow package preparation directions. Let stand for 1-2 minutes after heating | G |
| | | | 2 | 2 servings : 2 ea | | |
| | 7 | Hot dogs | 1 | 2 each | Pierce hot dogs, place on plate. When the oven beeps, add buns and re-start the oven | G |
| | | | 2 | 4 each | | |
| | 8 | Burrito | 1 | 1 each | Follow package preparation directions. Let stand for 1-2 minutes after heating | G |
| | | | 2 | 2 each | | |
| | 9 | Instant Mashed Potato | 1 | 2 servings : 1 cup flake | Follow package preparation directions. | G |
| | | | 2 | 4 servings : 2 cup flakes | | |

| Category | Cook No. | Food | Amount | Directions | Accessory type | |
|---------------------|----------|-------------|--------|----------------------------------|--|---|
| 3. Fresh Vegetables | 1 | Broccoli | 1 | 1 serving : 1/2 cup | Wash and clean broccoli and prepare florets. Put into a microwave-safe ceramic or glass bowl and add 1/2 to 2 oz (15-60 ml) of water (1/2 oz or 15 ml per serving). Put bowl in the center of glass tray. Cook covered. Stir after cooking | G |
| | | | 2 | 2 servings : 1 cup | | |
| | | | 3 | 3 servings : 1.5 cups | | |
| | | | 4 | 4 servings : 2 cups | | |
| | 2 | Carrots | 1 | 1 serving : 1/2 cup | Wash and clean carrots and cut into round slices evenly. Put into a microwave-safe ceramic or glass bowl and add 1/2 to 2 oz (15-60 ml) of water (1/2 oz or 15 ml per serving). Put bowl in the center of glass tray. Cook covered. Stir after cooking | G |
| | | | 2 | 2 servings : 1 cup | | |
| | | | 3 | 3 servings : 1.5 cups | | |
| | | | 4 | 4 servings : 2 cups | | |
| | 3 | Green Beans | 1 | 1 serving : 1/2 cup | Wash and clean green beans. Put into a microwave-safe ceramic or glass bowl and add 1/2 to 2 oz (15-60 ml) of water (1/2 oz or 15 ml per serving). Put bowl in the center of glass tray. Cook covered. Stir after cooking | G |
| | | | 2 | 2 servings : 1 cup | | |
| | | | 3 | 3 servings : 1.5 cups | | |
| | | | 4 | 4 servings : 2 cups | | |
| | 4 | Spinach | 1 | 1 serving : 1/2 cup | Wash and clean spinach. Put into a microwave-safe ceramic or glass bowl and add 1/2 to 2 oz (15-60 ml) of water (1/2 oz or 15 ml per serving). Put bowl in the center of glass tray. Cook covered. Stir after cooking | G |
| | | | 2 | 2 servings : 1 cup | | |
| | | | 3 | 3 servings : 1.5 cups | | |
| | | | 4 | 4 servings : 2 cups | | |
| | 5 | Squash | 1 | 2 servings : 1-2 lbs, 500-900 g | Slice squash in half. Put into a microwave-safe ceramic or glass dish cut side down and add 1/4 cup (60 ml) water. Put dish in the center of glass tray | G |
| | | | 2 | 4 servings : 2-3 lbs, 900-1400 g | | |

Using your microwave oven

| Category | Cook No. | Food | Amount | Directions | Accessory type | |
|----------------------|----------|-------------|--------|-----------------------|---|---|
| 4. Frozen Vegetables | 1 | Broccoli | 1 | 1 serving : 1/2 cup | Wash and clean frozen broccoli florets. Put into a microwave-safe ceramic or glass bowl and add 1/2 to 2 oz (15-60 ml) of water (1/2 oz or 15 ml per serving). Put bowl in the center of glass tray. Cook covered. Stir after cooking | G |
| | | | 2 | 2 servings : 1 cup | | |
| | | | 3 | 3 servings : 1.5 cups | | |
| | | | 4 | 4 servings : 2 cups | | |
| | 2 | Carrots | 1 | 1 serving : 1/2 cup | Wash and clean frozen sliced carrots. Put into a microwave-safe ceramic or glass bowl and add 1/2 to 2 oz (15-60 ml) of water (1/2 oz or 15 ml per serving). Put bowl in the center of glass tray. Cook covered. Stir after cooking | G |
| | | | 2 | 2 servings : 1 cup | | |
| | | | 3 | 3 servings : 1.5 cups | | |
| | | | 4 | 4 servings : 2 cups | | |
| | 3 | Corn | 1 | 1 serving : 1/2 cup | Wash and clean frozen corn. Put into a microwave-safe ceramic or glass bowl and add 1/2 to 2 oz (15-60 ml) of water (1/2 oz or 15 ml per serving). Put bowl in the center of glass tray. Cook covered. Stir after cooking | G |
| | | | 2 | 2 servings : 1 cup | | |
| | | | 3 | 3 servings : 1.5 cups | | |
| | | | 4 | 4 servings : 2 cups | | |
| | 4 | Green Beans | 1 | 1 serving : 1/2 cup | Wash and clean frozen green beans. Put into a microwave-safe ceramic or glass bowl and add 1/2 to 2 oz (15-60 ml) of water (1/2 oz or 15 ml per serving). Put bowl in the center of glass tray. Cook covered. Stir after cooking | G |
| | | | 2 | 2 servings : 1 cup | | |
| | | | 3 | 3 servings : 1.5 cups | | |
| | | | 4 | 4 servings : 2 cups | | |
| | 5 | Peas | 1 | 1 serving : 1/2 cup | Wash and clean frozen peas. Put into a microwave-safe ceramic or glass bowl and add 1/2 to 2 oz (15-60 ml) of water (1/2 oz or 15 ml per serving). Put bowl in the center of glass tray. Cook covered. Stir after cooking | G |
| | | | 2 | 2 servings : 1 cup | | |
| | | | 3 | 3 servings : 1.5 cups | | |
| | | | 4 | 4 servings : 2 cups | | |

| Category | Cook No. | Food | Amount | Directions | Accessory type | |
|----------|----------|----------------------|----------|--------------------------------|--|---|
| 5. Meal | 1 | Baked Potato | 1 | 2 ea (8-10 oz, 227-283 g/each) | Pierce each potato several times with a fork. Place on the turntable in a spoke-like fashion. After cooking, let the potatoes stand for 3-5 minutes. | G |
| | | | 2 | 4 ea (8-10 oz, 227-283 g/each) | | |
| | 2 | Sweet Potato | 1 | 2 ea (8-10 oz, 227-283 g/each) | Pierce each sweet potato several times with a fork. Place on the turntable in a spoke-like fashion. After cooking, let the potatoes stand for 3-5 minutes. | G |
| | | | 2 | 4 ea (8-10 oz, 227-283 g/each) | | |
| | 3 | Frozen Dinner | 1 | 8-10 oz, 227-283 g | Remove package from outer wrapping and follow package instructions for covering and standing. After cooking, let stand 1-3 minutes. | G |
| | | | 2 | 11-14 oz, 312-397 g | | |
| | | | 3 | 15-18 oz, 425-510 g | | |
| | 4 | Frozen Breakfast | 1 | 4-6 oz, 113-170 g | Remove package from outer wrapping and follow package instructions for covering and standing. After cooking, let stand 1-3 minutes. | G |
| | | | 2 | 7-8 oz, 198-227 g | | |
| | 5 | Oatmeal | 1 | 1 pack | Follow package directions for amount of water. Stir well before and after standing time. Let stand 3-5 minutes. | G |
| | | | 2 | 2 packs | | |
| | 6 | Brown Rice | 1 | 2 servings : 1 cup | Follow package directions for amount of water. Stir well before and after standing time. Let stand 3-5 minutes. | G |
| | | | 2 | 4 servings : 2 cups | | |
| | 7 | Whole Wheat Macaroni | 1 | 2 servings : 1 cup | Follow package directions for amount of water. Remove from the oven and let stand for 5 minutes. Drain hot water carefully. | G |
| | | | 2 | 4 servings : 2 cups | | |
| | 8 | Quinoa | 1 | 2 servings : 1 cup | Follow package directions for amount of water. Stir well as soon as oven beeps and push start button to continue process. | G |
| | | | 2 | 4 servings : 2 cups | | |
| | 9 | Bacon, Pre-Cooked | 1 | 2 Slices | Place paper towels on plate and arrange bacon on towels. Do not overlap. | G |
| 2 | | | 4 Slices | | | |
| 3 | | | 6 Slices | | | |

Using your microwave oven

| Category | Cook No. | Food | Amount | | Directions | Accessory type |
|--------------------|-----------------|------------------------------------|-------------------|---|--|----------------|
| 6. Pizza/ Bread | 1 | Frozen pizza, individual 6 inch | - | 6 inches | Place pizza on rack. Place the low rack on ceramic enamel tray. | B |
| | 2 | Frozen Pizza, regular, 12 inch | - | 12 inches | Place pizza on rack. Place the low rack on ceramic enamel tray. | B |
| | 3 | Frozen individual, deep dish pizza | - | 6 inches | Place pizza on rack. Place the low rack on ceramic enamel tray. | B |
| | 4 | Biscuits, refrigerated | - | 10 ea | Place refrigerated biscuits on greased ceramic enamel tray. Put tray on the low rack. | A |
| | 5 | Box cake mix | - | 1/2 package | Pour batter into an 8inch round cake pan. In the oven, place the filled pan with batter on the low rack | E |
| | 6 | Brownie mix | - | 1 package | Pour batter into an 8x8 inch pan, and then place the pan on the low rack | E |
| | 7 | Frozen Cookie | - | 5 ea | Place frozen cookies on greased ceramic enamel tray. Put tray on the low rack. | A |
| | 8 | Frozen French Toast | 1 | 2 servings : 2 toasts | Place toast on high rack. Place the rack on ceramic enamel tray. Flip when the oven beeps, and re-start the oven | D |
| | | | 2 | 4 servings : 4 toasts | | |
| 9 | Instant noodles | 1 | 1 serving : 1 ea | Put noodles in microwave safe bowl and pour 2 (for 1 serving) or 4 (for 2 servings) cups water. After cooking, drain water carefully and add seasoning. | G | |
| | | 2 | 2 servings : 2 ea | | | |

| Category | Cook No. | Food | Amount | | Directions | Accessory type |
|--------------------|-------------------|---------------------|--------------|---|--|----------------|
| 7. Melt/ Soften | 1 | Melt Butter | 1 | 1 stick : 4 oz, 113 g | Remove wrapping and cut butter in half vertically. Place butter in dish, cover with wax paper. Stir well after finishing and let stand 1-2 minutes. | G |
| | | | 2 | 2 sticks : 8 oz, 227 g | | |
| | 2 | Soften Butter | 1 | 1 stick : 4 oz, 113 g | Remove wrapping and cut butter in half vertically. Place butter in dish, cover with wax paper. Stir well after finishing and let stand 1-2 minutes. | G |
| | | | 2 | 2 sticks : 8 oz, 227 g | | |
| | 3 | Melt Chocolate | - | 1 cup | Place chocolate chips in a microwave safe dish. Stir well at half time when the oven beeps, and re-start the oven. Unless stirred, the chocolate keeps its shape even when heating time is over. | G |
| | 4 | Soften Ice Cream | 1 | 1 pint | Remove top of carton. Place carton in center of microwave oven. Let stand 2 minutes after microwaving | G |
| | | | 2 | 4 pints : Half Gallon | | |
| | 5 | Soften Cream Cheese | - | 1 package : 8 oz, 227 g | Unwrap cream cheese and place on microwave-safe dish. Let stand 1-2 minutes. | G |
| | 6 | Soften Frozen Juice | - | 1 package : 11.5 oz, 326 g | Do not place metal juice cans in the microwave. Remove the plastic lid and place in center of microwave. Stir well afterwards. | G |
| | 7 | Melt Cheese | - | 1 cup | Place the cheese in a microwave safe bowl and cover with wax paper. Stir well afterwards. | G |
| 8 | Melt Caramel | - | 11 oz, 312 g | Place caramels in a microwave safe dish. Stir well as soon as finished. | G | |
| 9 | Melt Marshmallows | - | 10 oz, 283 g | Place marshmallows in a large microwave safe dish. Stir well as soon as finished. | G | |

Using your microwave oven

| Category | Cook No. | Food | Amount | Directions | Accessory type | |
|------------------------|----------------|----------------------|---|--|--|---|
| 8. Poultry/ Seafood | 1 | Chicken Breast | 1 | 2 ea (6 oz, 170 g/each) | Place chicken breast on high rack. Place the rack on ceramic enamel tray. When the oven beeps, flip chicken and re-start the oven. | D |
| | | | 2 | 4 ea (6 oz, 170 g/each) | | |
| | 2 | Frozen Chicken wings | 1 | 2 servings : 10 ea | Place chicken wings on low rack. Place the rack on ceramic enamel tray. | B |
| | | | 2 | 4 servings : 20 ea | | |
| | 3 | Turkey Breast | - | 4 pieces (3 oz, 85 g/each) | Place turkey breasts on high rack. Place the rack on ceramic enamel tray. When the oven beeps, flip turkey breasts and re-start the oven. | D |
| | 4 | Ground Turkey | - | 4 servings (1 lb, 454 g) | Place ground turkey in microwave safe 2 quart casserole glass dish then place on glass tray. When the oven beeps, stir and restart the oven. | G |
| | 5 | Whole Chicken | - | 2.5-3 lbs, 1100-1360 g | Fold chicken wings under the chicken. Place chicken on low rack. Place the rack on ceramic enamel tray. Brush chicken with melted butter. | B |
| | 6 | White Fish Fillet | 1 | 1 serving : 2 pieces (4 oz, 113 g) | Spray high rack with non stick spray. Place white fillets(cod, pollack etc.) on the rack. Place the rack on ceramic enamel tray. | D |
| | | | 2 | 2 servings : 4 pieces (8 oz, 227 g) | | |
| 7 | Salmon Fillet | 1 | 1 serving : 1 piece (4 oz, 113 g) | Spray high rack with non stick spray. Place salmon fillets on the rack. Place the rack on ceramic enamel tray. | D | |
| | | 2 | 2 servings : 2 pieces (8 oz, 227 g) | | | |
| 8 | Tilapia Fillet | 1 | 1 serving : 2 pieces (4 oz, 113 g) | Spray high rack with non stick spray. Place tilapia fillets on the rack. Place the rack on ceramic enamel tray. | D | |
| | | 2 | 2 servings : 4 pieces (8 oz, 227 g) | | | |
| 9 | Shrimp, Fresh | 1 | 2 servings : 8 oz, 227 g | Place shrimp on ceramic tray. Place the tray on the high rack. When the oven beeps, flip shrimp and re-start the oven. | C | |
| | | 2 | 4 servings : 16 oz, 454 g | | | |

| Category | Cook No. | Food | Amount | | Directions | Accessory type |
|----------|----------|------------------------|--------|--|---|----------------|
| 9. Meat | 1 | Roast Beef | 1 | 2 lbs, 907 g | Place beef on low rack. Place the rack on ceramic enamel tray. When the oven beeps, flip beef and re-start the oven. | B |
| | | | 2 | 3 lbs, 1361 g | | |
| | 2 | Ground Beef | 1 | 2 servings : 0.5 lb, 227 g | Place beef in microwave safe 2 quart casserole glass dish then place casserole dish on glass tray. When the oven beeps, stir and restart the oven | G |
| | | | 2 | 4 servings : 1 lb, 454 g | | |
| | 3 | Bone in Pork Chops | 1 | 1 serving : 6-8 oz, 170-227 g | Place pork chops on high rack. Place the rack on ceramic enamel tray. When the oven beeps, flip pork chops and re-start the oven. | D |
| | | | 2 | 2 servings : 12-16 oz, 340-454 g | | |
| | 4 | Boneless Pork Chops | 1 | 2 servings : 2 ea, 8-10 oz, 226-282 g | Place pork chops on high rack. Place the rack on ceramic enamel tray. When the oven beeps, flip pork chops and re-start the oven. | D |
| | | | 2 | 4 servings : 4 ea, 16-20 oz, 454-546 g | | |
| | 5 | Pork Tenderloin | 1 | 1 lb, 454 g | Place pork on low rack. Place the rack containing the pork on the ceramic enamel tray. When the oven beeps, flip pork and re-start the oven | B |
| | | | 2 | 2 lbs, 907 g | | |
| | 6 | Fresh Sausage Links | 1 | 2 servings : 6 links | Place links on ceramic enamel tray. Place the tray on the high rack. When the oven beeps, flip sausages and re-start the oven. | C |
| | | | 2 | 4 servings : 12 links | | |
| | 7 | Frozen Sausage Links | 1 | 2 servings : 6 links | Place links on ceramic enamel tray. Place the tray on the high rack. | C |
| | | | 2 | 4 servings : 12 links | | |
| | 8 | Frozen Sausage Patties | 1 | 2 servings : 4 patties | Place patties on ceramic enamel tray. Place the tray on the high rack. | C |
| | | | 2 | 4 servings : 8 patties | | |
| | 9 | Fresh Sausage Patties | 1 | 2 servings : 2 patties | Place patties on ceramic enamel tray. Place the tray on the high rack. When the oven beeps, flip sausages and re-start the oven. | C |
| | | | 2 | 4 servings : 4 patties | | |


Using your microwave oven

Defrost

Remove all packaging material before defrosting. Place meat, poultry, fish, bread, etc. on a turntable (glass tray).

General defrosting instructions:

Using your microwave oven

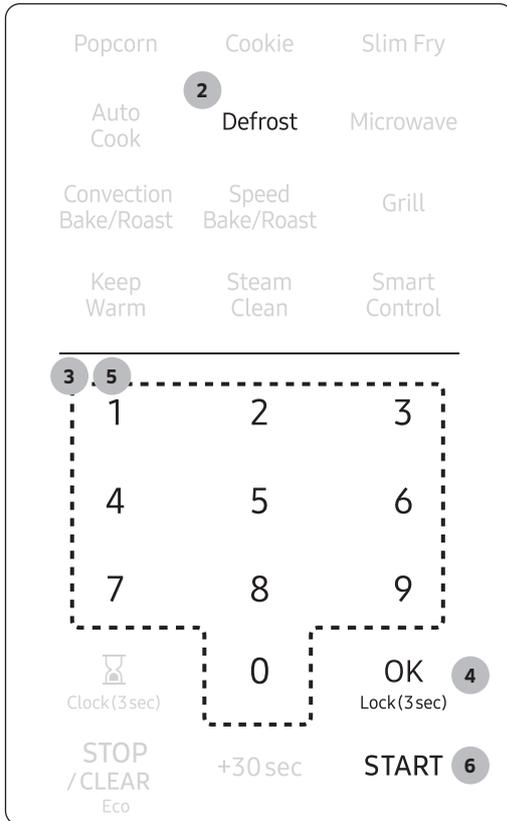

1. Place the food on the turntable.
2. Touch the **Defrost** button.
3. To select the number that corresponds to the food you want to defrost, touch the **number pad**. (Refer to the table on the next page.)
4. Touch the **OK** button.
5. Enter the weight of the food by touching the **number pad**. (Refer to the table on the next page to see the weights you can enter.)
6. Touch the **START** button. The microwave oven will automatically operate for the pre-programmed time.

For specific instructions for different kinds of food, see the table below.

| Cook No. | Food | Amount | Time (Min) | Directions |
|----------|---------|---------------------------|------------|---|
| 1 | Meat | 0.1-6.0 lbs 100-2700 g | 10-30 | Shield the edges with aluminium foil. Flip the meat when the oven beeps. This program is suitable for lamb, pork, steaks, chops, and ground meat. For ground meat, place the meat directly on the turntable tray on wax paper. Do not use an extra tray. Let stand, covered with foil, for 5-10 minutes. |
| 2 | Poultry | 0.1-6.0 lbs 100-2700 g | 10-30 | Shield the leg and wing tips with aluminium foil. Flip the poultry when the oven beeps. This program is suitable for whole chicken as well as for chicken portions. |
| 3 | Fish | 0.1-6.0 lbs 100-2700 g | 10-30 | Shield the tail of a whole fish with aluminium foil. Flip the fish when the oven beeps. This program is suitable for whole fish as well as for fish fillets. |
| 4 | Bread | 0.1-2.0 lbs 100-900 g | 5-10 | Put bread on a paper towel or place cake on a ceramic plate and if possible, flip as soon as the oven beeps. (The oven keeps operating and stops only when you open the door.) This program is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. |


 **NOTE**

Check food when the oven signals. After the final stage, small sections may still be icy. Let them stand to continue thawing. Food is not fully defrosted until all ice crystals have thawed. Shielding roasts and steaks with small pieces of foil prevents the edges from cooking before the center of the food has defrosted. Use narrow, flat, smooth strips of aluminum foil to cover the edges and thinner sections of the food.

Using your microwave oven

Microwave

Microwave mode can operate with One-stage cooking mode and Multi-stage cooking mode (maximum of 2 stages). You can also change power level (10-100) if needed.

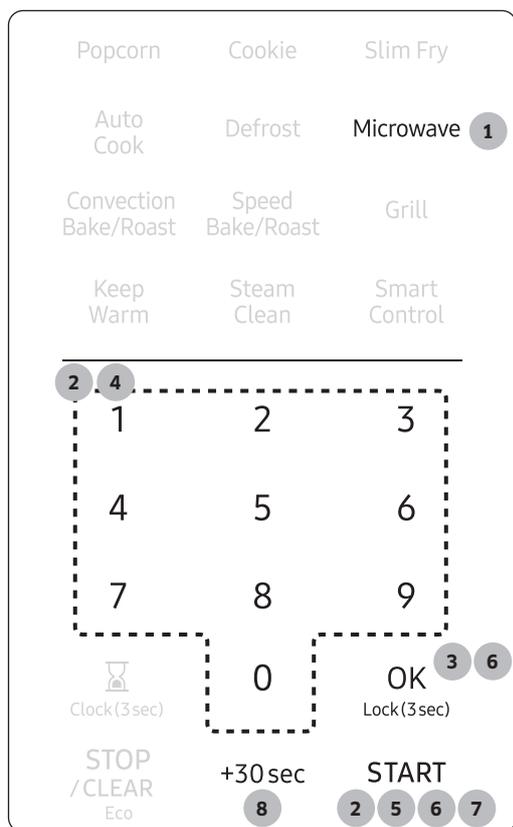


1. Touch the **Microwave** button.
(You can skip this step and start at the next step.)
2. Use the **number pad** to set a cooking time. You can enter a time from one second to 99 minutes and 99 seconds. (For example, to set a cooking time of 20 minutes, enter **2, 0, 0, 0**.) If you do not need to set the power level, just touch the **START** button. The microwave will automatically operate at the High power level. If you want to change the power level, go to Step 3.
3. If you want to set the power level to a level other than High, touch the **OK** button.
4. Touch the **number pad** that corresponds to the power level (Refer to the table below).
5. Touch the **START** button to operate One-stage cooking mode. If you want to use Multi-stage cooking, go to step 6.

6. To use Multi-stage cooking mode, touch **OK**, enter cooking time for 2nd stage and then touch **START** if you do not need to set 2nd stage power level.
7. If you want to set the power level of 2nd stage, follow steps 3 and 4. Touch the **START** button to start cooking.
8. If you want to add 30 seconds of cooking time, touch **+30sec** button. You can adjust the cooking time while the microwave oven is operating.

| No. | Power Level | Description | No. | Power Level | Description |
|-----|-------------|-------------|-----|-------------|-------------|
| 1 | 10 | Warm | 6 | 60 | Simmer |
| 2 | 20 | Low | 7 | 70 | Medium high |
| 3 | 30 | Defrost | 8 | 80 | Reheat |
| 4 | 40 | Medium low | 9 | 90 | Sauté |
| 5 | 50 | Medium | 10 | 100 | High |

Convection Bake/Roast

The Convection Bake/Roast mode uses dry heat to cook and brown food. A high speed fan circulates hot air inside the oven to heat food quickly and evenly. When you cook using convection, you would generally use the low rack.

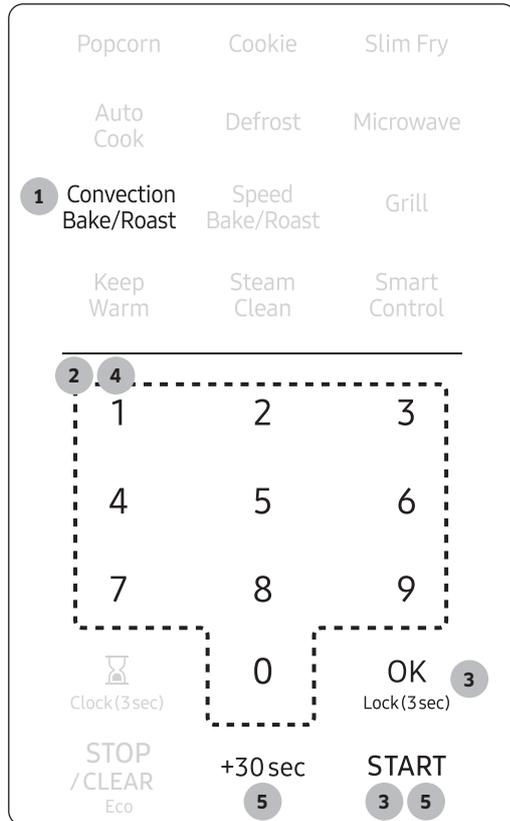

1. Touch the **Convection Bake/Roast** button once for **BAKE**. Touch the **Convection Bake/Roast** button twice for **ROAST**.
2. To set the temperature, touch the **number pad**. (Refer to the temperature table below.)

| Bake | Roast |
|--------|--------|
| 100 °F | - |
| 200 °F | 200 °F |
| 225 °F | 225 °F |
| 250 °F | 250 °F |
| 275 °F | 275 °F |
| 300 °F | 300 °F |
| 325 °F | 325 °F |
| 350 °F | 350 °F |
| 375 °F | 375 °F |
| 400 °F | 400 °F |
| 425 °F | 425 °F |

3. Touch the **OK** button. If you want to preheat the oven, touch the **START** button without setting cook time.

NOTE

If there is no action within 60 minutes after preheating the oven, the oven will turn off automatically.

4. Use the **number pad** to set a cooking time.
5. Touch the **START** button to begin convection cooking. If you want to add 30 seconds of cooking time, touch **+30sec** button. You can adjust the cooking time while the microwave oven is operating.

Using your microwave oven


NOTE

- If the oven reaches the temperature setting, 'Beep' sound will occur in both preheat and cooking mode.
- To maintain a constant temperature, keep the oven door closed while the food is cooking. Open as infrequently as possible.
- While operating the oven, if you want to change the temperature setting, touch the **OK** button, touch the **number pad** and then touch the **OK** button.

Speed Bake/Roast

The combination cooking feature allows you to cycle automatically between microwave and Bake/Roast cooking. The food will be moist as well as crisp and brown. This type of cooking is ideal for large food that requires long cooking times when prepared in a conventional oven (such as large roasts, whole chickens, etc.). When combination cooking, use the low rack to allow air to circulate completely around the dish.

To use combination cooking:

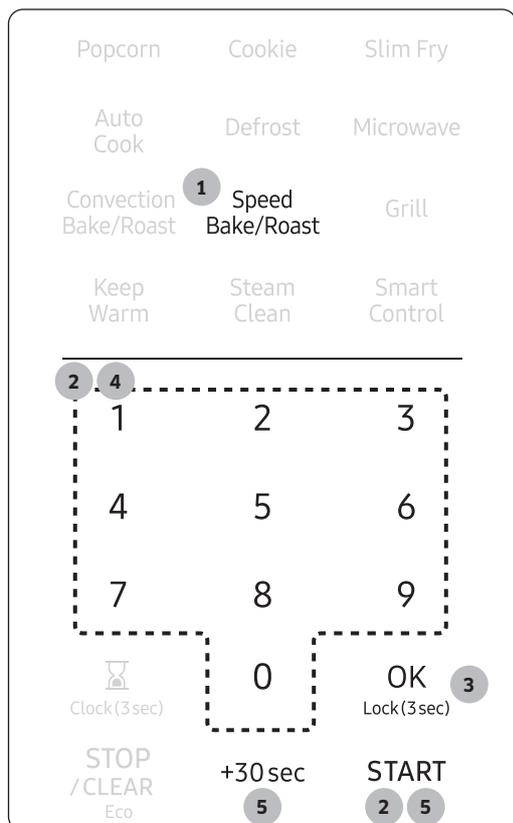

1. Touch the **Speed Bake/Roast** button once for SPEED BAKE.
Touch the **Speed Bake/Roast** button twice for SPEED ROAST.
2. Use the **number pad** to set a cooking time. If you do not need to set the power level, just touch the **START** button. The Microwave will operate at a pre-programmed power level. If you want to adjust the power level, go to Step 3.
3. Touch the **OK** button.
4. To set the power level, touch the **number pad** refer to the table below. (default : 2)

| No. | 1 | 2 | 3 | 4 |
|-------------|----|----|----|----|
| Power level | 10 | 30 | 50 | 70 |

5. Touch the **START** button. If you want to add 30 seconds of cooking time, touch **+30sec** button. You can adjust the cooking time while the microwave oven is operating.

NOTE

- This mode combines microwave energy with hot air. This combination reduces the cooking time while giving the food a brown and crispy surface.
- The vent fan operates at low speed while the oven operates in Speed Bake/Roast mode.

Cookware for cooking with speed bake/roast

Use only cookware that is specially manufactured for microwave ovens. Do not use metal cookware with this combination mode. Do not use any type of plastic cookware, as it can melt.

Food suitable for speed bake/roast

Other food suitable for this combination mode cooking include all kinds of previously cooked food which needs reheating and browning (e.g. baked pasta), as well as food which requires a short cooking time to brown the top of the food. This mode can also be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, which you turn over half way through cooking). Other food suitable for this cooking mode include a variety of meats and poultry as well as frozen snacks and pizza.

Using your microwave oven

Speed Bake/Roast Cooking Guide

Use the cooking mode, power levels, and times in this table as guides for speed cooking.

 **NOTE**

Always use oven gloves when taking the food out of the microwave oven.


Using your microwave oven

| Type | Food | Amount | Mode | Time (Min) | Directions |
|-------|--------------------------|-------------------------|---|--|--|
| Pizza | Frozen Pizza, Individual | 6 inch | Speed Bake 30 % | 12-16 | Place the pizza on the low rack, then place the rack on the ceramic enamel tray. |
| | Frozen Pizza, Regular | 12 inch | Speed Bake 30 % | 15-21 | Place the pizza on the low rack, then place the rack on the ceramic enamel tray. |
| Meat | Beef Roast (Medium) | 2-3 lbs 900-1400 g | 1 st Speed Roast 30 % 2 nd Convection Roast 325 °F | 1 st 25-40 2 nd 25-40 | Brush beef/lamb with oil and spice it with pepper, salt and paprika. Place the roast on the low rack, then place the rack on the ceramic enamel tray. After cooking, wrap in aluminium foil and let it stand for 10-15 minutes. |
| | Steaks | 0.5-1.0 lb 200-500 g | 1 st Speed Roast 30 % 2 nd Speed Roast 10 % | 1 st 7-13 2 nd 10-15 | Place the steak on the high rack, then place the rack on the ceramic enamel tray. After cooking, Let the steak rest for 5 minutes before slicing. |
| | Pork Tenderloin | 0.5-1.0 lb 200-500 g | 1 st Speed Roast 30 % 2 nd Speed Roast 10 % | 1 st 12-18 2 nd 10-16 | Place the pork on the low rack, then place the rack on the ceramic enamel tray. After cooking, Let the steak rest for 5 minutes before slicing. |
| | Roast Chicken | 3-4 lbs 1400-1800 g | 1 st Speed Roast 50 % 2 nd Speed Roast 30 % | 1 st 25-40 2 nd 15-30 | Fold the wings under the chicken. Place the chicken on the low rack, then place the rack on the ceramic enamel tray. Brush the chicken with melted butter/oil and seasonings. Put chicken breast side down for the 1st, then breast side up for the 2nd. |
| | Bone-in Chicken Pieces | 2-4 pieces | 1 st Speed Roast 50 % 2 nd Grill | 1 st 12-18 2 nd 10-20 | Place the chicken pieces on the high rack, then place the rack on the ceramic enamel tray. Put chicken skin side down for the 1st, then skin side up for the 2nd. |

| Type | Food | Amount | Mode | Time (Min) | Directions |
|---------------|-----------------|----------------------|------------------|------------|---|
| Snack, Frozen | Chicken Nuggets | 5-10 ea | Speed Roast 30 % | 5-10 | Place the chicken nuggets on the ceramic enamel tray, then place the tray on the high rack. |
| | Chicken Wings | 10-20 ea | Speed Roast 50 % | 12-17 | Place the chicken wings on the low rack, then place the rack on the ceramic enamel tray. |
| | French Fries | 6-12 oz 170-340 g | Speed Bake 10 % | 10-15 | Place the french fries on the ceramic enamel tray, then place the tray on the high rack. |

Grill

Grill mode adds texture and taste to your food. When grilling, use the low or high rack accessory. Use the low rack when the height of food is such that the food would touch the upper heater if placed on the high rack.

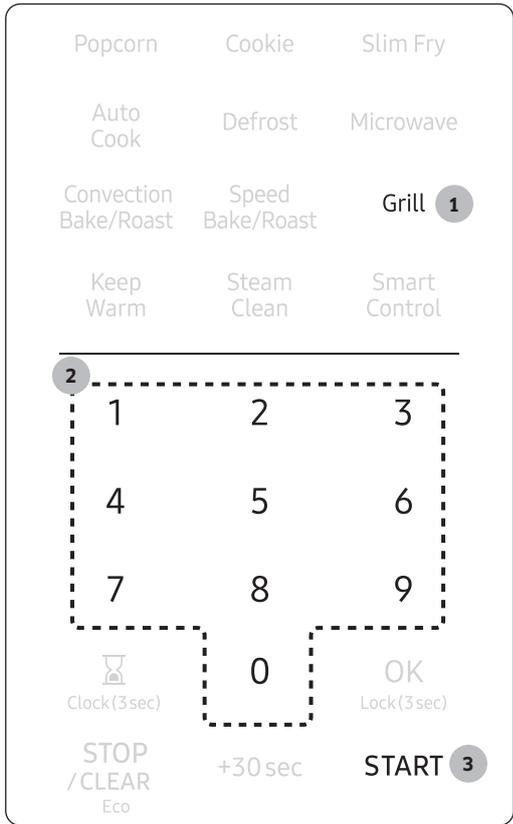


1. Touch the **Grill** button.
2. Use the **number pad** to set a cooking time.
3. Touch the **START** button to begin Grilling.

NOTE
The vent fan operates at low speed while the oven operates in Grill mode.

Using your microwave oven

Keep Warm

You can keep cooked food warm in your microwave oven for up to 99 minutes and 99 seconds.

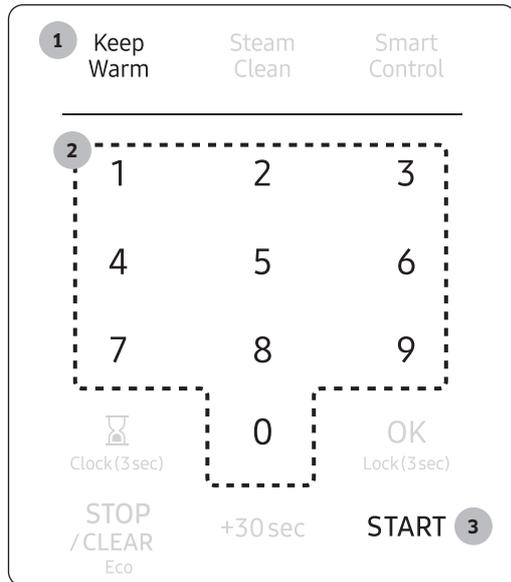

1. Touch the **Keep Warm** button.
2. Enter the time by touching the **number pad**. If you don't set the cook time, your oven will maintain the Keep Warm function for 99 minutes.
3. Touch the **START** button.

Using your microwave oven

NOTE


- **Keep Warm** operates for up to 99 minutes and 99 seconds.
- **Food that is cooked covered** should also be covered during **Keep Warm**.
- Pastry items (pies, turnovers, etc.) should be uncovered during **Keep Warm**.
- Complete meals kept warm on a dinner plate can be covered during **Keep Warm**.

Below are the amounts of food we recommend by Food Type when you use Keep Warm function.

| Food Type | Recommended Quantity |
|-----------|----------------------|
| Liquid | 1-2 cups |
| Dry | 5-10 oz. |

Steam Clean

The steam provided by the steam clean system will soak the cavity surface. After using the steam clean function, you can easily clean the cavity of the oven.

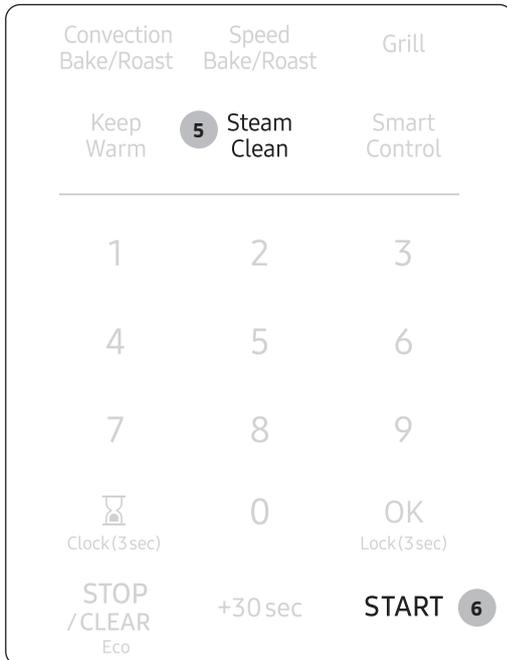

1. Open the door.
2. Carefully pour about 2fl.oz. of water into a wide plate.
3. Place the plate on the tray of the microwave oven.
4. Close the door.
5. Touch the **Steam Clean** button.
6. Touch the **START** button. Steam clean will operate for 6 minutes and 30 seconds. The length of time cannot be modified.
7. When the cleaning time is over, the oven will beep. Open the door.
8. Clean the cavity of the oven with a dry dishtowel. Remove the turntable and wipe under the rack with a piece of paper towel.

NOTE

- Use this function only after the oven has completely cooled.
- Use normal tap water only. Do not use distilled water.

CAUTION

The water in the oven will be very hot due to the steam cleaning function. Wipe up carefully.

Cookware guide

To cook food in your microwave oven, microwaves must be able to penetrate the food without being reflected or absorbed by the dish.

It is important to choose the correct cookware, therefore look for cookware that is marked microwave-safe.

The following table lists various types of cookware and indicates if and how they should be used in a microwave oven.

Recommended cooking utensils

- **Glass and glass-ceramic bowls and dishes** – Use for heating or cooking.
- **Microwavable plastic wrap** – Use to cover. Leave a small opening for steam to escape and avoid placing it directly on the food.
- **Wax paper** – Use as a cover to prevent spattering.
- **Paper towels and napkins** – Use for short-term heating and covering. They absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and can catch fire.
- **Paper plates and cups** – Use for short-term heating at low temperatures. Do not use recycled paper, which may contain metal and can catch fire.
- **Thermometers** – Use only those labeled “Microwave Safe” and follow all directions. Check the food in several places. Conventional thermometers may be used once the food has been removed from the oven.

Limited use items


- **Aluminum foil** – Use narrow strips of foil to prevent overcooking of exposed areas. Using too much foil can damage your oven, so be careful.
- **Ceramic, porcelain, and stoneware** – Use these if they are labeled “Microwave Safe”. If they are not labeled, test them to make sure they can be used safely. Never use dishes with metallic trim.
- **Plastic** – Use only if labeled “Microwave Safe”. Other plastics can melt.
- **Straw, wicker, and wood** – Use only for short-term heating, as they are flammable.

Not recommended

- **Glass jars and bottles** – Regular glass is too thin to be used in a microwave and can shatter.
- **Paper bags** – These are a fire hazard, except for popcorn bags that are designed for microwave use.
- **Styrofoam plates and cups** – These can melt and leave an unhealthy residue on food.
- **Plastic storage and food containers** – Containers such as margarine tubs can melt in the microwave.

Testing utensils

If you are not sure whether a dish is microwave-safe or not, you can perform this test:

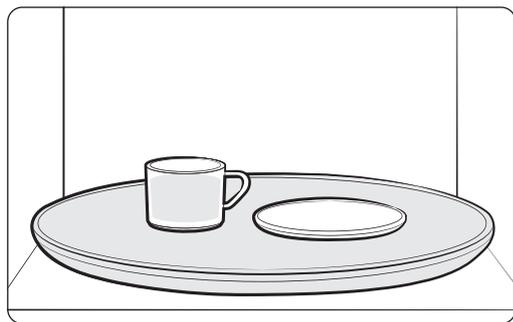

1. Fill a 1 cup glass measuring cup with water and put it inside your oven, next to the dish you want to test.
2. Set the microwave to 1 minute using the **number pad**, and then touch the **START** button. This will heat the glass and dish for one minute at High power.

When the microwave stops, the water should be warm and the dish you are testing should be cool.

If the dish is warm, then it is absorbing microwave energy and is not acceptable for use in the microwave.

Cooking guide

Microwave energy actually penetrates food and is attracted to and absorbed by the water, fat, and sugar molecules in the food. The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

Cooking techniques

Stirring

Stir foods such as casseroles and vegetables while cooking to distribute heat evenly. Food at the outside of the dish absorbs more energy and heats more quickly, so stir from the outside to the center. The oven will turn off when you open the door to stir your food.

Arrangement

Arrange unevenly shaped foods, such as chicken pieces or chops, with the thicker, meatier parts toward the outside of the turntable where they receive more microwave energy. To prevent overcooking, place thin or delicate parts toward the center of the turntable.

Shielding

Shield food with narrow strips of aluminum foil to prevent overcooking. Areas that need shielding include poultry wing-tips, the ends of poultry legs, and the corners of square baking dishes. Use only small amounts of aluminum foil. Larger amounts can damage your oven.

Turning

Turn foods over midway through cooking to expose all parts to microwave energy. This is especially important with large items such as roasts.

Standing

Food cooked in the microwave builds up internal heat and continues to cook for a few minutes after the oven stops. Let food stand to complete cooking, especially food such as roasts and whole vegetables. Roasts need this time to complete cooking in the center without overcooking the outer areas. All liquids, such as soup or hot chocolate, should be shaken or stirred when cooking is complete. Let liquids stand a moment before serving. When heating baby food, stir well and test the temperature before serving.

Adding Moisture

Microwave energy is attracted to water molecules. Food that is uneven in moisture content should be covered or allowed to stand so that the heat disperses evenly. Add a small amount of water to dry food to help it cook.

Venting

After covering a dish with plastic wrap, vent the plastic wrap by turning back one corner so excess steam can escape.

Recommended cooking utensils

- Dense foods, such as potatoes, take longer to heat than lighter foods. Food with a delicate texture should be heated at a low power level to prevent it from becoming tough.
- Altitude and the type of cookware you are using can affect cooking time. When trying a new recipe, use the minimum cooking time and check the food occasionally to prevent overcooking.
- Food with a non-porous skin such as potatoes or hot dogs should be pierced to prevent bursting.
- Frying with oil or fat is not recommended. Fat and oil can suddenly boil over and cause severe burns.
- Some ingredients heat faster than others. For example, the jelly inside a jelly doughnut will be hotter than the dough. Keep this in mind to avoid burns.
- Home canning in the microwave oven is not recommended because all harmful bacteria may not be destroyed by the microwave heating process.
- Although microwaves do not heat the cookware, the heat from the food is often transferred to the cookware. Always use pot holders when removing food from the microwave and instruct children to do the same.
- Making candy in the microwave is not recommended as candy can heat to very high temperatures. Keep this in mind to avoid injury.

Guide for cooking eggs in your microwave

- Never cook eggs in the shell and never warm hard-cooked eggs in the shell. They can explode.
- Always pierce whole eggs to keep them from bursting.
- Cook eggs just until set. They become tough if overcooked.

Cooking guide

Guide for cooking vegetables in your microwave

- Vegetables should be washed just before cooking. Often, no extra water is needed. If you are cooking dense vegetables such as cubed potatoes, carrots, or green beans, add about $\frac{1}{4}$ cup water.
- Small vegetables (sliced carrots, peas, lima beans, etc.) will cook faster than larger ones.
- Whole vegetables, such as potatoes, acorn squash, or corn on the cob, should be arranged in a circle on the turntable before cooking. They will cook more evenly if turned over after half the cooking time.
- Always place vegetables like asparagus and broccoli with the stem ends pointing towards the edge of the dish and the tips toward the center.
- When cooking cut vegetables, always cover the dish with a lid or vented microwavable plastic wrap.
- Whole, unpeeled vegetables such as potatoes, squash, eggplant, etc., should have their skin pricked in several spots before cooking to prevent them from bursting.
- For more even cooking, stir or rearrange whole vegetables halfway through the cooking time.
- Generally, the denser the food, the longer the standing time. (Standing time refers to the time necessary for dense, large foods and vegetables to finish cooking after they come out of the oven.) A baked potato can stand on the counter for five minutes before cooking is completed, while a dish of peas can be served immediately.

Cleaning and maintaining your microwave oven

Keeping your microwave oven clean improves its performance, wards off unnecessary repairs, and lengthens its life.

Cleaning the exterior

It's best to clean spills on the outside of your microwave oven as they occur. Use a soft cloth and warm, soapy water. Rinse and dry.

CAUTION

Do not get water into the vents. Never use abrasive products or chemical solvents such as ammonia or alcohol as they can damage the appearance of your microwave.

WARNING

Unplug the microwave before cleaning.

Cleaning under your microwave oven

Regularly clean grease and dust from the bottom of your microwave using a solution of warm water and soap.

Cleaning the control panel

Wipe with a damp cloth and dry thoroughly. Do not use cleaning sprays, large amounts of soap and water, abrasives, or sharp objects on the panel as it is easily damaged.

Cleaning the door and door seals

Always ensure that the door seals are clean and that the door closes properly. Take particular care when cleaning the door seals to ensure that no particles accumulate and prevent the door from closing correctly. Wash the glass door with very mild soap and water. Be sure to use a soft cloth to avoid scratching.

NOTE

If steam accumulates inside or outside the oven door, wipe with a soft cloth. Steam can accumulate when you operate the oven when humidity is high and in no way indicates microwave leakage.

Cleaning and maintaining your microwave oven

Cleaning the interior

⚠ CAUTION

To avoid injury, ensure that the microwave oven has cooled down before cleaning it.

⚠ CAUTION

Remove the glass tray from the oven when cleaning the oven or tray. To prevent the tray from breaking, handle it with care and do not put it in water immediately after cooking. Wash the tray carefully in warm sudsy water or in the dishwasher.

See the **Steam Clean** section on page **57**.

Cleaning the turntable and roller rings

Clean the roller rings periodically and wash the turntable as required. The turntable can be washed safely in your dishwasher.

Storing and repairing your microwave oven

If you need to store your microwave oven for a short or extended period of time, choose a dust-free, dry location. Dust and dampness may adversely affect the functionality of the microwave parts.

⚠ WARNING

Do not repair, replace, or service any part of your microwave oven yourself. Allow only a qualified service technician to perform repairs. If the oven is faulty and needs servicing, or you are in doubt about its condition, unplug the oven from the power outlet and contact your nearest service center.


Do not use the oven if the microwave oven is damaged, in particular, if the door or door seals are damaged or the door does not close properly. This can be caused by a broken hinge, a worn out seal or distorted/bent casing.

Do not remove the oven from its casing.

This microwave oven is for home use only and is not intended for commercial use.

Replacing the cooktop/night light


When replacing the cooktop/night light, make sure that you are wearing gloves to avoid injury from the heat of the bulb.

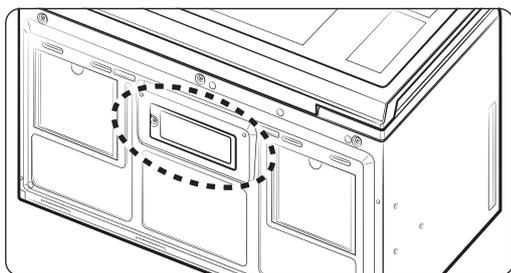

1. Unplug the oven or turn off the power at the main power supply.
2. Remove the screw from the light cover and lower the cover.
3. Disconnect the wire connectors.
4. Remove the screw securing the LED lamp board.
5. Replace the LED lamp board.

Replacing the oven light

When replacing the oven light, make sure that you are wearing gloves to avoid injury from the heat of the bulb.

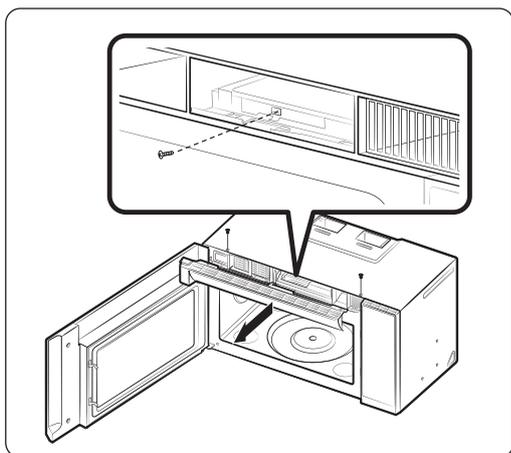

1. Unplug the oven or turn off the power at the main power supply.
2. Open the door.
3. Remove the vent cover mounting screws (2 middle screws).
4. Slide the vent grille to the left, then pull it straight out.
5. Remove the charcoal filter, if present.
6. Remove the screw securing the lamp cover.
7. Remove the bulb by pulling it out gently.
8. Replace the bulb with a 20 watt halogen bulb.
9. Replace the bulb holder.
10. Replace the vent grille and re-insert the 2 screws.
11. Plug the oven in or turn on the power at the main power supply. Reset the clock.

Cleaning and maintaining your microwave oven

Cleaning the grease filter


Your microwave oven has two metal reusable grease filters. The grease filters should be removed and cleaned at least once every four months or as required.

NOTE


Your microwave oven has a filter reminder function. See page **28** for details.

WARNING

To avoid risk of personal injury or property damage, do not operate the oven hood without the filters in place.

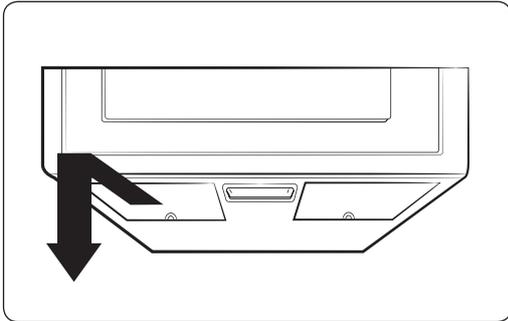

1. To remove the filter, slide it to the left (or right) using the tab.

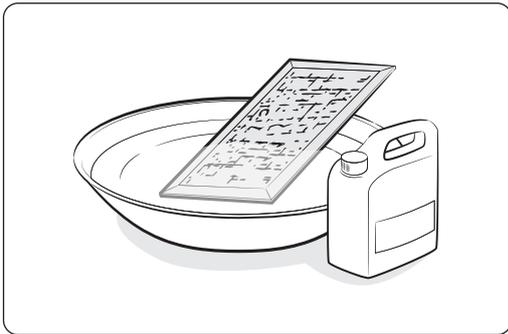

2. Soak the grease filter in hot water and a mild soap. Rinse well and shake to dry. Brushing the filter lightly can remove embedded dirt.



WARNING

Do not use ammonia or put the grease filter in the microwave oven. The aluminum will darken.

3. To re-install the filter, slide it into the frame slot on the left (or right), and then push it upwards and to the right (or left) to lock it.

Replacing the charcoal filter

If your oven is vented to the inside, the charcoal filter should be replaced every 6 to 12 months and more often if necessary. The charcoal filter cannot be cleaned. To order a new charcoal filter, contact the Parts Department at 1-800-627-4368 or your Samsung dealer. You can also order online at www.samsungparts.com

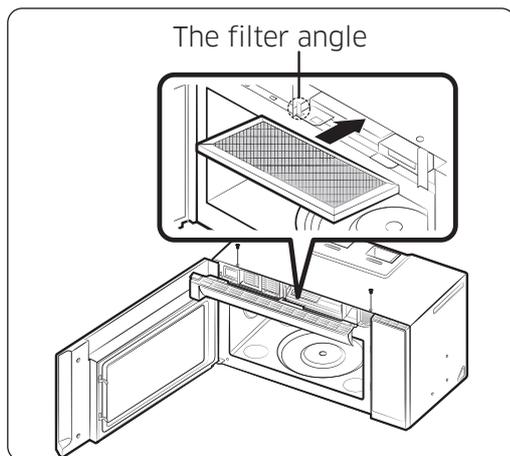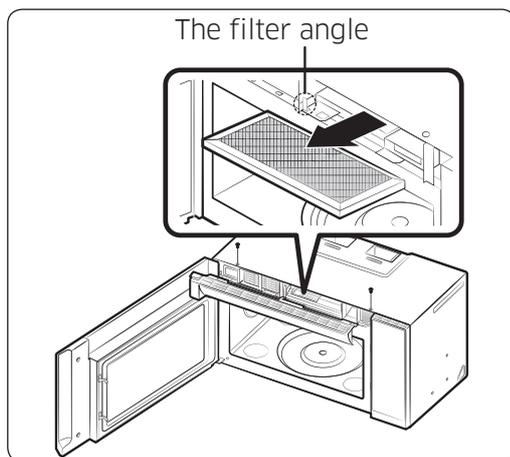

1. Unplug the oven or turn off the power at the main power supply.
2. Open the door.
3. Remove the vent grille mounting screws (2 middle screws).
4. Slide the vent grille to the left, then pull it straight out.
5. Push the hook and remove the old filter.
6. Slide a new charcoal filter into place. The filter should rest at the angle shown.
7. Replace the vent grille and 2 screws and close the door. Plug the oven in or turn on the power at the main power supply. Reset the clock.

Troubleshooting

Check points

If you encounter a problem with your oven, first check the table below and try the recommendations. If a problem persists, or if an information code keeps appearing on the display, contact a local Samsung service center.

| Problem | Cause | Action |
|---|--|---|
| General | | |
| The buttons cannot be touched properly. | Foreign matter may be caught between the buttons. | Remove the foreign matter and try again. |
| | For touch models: Moisture is on the exterior. | Wipe the moisture from the exterior. |
| | Child Lock is activated. | Deactivate Child Lock. |
| The time is not displayed. | Power is not supplied. | Make sure power is supplied. Confirm the microwave is plugged in. Check your fuses or circuit breakers. |
| | The Eco (power-saving) function is set. | Turn off the Eco function. |
| The oven does not work. | Power is not supplied. | Make sure power is supplied. Confirm the microwave is plugged in. Check your fuses or circuit breakers. |
| | The door is open. | Close the door and try again. |
| | The door open safety mechanisms are covered by foreign matter. | Remove the foreign matter and try again. |
| The oven stops while in operation. | The user has opened the door to turn food over. | After turning the food over, touch the START button again to start operation. |

| Problem | Cause | Action |
|--|--|--|
| The power turns off during operation. | The oven has been cooking for an extended period of time. | After the oven has cooked for an extended period of time, let the oven cool. |
| | The cooling fan is not working. | Listen for the sound of the cooling fan. |
| | Trying to operate the oven without food inside. | Put food in the oven. |
| | There is not enough ventilation space around the oven. | There are intake/exhaust outlets on the front and rear of the oven for ventilation. Check the installation guide and make sure that the microwave is far enough away from walls and cabinets for proper ventilation. |
| | Several appliances or devices are plugged into the same outlet. | Unplug all other appliances or devices from the outlet. |
| There is no power to the oven. | Power is not supplied. | Make sure power is supplied. Confirm the microwave is plugged in. Check your fuses or circuit breakers. |
| There is a popping sound during operation. | Cooking food in a sealed container or using a container with a tight lid may cause popping sounds. | Do not cook food in sealed containers or in containers with tight lids. Expanding steam from the cooking food can cause the containers to burst or the lids to pop off. |

Troubleshooting

| Problem | Cause | Action |
|--|--|---|
| The oven exterior gets too hot during operation. | There is not enough ventilation space around the oven. | There are intake/exhaust outlets on the front and rear of the oven for ventilation. Check the installation guide and make sure that the microwave is far enough away from walls and cabinets for proper ventilation. |
| | Objects are on top of the oven. | Remove all objects on the top of the oven. |
| The door cannot be opened properly. | Food residue is stuck between the door and oven interior. | Clean the oven and then open the door. |
| The oven does not heat. | The oven may not work if too much food is being cooked or improper cookware is being used. | To test the oven, put one cup of water in a microwave-safe container, put the container in the oven, and then run the microwave for 1-2 minutes to check whether the water is heated. If the water is heated, reduce the amount of food and start the function again. Use a cooking container with a flat bottom. |
| Heating is weak or slow. | The oven may not work if too much food is being cooked or improper cookware is being used. | To test the oven, put one cup of water in a microwave-safe container, put the container in the oven, and then run the microwave for 1-2 minutes to check whether the water is heated. If the water is heated, reduce the amount of food and start the function again. Use a cooking container with a flat bottom. |

| Problem | Cause | Action |
|--|---|---|
| The warm function does not work. | The oven may not work if too much food is being warmed or improper cookware is being used. | To test the oven, put one cup of water in a microwave-safe container, put the container in the oven, and then run the microwave for 1-2 minutes to check whether the water is heated. If the water is heated, reduce the amount of food and start the function again. Use a cooking container with a flat bottom. |
| The thaw function does not work. | The oven may not work if too much food is being thawed or improper cookware is being used. | To test the oven, put one cup of water in a microwave-safe container, put the container in the oven, and then run the microwave for 1-2 minutes to check whether the water is heated. If the water is heated, reduce the amount of food and start the function again. Use a cooking container with a flat bottom. |
| The interior light is dim or does not turn on. | The door has been left open for a long time. | The interior light may automatically turn off when the Eco function operates. Close and reopen the door or touch the STOP/CLEAR Eco button. |
| | The interior light is covered by foreign matter. | Clean the inside of the oven and check again. |
| A beeping sound occurs during cooking. | If the Auto Cook function is being used, this beeping sound means it's time to flip the food. | After turning over the food, touch the START button again to restart operation. |
| The oven is not level. | The oven is installed on an uneven surface. | Make sure the oven is installed on flat, stable surface. |

Troubleshooting

| Problem | Cause | Action |
|---|---|---|
| There are sparks during cooking. | Metal containers are used during cooking or thawing. | Do not use metal containers. |
| When power is connected, the oven immediately starts to work. | The door is not properly closed. | Close the door and check again. |
| There is electricity coming from the oven. | The power source or power outlet is not properly grounded. | Make sure the power source and power outlet are properly grounded. |
| There is water dripping. | Water or steam may be generated by the cooking or defrosting process, depending on the food. This is not an oven malfunction. | Let the oven cool and then wipe with a dry dish towel. |
| There is steam through a crack in the door. | Water or steam may be generated by the cooking or defrosting process, depending on the food. This is not an oven malfunction. | Let the oven cool and then wipe with a dry dish towel. |
| There is water left in the oven. | Water or steam may be generated by the cooking or defrosting process, depending on the food. This is not an oven malfunction. | Let the oven cool and then wipe with a dry dish towel. |
| The brightness inside the oven varies. | Brightness changes depending on power output changes according to function. | Power output changes during cooking are not malfunctions. This is not an oven malfunction. |
| Cooking is finished, but the cooling fan is still running. | To ventilate the oven, the cooling fan continues to run for about 3 minutes after cooking is complete. | This is not an oven malfunction. |
| Touching the START button operates the oven. | This happens when the oven was not operating. | The microwave oven is designed to start operating when you touch the START button if it was not operating. |

| Problem | Cause | Action |
|---|--|--|
| Turntable | | |
| While turning, the turntable comes out of place or stops turning. | There is no roller ring, or the roller ring is not properly in place. | Install the roller ring and then try again. |
| The turn table drags while turning. | The roller ring is not properly in place, there is too much food, or the container is too large and touches the inside of the microwave. | Adjust the amount of food. Do not use containers that are too large. |
| The turn table rattles while turning and is noisy. | Food residue is stuck to the bottom of the oven. | Remove any food residue stuck to the bottom of the oven. |
| Grill | | |
| Smoke comes out during operation. | During initial operation, smoke may come from the heating elements when you first use the oven. | This is not a malfunction. After you run the oven 2-3 times, it should stop. |
| | Food is on the heating elements. | Let the oven cool and then remove the food from the heating elements. |
| | Food is too close to the grill. | Put the food a suitable distance away while cooking. |
| | Food is not properly prepared and/or arranged. | Make sure food is properly prepared and arranged. |

Troubleshooting

| Problem | Cause | Action |
|--|---|---|
| Oven | | |
| The oven does not heat. | The door is open. | Close the door and try again. |
| Smoke comes out during preheating. | During initial operation, smoke may come from the heating elements when you first use the oven. | This is not a malfunction. After you run the oven 2-3 times, it should stop. |
| | Food is on the heating elements. | Let the oven cool and then remove the food from the heating elements. |
| There is a burning smell or a burnt plastic smell when using the oven. | Plastic or non-heat resistant cookware is used. | Use glass cookware suitable for high temperatures. |
| There is a bad smell coming from inside the oven. | Food residue or plastic has melted and stuck to the interior. | Use the steam function and then wipe the interior of the microwave with a dry cloth. You can put a measuring cup containing a cup of water and a lemon slice inside and run the oven to remove the odor more quickly. |
| The oven does not cook properly. | The oven door is frequently opened during cooking. | Do not open the door frequently unless you are cooking things that need to be turned. If you open the door often, the interior temperature will be lowered and this may affect the results of your cooking. |
| | The oven controls are not correctly set. | Set the oven controls correctly and try again. |
| | The grill or other accessories are not correctly inserted. | Insert the accessories correctly. |
| | The wrong type or size of cookware is used. | Reset the oven controls or use suitable cookware with flat bottoms. |

Information codes

If the oven fails to operate, you may see an information code on the display. Check the table below for the code, and then follow the directions.

| Code | Description | Action |
|------|---|--|
| C-20 | The temperature sensor read the temperature incorrectly. | Touch the STOP/CLEAR Eco button and operate again. If it appears again, turn off the microwave oven, let it sit for more than 30 seconds, and then try setting again. If this code re-appears, call your local SAMSUNG Customer Care Center. |
| C-21 | Temperature sensor detects a higher temperature than the set temperature. | Turn off the microwave oven and let it cool, then try the setting again. If this code re-appears, call your local SAMSUNG Customer Care Center. |
| C-F0 | The microwave has sensed an internal communications failure. | Unplug the power cord of the oven, and contact a local SAMSUNG Customer Care Center. |
| C-A1 | The oven has failed to sense the opening or closing of the damper for 1 minute. | |
| C-F1 | Only occurs when EEPROM Read or Write is not working. | |
| C-D0 | Control buttons are touched over 10 seconds. | Clean the keys and check if there is water on the surface around key. If it appears again, turn off the microwave oven, let it sit for more than 30 seconds, and then try setting again. If this code re-appears, call your local SAMSUNG Customer Care Center. |
| C-F2 | There is a button malfunction. | Stop the oven and then try again. If this code re-appears, call your local SAMSUNG Customer Care Center. |

Appendix

Specifications

| Model | MC17T8000C* |
|---------------------------------|---|
| Oven Cavity | 1.7 cu ft |
| Controls | 10 power levels, including Defrost |
| Timer | 99 minutes, 99 seconds |
| Power Source | 120 VAC, 60 Hz |
| Power Consumption | 1700 Watt Microwave / 1750 Watt Heater |
| Microwave Power Output | 950 Watts |
| Cook Top Light | LED lamp (2 EA) |
| Oven Light | 20 Watt halogen lamp |
| Oven Cavity Dimensions (inches) | 20 ⁹ / ₆₄ "(W) x 10 ⁹ / ₃₂ "(H) x 14"(D) |
| Outside Dimensions (inches) | 29 ⁷ / ₈ " (W) x 16 ¹⁵ / ₁₆ " (H) x 16 ¹⁹ / ₃₂ "(D) |
| Shipping Dimensions (inches) | 33 ¹¹ / ₃₂ "(W) x 20 ²⁵ / ₃₂ " (H) x 19 ³ / ₈ "(D) |
| Net/Shipping Weight | 75.2 lbs / 82.7 lbs (34.10 kg / 37.52 kg) |

Warranty

Samsung over-the-range (otr) microwave oven

Limited warranty to original purchaser

This SAMSUNG brand product, as supplied and distributed by Samsung Electronics America, Inc. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

ONE (1) YEAR PARTS AND LABOR, TEN (10) YEARS PARTS WARRANTY FOR MAGNETRON

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/ or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

- A Dented, Scratched, or Broken Door, Handle, Out-Panel, or Control Panel
- A Broken or missing Tray, Guide Roller, Coupler, Filter, or Wire Rack

User Replaceable Parts may be sent to the customer for unit repair. If necessary, a Service Engineer can be dispatched to perform service.

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center.

SAMSUNG will repair this product or replace it if cannot repair it, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

In-home service will be provided during the warranty labor period subject to availability within the contiguous United States. In-home service is not available in all areas. To receive in-home service, the product must be unobstructed and accessible to service personnel. If during in-home service repair can not be completed, it may be necessary to remove, repair and return the product. If in-home service is unavailable, SAMSUNG may elect, at our option, to provide for transportation of our choice to and from a SAMSUNG authorized service center. Otherwise, transportation to and from the SAMSUNG authorized service center is the responsibility of the purchaser.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the

Warranty

following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by SAMSUNG which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; problems caused by pest infestations, and overheating or overcooking by user; glass tray or turntable; reduced magnetron power output related to normal aging. SAMSUNG does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please contact SAMSUNG at:

1-800-SAMSUNG (726-7864) or www.samsung.com/us/support

Memo



Scan this with your smartphone

Scan the QR code* or visit www.samsung.com/spsn to view our helpful How-to Videos and Live Shows

*Requires reader to be installed on your smartphone

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

QUESTIONS OR COMMENTS?

| COUNTRY | CALL | OR VISIT US ONLINE AT |
|-------------------------------|-----------------------------|--|
| U.S.A Consumer Electronics | 1-800-SAMSUNG (726-7864) | www.samsung.com/us/support |



MC17T8000C*_AA-01