

Programming Brain Control Module

Step 1:


- Remove Bunk Lift Control Unit from Wall

Step 2:

- Remove both of the

“TRAVEL PINS”

Failure to remove pins will result in Failure of Bunk Lift System!!!

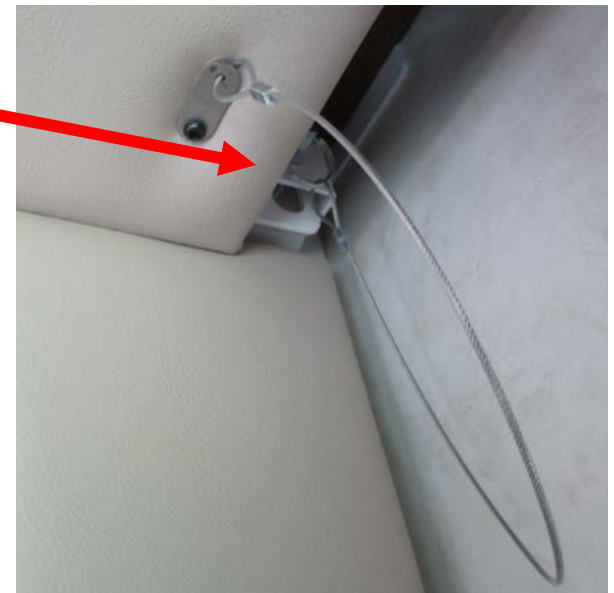


Programming Brain Control Module

Step 3:

Press & Hold the “Set / Stop” button located on the Rear of the Control Unit. Hold the button until the Green Light Flashes intermittently and the Red Light becomes solid.

Step 4:

Then release the “Set / Stop” Button

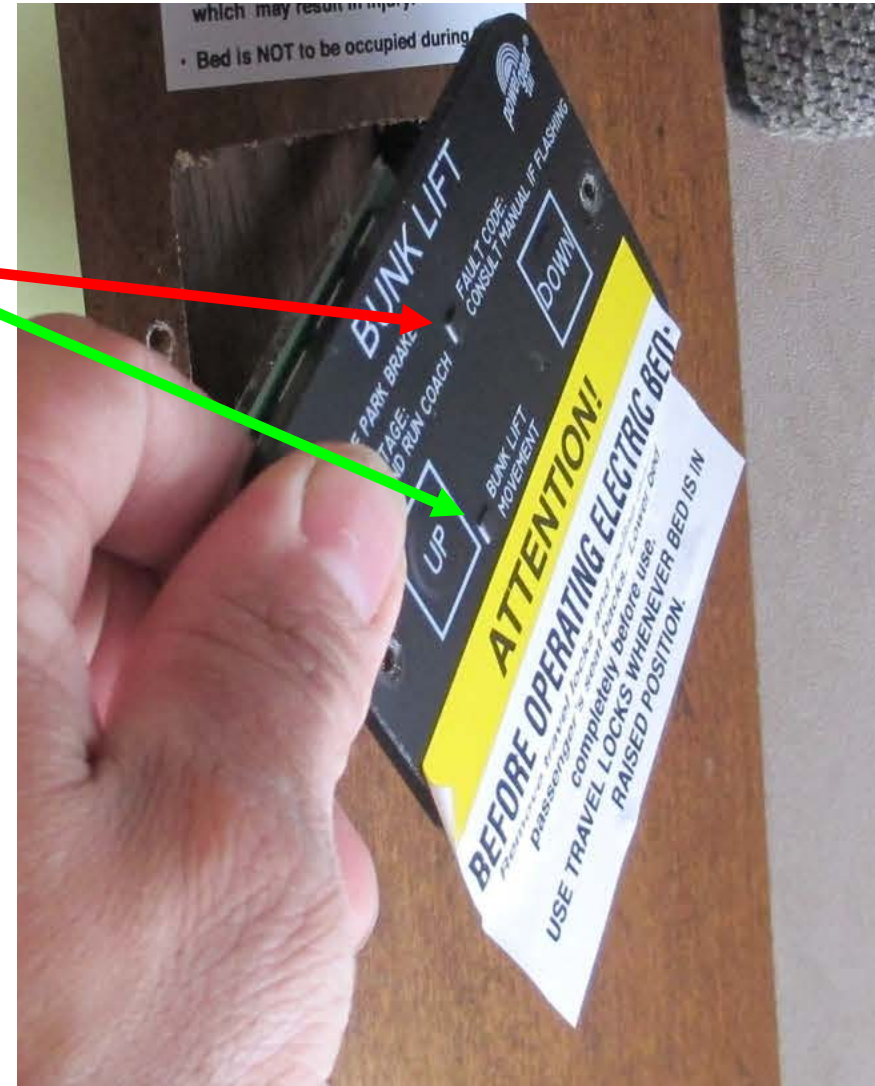

Programming Brain Control Module

Step 5:

Press & Hold down “**Motor 1**” & “**Motor 2**” buttons simultaneously and Run Bunk all the way to Ceiling using the “UP” Button located on the Front Side of the Control Unit

Note: There may be very little travel as the bunk was in the “UP” position to start


Step 6:

Release “**Motor 1**” & “**Motor 2**” Buttons

Step 7:

Press “**Set / Stop**” Button one time

You should now see a **Solid Green Light** and a **Flashing Red Light** on the Front side of the control panel.

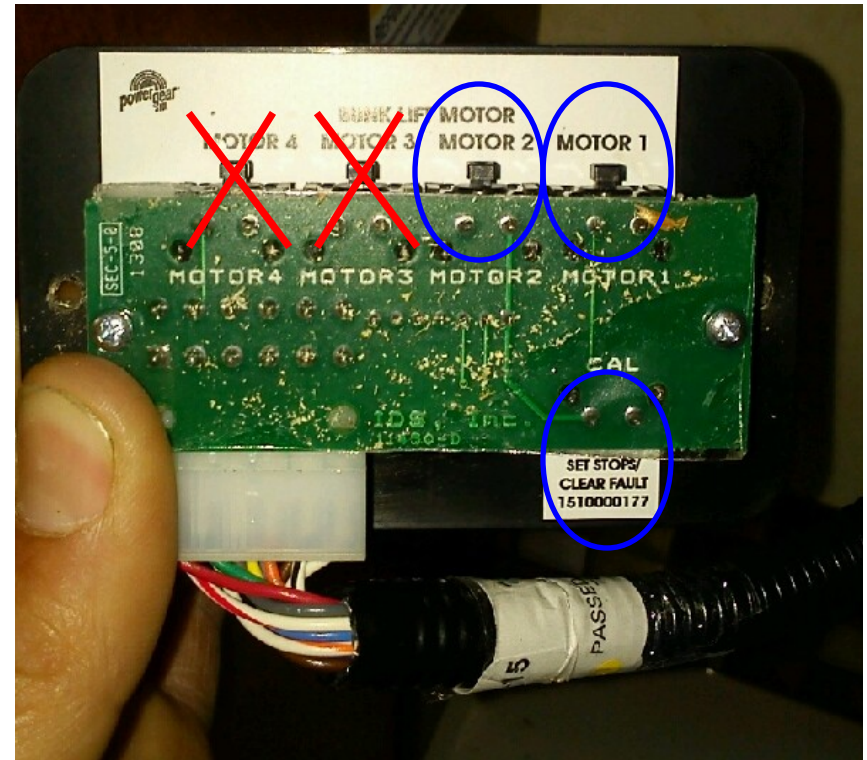

Note: Button for Motor 3 & Motor 4 will not be used!

Programming Brain Control Module

Step 8:

Press & Hold down Motor 1 & 2 buttons simultaneously

Step 9:

Run Bunk All the way to Bottom

Step 10:

Tap the "UP" Button Quickly 1 or 2 times to release pressure on the Motor/Rail Assemblies.

Step 11:

Release Motor 1 & 2 Buttons

Step 12:

Press "Set / Stop" Button"

You should now see "5" very quick simultaneous flashes from the RED & GREEN lights.

This series of Flashing Lights indicates that the new programming was accepted!

Step 13:

Re-Install Control Unit & Run Bunk Up & Down

