


Monitor Operation

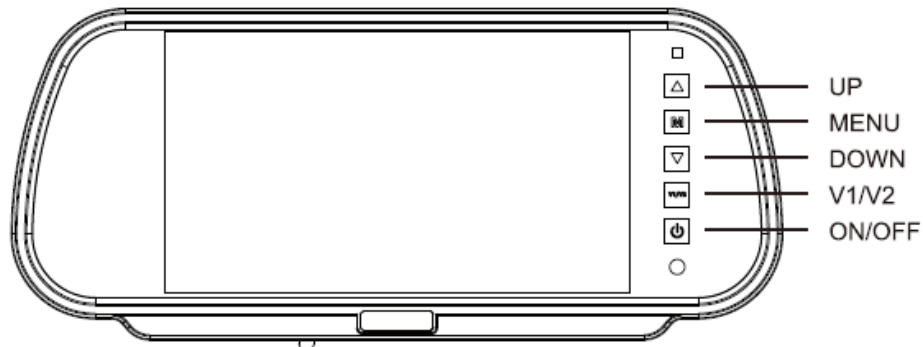

- To turn on the monitor, press "ON" button.
- To adjust brightness, press "MENU" 1 time and use arrows
- To adjust contrast, press "MENU" 2 times and use arrows
- To adjust saturation, press "MENU" 3 times and use arrows
- To adjust sharpness, press "MENU" 4 times and use arrows
- To adjust volume, press "MENU" 5 times and use arrows
- To change language, press "MENU" 6 times and use arrows
- To adjust distance grid, press "MENU" 8 times and use arrows
- To adjust grid position, press "MENU" 9 times and use arrows
- To activate day/night option, press "MENU" 10 times and use arrows
- To reset your system, press "MENU" 11 times and use arrows
- To view images on other cameras, press "V1/V2"
1 time for camera one, 2 times for camera two and 3 times for camera three.